



## User's Guide

All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, without the prior written permission of Seiko Epson Corporation. The information contained herein is designed only for use with this Epson product. Epson is not responsible for any use of this information as applied to other products.

Neither Seiko Epson Corporation nor its affiliates shall be liable to the purchaser of this product or third parties for damages, losses, costs, or expenses incurred by the purchaser or third parties as a result of accident, misuse, or abuse of this product or unauthorized modifications, repairs, or alterations to this product, or (excluding the U.S.) failure to strictly comply with Seiko Epson Corporation's operating and maintenance instructions.

Seiko Epson Corporation shall not be liable for any damages or problems arising from the use of any options or any consumable products other than those designated as Original Epson Products or Epson Approved Products by Seiko Epson Corporation.

Seiko Epson Corporation shall not be held liable for any damage resulting from electromagnetic interference that occurs from the use of any interface cables other than those designated as Epson Approved Products by Seiko Epson Corporation.

## **Trademarks**

Epson, Epson Stylus, Photo Fine, and Multimedia Storage Viewer are trademarks, and Epson Exceed Your Vision is a registered logomark of Seiko Epson Corporation.

QuickTime and the QuickTime logo are trademarks or registered trademarks of Apple, Inc., used under license.

CompactFlash is a registered trademark of SanDisk Corporation.

SD is a trademark of SD Card.

This product is protected by certain intellectual property rights of Microsoft. Use or distribution of such technology outside of this product is prohibited without a license from Microsoft.

This product is licensed under the MPEG-4 Visual Patent Portfolio License for the personal and non-commercial use of a consumer for (i) encoding video in compliance with the MPEG-4 visual standard (MPEG-4 Video) and/or (ii) decoding MPEG-4 Video that was encoded by a consumer engaged in a personal and non-commercial activity and/or was obtained from a video provider licensed by MPEG LA to provide MPEG-4 Video. No license is granted or shall be implied for any other use. Additional information including that relating to promotional, internal and commercial uses and licensing may be obtained from MPEG LA, L.L.C. (See [www.mpegla.com](http://www.mpegla.com))

This product is licensed under the AVC Patent Portfolio License for the personal and non-commercial use of a consumer to (i) encode video in compliance with the AVC standard (AVC Video) and/or (ii) decode AVC Video that was encoded by a consumer engaged in a personal and non-commercial activity and/or was obtained from a video provider licensed to provide AVC Video. No license is granted or shall be implied for any other use. Additional information may be obtained from MPEG LA, L.L.C. (See [www.mpegla.com](http://www.mpegla.com))

MPEG Layer-3 audio coding technology is licensed from Fraunhofer IIS and Thomson.

**General Notice:** Other product names used herein are for identification purposes only and may be trademarks of their respective owners. Epson disclaims any and all rights in those marks.

This information is subject to change without notice.

© 2008 Epson America, Inc. 4/08

NPD 3302-00



# Contents

## ***Introduction***

---

Features . . . . .	8
Using the Documentation . . . . .	8

## ***Chapter 1 Getting Started***

---

Parts . . . . .	9
Lights and Buttons . . . . .	10
Installing the Battery . . . . .	11
Charging the Battery . . . . .	11
Removing the Battery . . . . .	12
Turning On the Power . . . . .	13
Setting the Language, Date, and Time . . . . .	13
Locking the Buttons . . . . .	14
Using the Home Screen . . . . .	15
Turning Off the Power . . . . .	16
Saving Power . . . . .	16

## ***Chapter 2 Using Memory Cards***

---

Inserting and Removing Memory Cards . . . . .	17
Using the CF Card Slot . . . . .	18
Using the SD Card Slot . . . . .	19
Copying Files From a Memory Card . . . . .	20
Copying All Files . . . . .	20
Copying Selected Files . . . . .	21
Creating a New Folder and Copying Files . . . . .	22

## ***Chapter 3 Viewing Photos and Videos***

---

Using the Viewer Screen . . . . .	24
Changing the Display . . . . .	25
Using the Pop-up Menu . . . . .	25
Supported Image Formats . . . . .	27
Viewing Images . . . . .	27
Zooming an Image . . . . .	28
Displaying Image Information . . . . .	29
Displaying a Wider Color Gamut . . . . .	30
Displaying Images as a Slide Show . . . . .	30
Rotating an Image . . . . .	31



Viewing Videos . . . . .	32
Supported Video Formats . . . . .	32
Playing Videos . . . . .	33
Setting the Display Mode. . . . .	34
Viewing Files on a TV. . . . .	34
Changing the File View Mode . . . . .	35

## ***Chapter 4   Playing Music***

---

Copying Music From Your Computer . . . . .	36
Supported Audio Formats . . . . .	38
Playing Audio Files . . . . .	38
Setting Repeat and Shuffle Options. . . . .	40
Creating a Playlist . . . . .	40
Creating a Playlist on the Viewer . . . . .	41
Adding Tracks to an Existing Playlist . . . . .	42
Removing Tracks From a Playlist . . . . .	42
Changing the Order of a Playlist . . . . .	42
Using the Equalizer . . . . .	43
Deleting Audio Files From the Viewer . . . . .	43

## ***Chapter 5   Managing Files***

---

Copying Files To and From Your Computer. . . . .	44
Backing Up Files to Your Computer. . . . .	45
Copying Files From Your Computer to the Viewer . .	46
Disconnecting the Viewer From Your Computer . . .	46
Setting Backup and Conversion Preferences . . . . .	47
Using the Viewer With USB Devices . . . . .	48
Connecting a USB Device . . . . .	49
Copying Files to the Viewer . . . . .	49
Copying Files to a USB Device. . . . .	51
Setting Folders as Private. . . . .	52
Renaming a Folder . . . . .	54
Copying and Moving Files to a Folder. . . . .	54
Deleting Files and Folders . . . . .	55
Locking Files and Folders . . . . .	57
Setting a Folder Icon or Home Screen Wallpaper . . . . .	58
Rating Photos . . . . .	58
Selecting a Screen Saver . . . . .	58
Monitoring the Color of Images . . . . .	58

## **Chapter 6 Printing**

---

Connecting the Viewer to a Printer . . . . .	60
Selecting a Photo . . . . .	61
Retouching a Photo . . . . .	62
Cropping a Photo . . . . .	63
Selecting Layout Settings . . . . .	65
Printing Your Photos . . . . .	66
Making Copies of a Print . . . . .	66
Printing Multiple Photos . . . . .	67
Printing a Contact Sheet . . . . .	67
Creating a Watermark . . . . .	68
Creating a Watermark with Text . . . . .	68
Using an Image as a Watermark . . . . .	69

## **Chapter 7 Customizing Settings**

---

Device Information . . . . .	70
Power Save . . . . .	71
View Mode . . . . .	71
Backup Settings . . . . .	72
Movie Setting . . . . .	72
Slide Show . . . . .	72
Sound . . . . .	73

Watermark Settings . . . . .	73
LCD Settings . . . . .	73
Date and Time . . . . .	73
Language . . . . .	73

## **Chapter 8 Maintenance and Troubleshooting**

---

Cleaning the Viewer . . . . .	74
Error Messages . . . . .	74
Problems and Solutions . . . . .	75
Power Problems . . . . .	75
File Viewing Problems . . . . .	76
File Operation Problems . . . . .	77
Printing Problems . . . . .	78
Updating the Firmware and Printer Driver . . . . .	78
Uninstalling Software . . . . .	78
Windows . . . . .	78
Macintosh . . . . .	79
Resetting the Viewer . . . . .	79
Replacing the Battery . . . . .	80
Where To Get Help . . . . .	80
Internet Support . . . . .	80
Speak to a Support Representative . . . . .	80

## ***Appendix A Notices and Specifications***

---

System Requirements . . . . .	81
Windows System Requirements . . . . .	81
Macintosh System Requirements . . . . .	81
Safety Instructions. . . . .	82
Standards and Approvals . . . . .	87
Specifications . . . . .	88

## ***Index***

---

# Introduction

With the Epson® P-6000 Multimedia Storage Viewer™, you can enjoy photos, videos, and music wherever you go. Your images are displayed on Epson's exclusive 4-inch Photo Fine® Premia LCD in brilliant color and detail.

## Features

- Large 4-inch LCD with true Adobe® RGB color gamut
- Support for JPEG and RAW files (including zoom)
- Support for MP3 and AAC audio, with music playlists
- Support for MPEG4 and Motion JPEG video
- 80GB hard drive
- Two slots for CompactFlash® and SD™ memory cards
- Hi-speed USB 2.0 interface for PC or Macintosh®
- Software for convenient file conversion and transfer
- Direct printing to PictBridge™ printers
- Lithium-ion battery and AC adapter
- Video output to display pictures on a TV or projector

## Using the Documentation

This guide provides information and instructions for all the viewer features, including troubleshooting tips.

Make sure you read and follow all the “Safety Instructions” on page 82. Please follow these guidelines:

### **Warning:**

Must be followed carefully to avoid bodily injury.

### **Caution:**

Must be observed to avoid damage to your equipment.

### **Note:**

Contains important information and useful tips on the operation of your product.



If you need assistance using your viewer, see “Where To Get Help” on page 80.

Your package also includes a *P-6000/P-7000 Basics Guide*. Keep it with the viewer for handy reference.


# Chapter 1

## Getting Started

### Parts

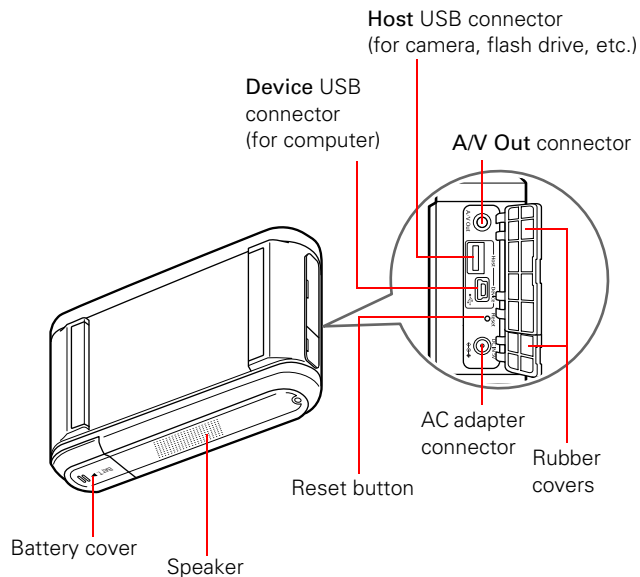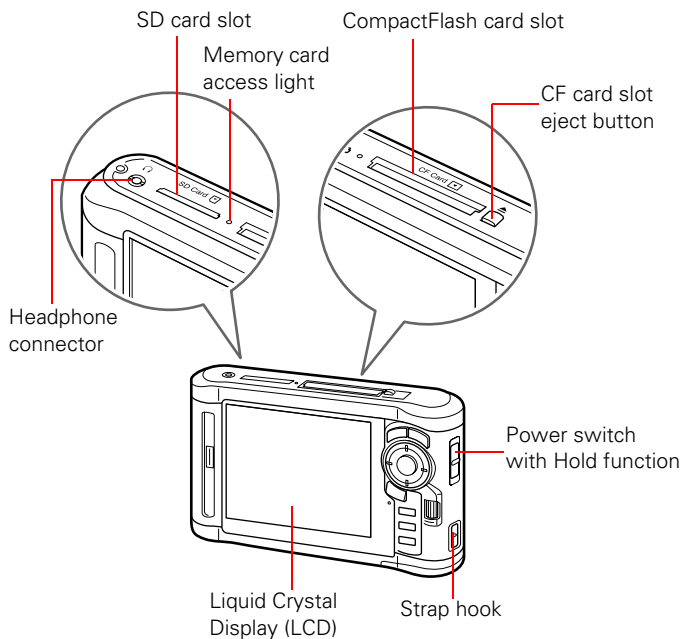


# Lights and Buttons

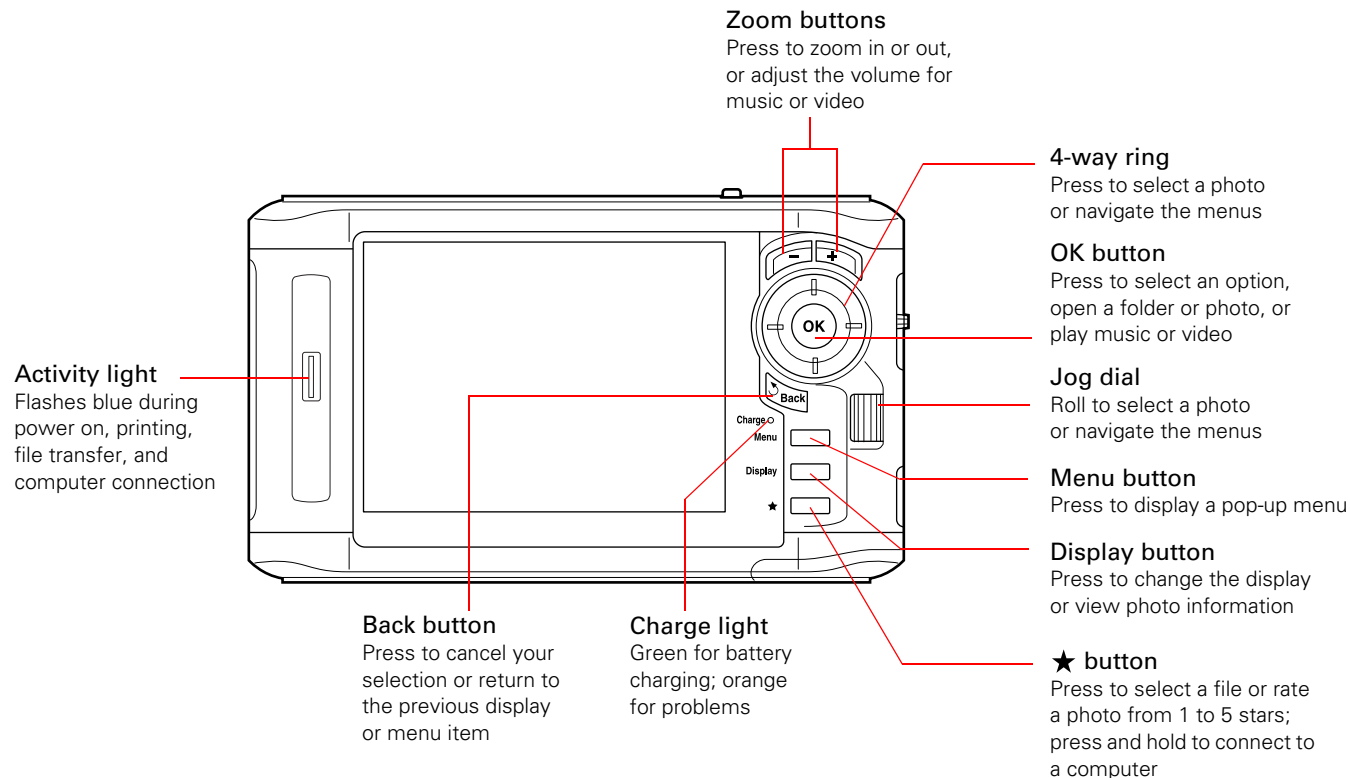


## Installing the Battery

The viewer comes with a lithium-ion battery.


- 1 Slide the battery cover to the right to open it.

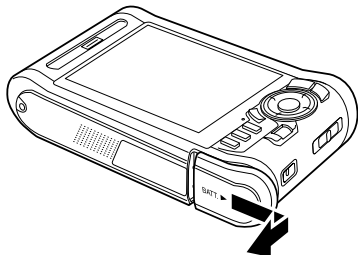

- 2 Insert the battery into the compartment in the direction of the arrow on the battery.

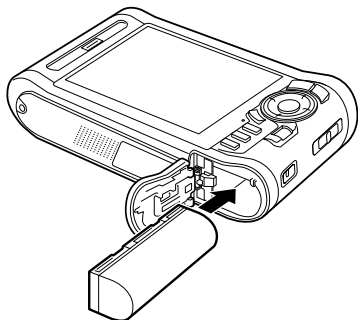

- 3 Close the battery cover and slide it to the left until it clicks.

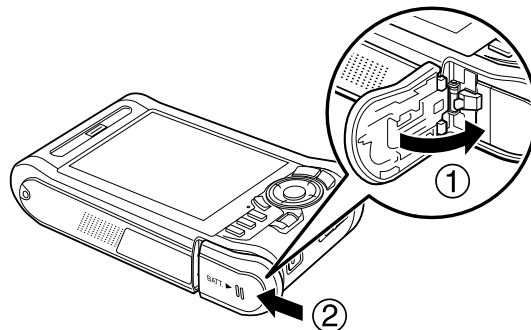


## Charging the Battery

After installing the battery, you need to charge it using the AC adapter. It takes about 3.5 hours to fully charge the battery when the viewer is off, and longer when the viewer is on.

The **Charge** light is green while the battery is being charged. When the battery is fully charged, the light turns off.



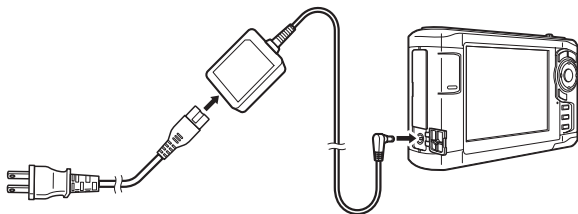

To charge the battery, connect the AC adapter as shown below. Connect the other end to the power cord and plug it into an electrical outlet.



**Caution:**

Do not connect the AC adapter when the battery is not installed; this can damage the viewer. Turn off the viewer before disconnecting the AC adapter.

The battery status is displayed in the top right corner of the LCD screen when the viewer is on.

	Battery is fully charged.
	Battery power is about half full.
	Battery power is low.
	Battery is charging.

**Note:**

The battery may become hot when the viewer is operated during charging. Charging will stop until the battery cools down.

## Removing the Battery

If you plan to store the viewer for an extended period of time, you should remove the battery.


- 1 Make sure the viewer is turned off (see page 16).

**Caution:**

Remove the AC adapter if it is connected to the viewer.


Never remove the battery while the viewer is turned on. Doing so may cause files to be lost or damaged.

- 2 Open the battery cover.
- 3 Slide the battery release lever to the left. The battery pops out.

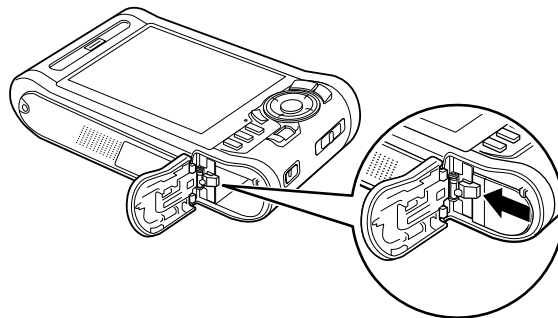



- 4 Pull out the battery. Then close the battery cover.

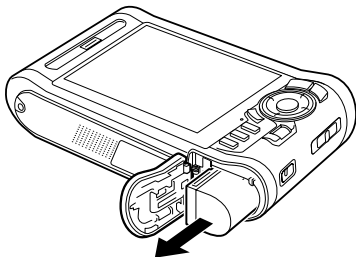


**Note:**

If you remove the battery, the date and time settings will be erased after about one day. The next time you turn on the viewer, the date and time setting screen will be displayed.

## Turning On the Power

Slide the power switch down as shown below, then release it. The activity light flashes for a moment then turns off.

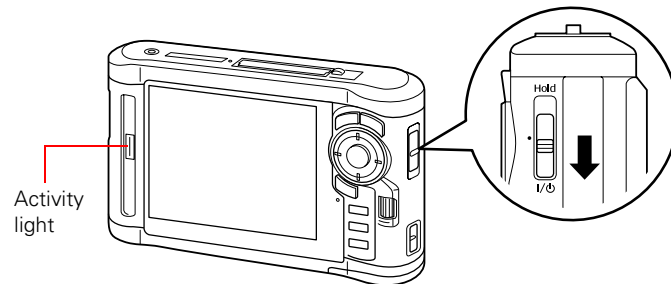

## Setting the Language, Date, and Time


The first time you turn on the viewer, you see the Language setting screen:



**Note:**

If you see the Home screen instead (as shown in “Using the Home Screen” on page 15), the language has already been selected. To change it or check the date and time, select **Settings** on the Home screen. Then follow the instructions in “Date and Time” or “Language” on page 73.

- 1 Press **OK** to select **English**. You see a message about setting the date.
- 2 Press **OK**. You see the Date and Time screen:

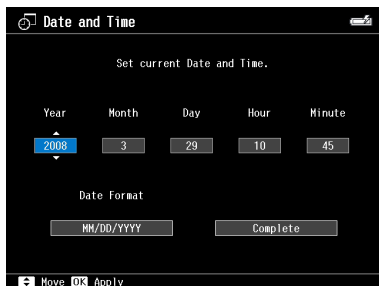

- 3 Press right or left on the 4-way ring to highlight a setting to change.
- 4 Press up or down on the 4-way ring to change the setting (such as the year).
- 5 After setting the date, set the date format.

- 6 When you finish, highlight **Complete** and press **OK**. You see the Home screen. See page 15 for details.


**Note:**

If you remove the battery, the date and time settings will be erased after about one day. The next time you turn on the viewer, the date and time setting screen will be displayed.

## Locking the Buttons

You can lock the buttons on the viewer. This allows you to place the viewer in a purse or backpack and use it with headphones without accidentally pressing the buttons.


To lock the buttons, slide the power switch to **Hold**.

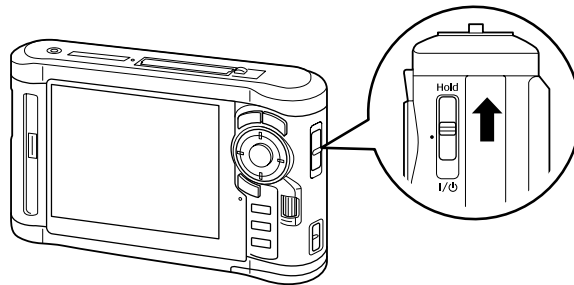

To unlock the buttons, slide the power switch back to the middle position.

## Using the Home Screen

Whenever you turn on the viewer, the Home screen appears. All operations can be started from this screen.

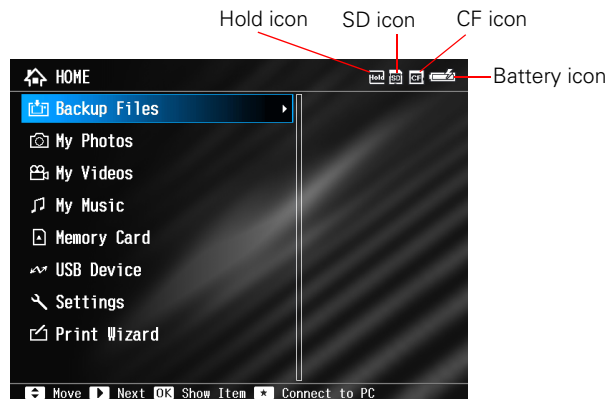


The following table summarizes the Home screen.

Icon	Function
Battery icon	Indicates the remaining charge in the battery. See “Charging the Battery” (page 11).
CF icon	Indicates that a memory card is inserted in the CompactFlash slot.
SD icon	Indicates that a memory card is inserted in the SD slot.

Icon	Function
Hold icon	Indicates that the buttons are locked. See “Locking the Buttons” (page 14).
Backup Files	View folders and files backed up from memory cards or USB devices.
My Photos	View folders and files that you have copied into the Photos folder. See “Viewing Images” (page 27).
My Videos	View folders and play videos that you have copied into the Videos folder. See “Viewing Videos” (page 32).
My Music	Listen to music copied from your computer. See “Playing Audio Files” (page 38).
Memory Card	View files on memory cards or copy the files to the viewer. See “Copying Files From a Memory Card” (page 20).
USB Device	Copy files to or from a USB device. See “Using the Viewer With USB Devices” (page 48).
Settings	Check and adjust viewer settings. See “Customizing Settings” (page 70).
Print Wizard	Edit and print photos you have copied to the viewer. See “Printing” (page 60).

## Turning Off the Power

Before you turn off the viewer, make sure the memory card access light is off. Then slide the power switch as shown below, and hold it down for a few seconds until the activity light flashes and the viewer turns off.

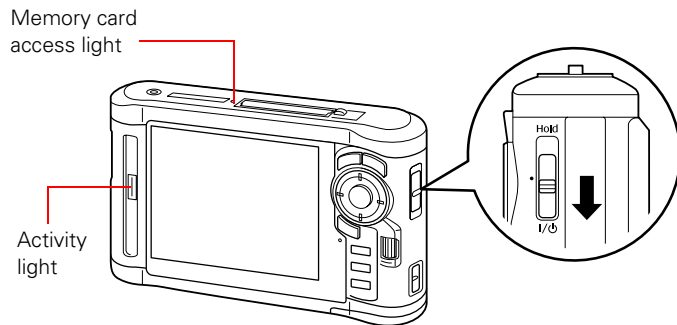

## Saving Power

When you are not using the viewer, it goes into one of the power-saving modes listed below. You can adjust the timing for all of the power-saving modes; see “Power Save” on page 71 for more information.

- The LCD screen turns dark after one minute of inactivity. Press any button to turn it on.
- The LCD screen turns off after five minutes of inactivity. Press any button to turn it on.
- The viewer turns off automatically after 10 minutes of inactivity. Slide down the power switch to turn it back on.

When the AC adapter is connected, the viewer plays a screen saver after three minutes of inactivity instead of turning off.

To customize the screen saver, see “Selecting a Screen Saver” on page 58.

## Chapter 2

# Using Memory Cards

The viewer has two memory card slots: one for CompactFlash or Microdrive™ cards, and one for SD (Secure Digital) and MultiMediaCard cards.

This chapter explains how to insert and remove memory cards and how to display and copy files.

### Inserting and Removing Memory Cards

The viewer supports the following types of memory cards:

- CompactFlash (Type2 and 3.3V)
- Microdrive
- Secure Digital (up to 2GB)
- SDHC (up to 32GB)
- MultiMediaCard
- MMCplus (up to 4GB)

With a CompactFlash adapter, you can use the memory cards listed below in the **CF Card** slot:

- miniSD™ Card
- Memory Stick™
- Memory Stick Duo™
- Memory Stick PRO™
- Memory Stick PRO Duo™
- xD-Picture Card™
- SmartMedia Card
- RS-MMC Card

#### Caution:

Make sure you follow all instructions included with your memory card.

Never remove a memory card, or shake or drop the viewer while the memory card access light is flashing. Doing so may cause files to be lost or damaged.

Do not put labels or stickers on memory cards. The sticker may peel off, preventing the card from being ejected and damaging the viewer.


Avoid using or storing cards in direct sunlight, or in places that are extremely hot, humid, or dusty.

## Using the CF Card Slot

You can use Type2 and 3.3V CompactFlash cards or Microdrive cards in the **CF Card** slot. If you have a CompactFlash adapter, you can also use other types of cards, as described in “Inserting and Removing Memory Cards” on page 17.

Insert the memory card into the slot with the label facing forward. Then push the memory card all the way into the slot.

If you are using a CompactFlash adapter, put the card into the adapter and insert the adapter into the slot.

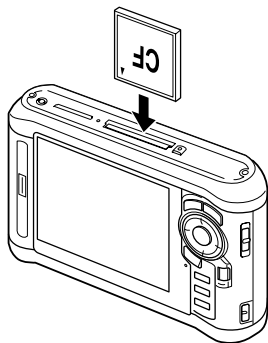


### Caution:

Make sure you insert memory cards in the correct orientation. Otherwise, the card and viewer may be damaged.

To remove a card from the CF Card slot, first make sure the memory card access light is off. Then press the eject button and pull out the card.

If the button is not sticking out, press it once to pop it out, then press it again to eject the card.

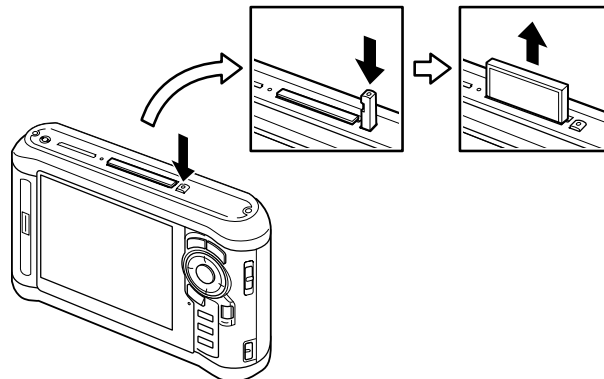


### Note:

If you are using a CompactFlash adapter, remove the adapter from the viewer; do not remove only the memory card.

## Using the SD Card Slot

You can use Secure Digital, SDHC, MultiMediaCard, or MMCplus cards in the **SD Card** slot.


Insert the memory card into the slot as shown below. Then push the memory card all the way into the slot.

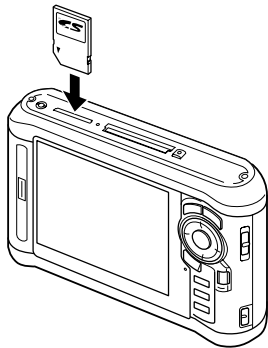

### Caution:

Make sure you insert memory cards in the correct orientation. Otherwise, the card and viewer may be damaged.

To remove a card from the **SD Card** slot, first make sure the memory card access light is off. Then press in on the top of the card.

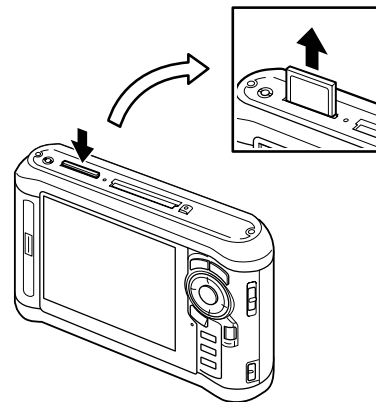

When the card pops up, pull it out of the slot.

## Copying Files From a Memory Card

After you insert a memory card, you can browse the files and decide what you want to do with them, or simply copy all the files on the card to the viewer.


### Note:

If the battery power is low, copying may not be completed. Use the AC adapter when copying files.

## Copying All Files

- 1 Insert a memory card.

If the Memory Card menu doesn't open automatically, select **Memory Card** on the Home screen, then press **OK**. You see the following menu:

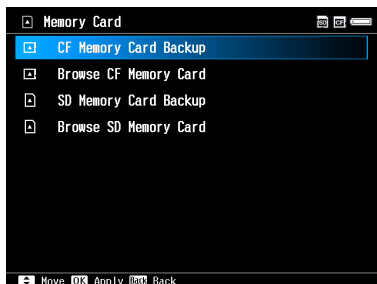

- 2 Select **CF Memory Card Backup** or **SD Memory Card Backup**. Then press **OK**.

The files are copied to a folder that is automatically created in the Backup Files folder on the viewer. The folder is named according to the date and the date format you selected, for example, **03292008M.001**. Folders are numbered in the order they are copied.

If you want to change the name, see “Creating a New Folder and Copying Files” on page 22.

When the backup is complete, you see thumbnail images of the copied photos.

### Note:

The files on the memory card can be automatically deleted after copying is complete. For details, see “Backup Settings” on page 72.

To check the copied files, select **Backup Files** on the Home screen, then press **OK**. Press **OK** again to select the folder you just copied and display the files.




## Copying Selected Files

You can copy selected files directly from a memory card to a new or existing folder in My Photos or My Videos.

- 1 Insert a memory card.


If the Memory Card menu doesn't open automatically, select **Memory Card** on the Home screen, then press **OK**.

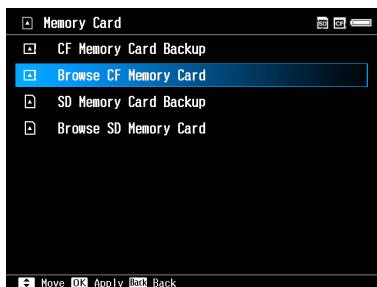

- 2 In the Memory Card menu, select **Browse CF Memory Card** or **Browse SD Memory Card**.
- 3 Press **OK**. The files on the memory card appear in thumbnail view.
- 4 Press the **Menu** button to display the pop-up menu.
- 5 Select **Copy/Move**, then press **OK**.

- 6 Select **Select and Copy Files**, then press **OK**.

Checkboxes appear on each thumbnail image.

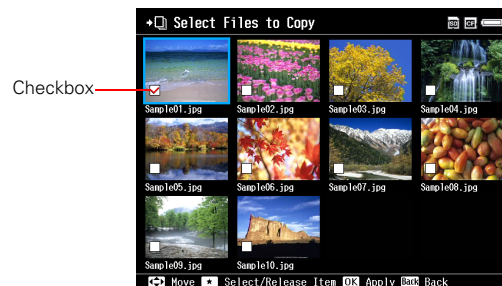

### Note:

To copy a single file, select the file you want to copy, press **Menu**, and select **Copy/Move**. Select **Copy this File**, then continue with step 8.

- 7 Use the 4-way ring or jog dial to highlight each file you want to copy, then press the **★** button to select it. The selected items are displayed with red ✓ check marks.

### Note:

To select all files and folders, press **Menu** and choose **Select All**.

- 8 When you're finished selecting photos, press **OK**.

**9** Use the 4-way ring to highlight **My Photos** or **My Videos**, then press right on the 4-way ring to select it.

**10** Do one of the following:

- To copy the items into the selected folder, press **OK**. Your items are copied.
- To copy the items into a new subfolder, highlight **Create New Folder** and press **OK**. Then see the next section to enter a name for the new folder and copy the items.

**Note:**

It's easier to manage your files if you copy them into a folder you've named, instead of placing them in the root of a main folder (such as **My Photos** or **My Videos**).

## Creating a New Folder and Copying Files

You can create a folder and copy files to it from a memory card, USB device, or from Backup Files.

**1** To copy items to a new folder, follow the steps in the previous section.

When you select **Create New Folder** and press **OK**, the on-screen keyboard appears with the current date entered as the default name for the folder.



You can either keep the name or enter a new one.

**2** To keep the current name, highlight **Done** and press **OK**. Your files are copied to the new folder.

- 3** To enter a new name, use the **Back** (backspace) button to clear the current name. Then enter a new name using the 4-way ring or jog dial (highlight each character and press **OK** to enter it).
- To move the cursor forward or backward, press the **+** (plus) or **-** (minus) buttons.
  - To delete the last letter input, press **Back**.
  - To enter a space, press **Menu**.
  - To switch between upper- and lowercase, press **Display**.
  - To cancel the name, highlight **Cancel** and press **OK**.
- 4** After entering the name, highlight **Done** and press **OK**. Your files are copied to the new folder.



# Chapter 3

## Viewing Photos and Videos


After you have copied files from a memory card, you can view or play them in various ways. This chapter explains how to view photos and video files on your viewer and on a TV or projector.

### Using the Viewer Screen

The following illustrations identify the icons that appear on the screen:

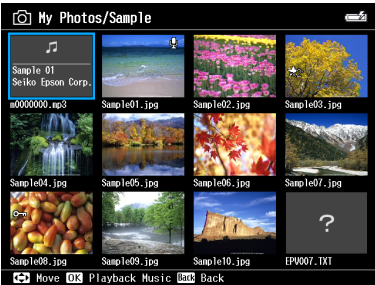
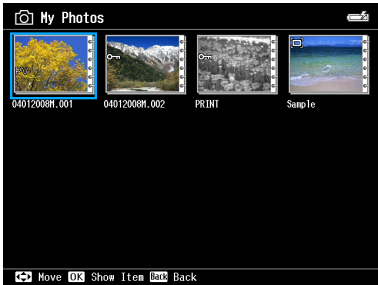


	Indicates a locked file or folder
	Indicates an unsupported file
	Indicates a file with rating information
	Indicates a file with a sound memo
	Indicates a music file
	Indicates a private folder
	Indicates that the folder is set as the screen saver

- By default, unsupported files are not displayed. If you want to change this setting, see “View Mode” on page 71.
- Thumbnails of video files that have not been played back, or have not been played back completely, are displayed with **NEW** (N) or **PAUSE** (PA) respectively (not shown in mini-thumbnail view).
- Thumbnails of folders that have been backed up on your computer in Backup Files are displayed with the  icon.
- Files in unsupported formats or with names that contain unsupported characters may be displayed as “?”, and may not be accessible.

## Changing the Display

You can change the file view by pressing the **Display** button while in a folder.

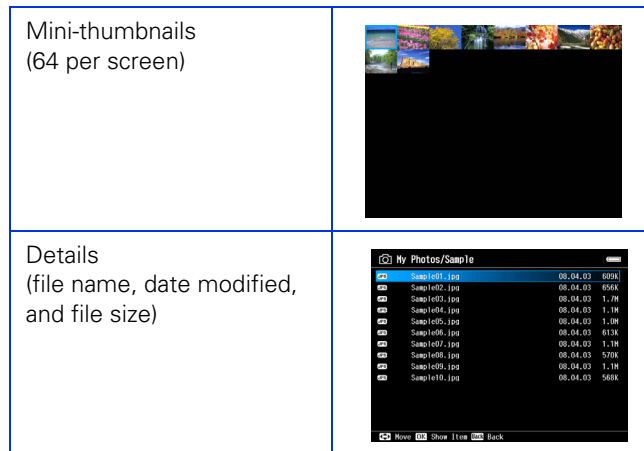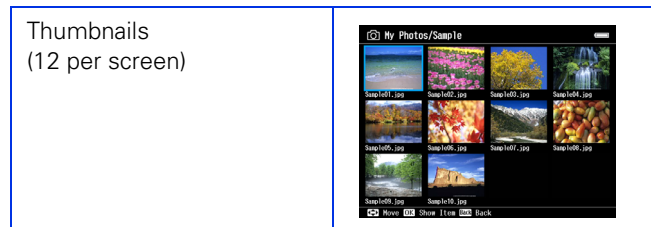

## Using the Pop-up Menu

Press the **Menu** button at any time to display a menu of the options currently available. These options vary, depending on what you are doing with the viewer.

The following table summarizes the menu functions for photo files:

Menu	Function
Rating Filter Display	Displays only photos with the specified rating (page 58).

Menu	Function
Enhanced Photo Display Mode	Displays photo images using a wider color gamut. See page 30.
Playback Sound Memo	Plays the sound memo recorded with an image file.
Copy/Move	Copies or moves files or folders. See page 21.
Edit	Locks files or folders (page 57), renames folders (page 54), or rotates photos (page 31).
Sort	Organizes the files in a folder by date, name, or file extension.
Print	Prints photo images. See page 66.
Wallpaper and Icon Settings	Selects an image to be used as background for a folder or the Home screen. See page 58.
Set as Screen Saver	Creates a screen saver from the images in a folder. See page 58.
Slide Show	Starts displaying the images in a folder as a slide show. See page 30.
Settings	Adjusts LCD brightness, turns the guide and key beep on or off, and sets display options for private folders and unsupported files. See pages 72 to 73.

Menu	Function
Return to HOME	Returns to the Home screen.
Delete	Deletes files or folders. See page 55.

The following table summarizes the menu functions for video files:

Menu	Function
Copy/Move	Copies or moves files or folders (page 21).
Edit	Locks files or folders (page 57), renames folders (page 54), or rotates photos (page 31).
Sort	Organizes the files in a folder by date, name, or file extension.
Play from Beginning	Restarts playback from the beginning of the video file.
Play Settings	Adjusts the screen size of a video. See page 72.
Set This Frame as Icon	Sets the currently displayed frame as the video's thumbnail image.
Display mode	Adjusts the display mode for video files.

Menu	Function
Settings	Adjusts LCD brightness, turns the guide and key beep on or off, and sets display options for private folders and unsupported files. See pages 72 to 73.
Return to HOME	Returns to the Home screen.
Delete	Deletes files or folders. See page 55.

## Supported Image Formats

Image files	Extension	Details
JPEG	.jpg .jpeg	Minimum size: 320 × 240 pixels Maximum size: 31 megapixels Maximum image aspect ratio: 3:1
RAW	.arw    .mrw .cr2    .nef .crw    .orf .dng    .pef .erf    .raf	JPEG data stored in the header of RAW files is displayed.

### Note:


TIFF files and progressive JPEG files are not supported.

For DNG files, the viewer supports only the JPEG preview embedded in the file.

## Viewing Images


After you have copied files from a memory card you can view them in various ways. You can display the images at full screen, zoom in, or show several types of photographic information.

- 1 Use the 4-way ring or jog dial to select **My Photos** or **Backup Files**.

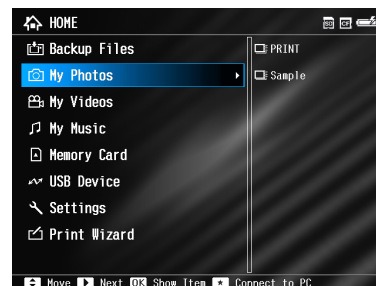

- 2 Press **OK**.
- 3 Select the folder containing the images you want to view, then press **OK**.

You see a screen like this:

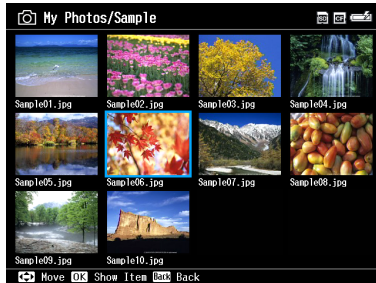

- 4 Use the 4-way ring or jog dial to select the image you want to view, then press **OK**. The selected image is enlarged to fill the screen.

**Note:**

If your image file contains a sound memo (WAV format), you can listen to it during full screen display. To listen to the sound memo, press the **Menu** button and select **Playback Sound Memo**.

## Zooming an Image

You can zoom RAW and JPEG images up to 400%.

- To zoom in on an image, press the + (plus) button. Keep pressing it to zoom in up to 400%.
- To zoom out, press the – (minus) button. Continue pressing it to zoom all the way out.
- To pan around a zoomed image, use the 4-way ring.
- To return to the normal full-screen view, press **Back**.
- To select an area to zoom in, press **OK** when a full-screen image is displayed. Use the 4-way ring to move the red box to the area you want to zoom, then press **OK** again.


When you are viewing a zoomed-in image, you can use the jog dial to display the next or previous photo without changing the zoom.




## Displaying Image Information

You can view image information, a histogram, and display an over- and under-exposure preview.

- 1 To view the file name and date for a full-screen image, press the **Display** button.
- 2 To view image information, and a histogram, press **Display** again:

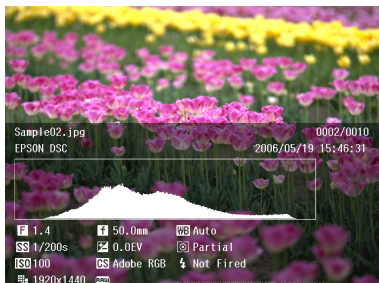

- 3 To view the over- and under-exposure preview, press **Display** a third time:

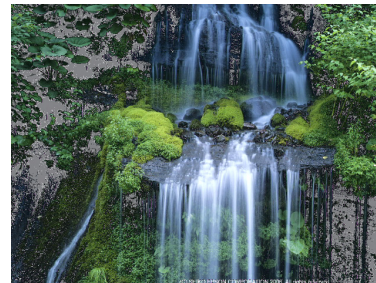

In the over- and under-exposure preview, highlight and shadow areas show graduated tone reversal. The brightest 6% of the image shows 4 levels of black, and the darkest 6% shows 4 levels of white.

- 4 To return to normal display, press the **Display** button again.

## Displaying a Wider Color Gamut

Images are displayed in the color space they were captured in, either sRGB or AdobeRGB. You can also display images in a wider color gamut and correct color casts, backlighting, under-exposure, and low-contrast images with Enhanced Photo Display Mode.

### Note:

Enhanced Photo Display Mode affects only the image shown on the viewer, and does not change the file itself. The Menu, Display, ★, + (plus), and – (minus) buttons are not available in this mode.

- 1 When you are viewing a full-screen image, press **Menu** and select **Enhanced Photo Display Mode**. You can use the 4-way ring or jog dial to view the next or previous photo in Enhanced Photo Display Mode.
- 2 To return to normal display, press **Back**.

## Displaying Images as a Slide Show

You can display images in a folder as a slide show and select transition effects, timing, and background music.

- 1 Select a folder you want to display as a slide show.
- 2 Press the **Menu** button to display the pop-up menu:



- 3 Select **Slide Show** and press **OK**. The slide show starts. To stop the slide show, press **Back**.
- 4 To adjust the timing, effects, and music, press **Menu** while the slide show is playing.

- 5** Select one of the following, then press **OK** and adjust the settings as noted.
- **LCD Brightness:** Choose from 10 brightness levels.
  - **Slide Show Duration:** Choose the time between slide transitions, from 1 to 30 seconds.
  - **Slide Show Music:** Choose from three preset music selections or a playlist that you have created. You can use the jog dial or the + (plus) and – (minus) buttons to adjust the volume while the slide show is playing.
  - **Slide Show Effects:** Choose from 4 transition effects, **Enhanced Photo Display**, or choose **None** to move through your images without transitions.
  - **Return to HOME:** End the slide show and return to the Home screen.

You can also adjust slide show options by selecting **Settings** on the Home screen. See “Slide Show” on page 72 for details.

## Rotating an Image

Images that contain rotation information are automatically rotated on the viewer. You can also rotate an image manually in Backup Files and My Photos.

- 1** Select the image in thumbnail view, then press the **Menu** button to display the pop-up menu.
- 2** Select **Edit**, then press **OK**.
- 3** Select **Rotate Right** to rotate the image 90° clockwise, or **Rotate Left** to rotate it 90° counterclockwise. Then press **OK**. You see your photos displayed with white checkboxes.
- 4** Use the 4-way ring to highlight each photo you want to rotate, and press ★ to select it. The selected items are displayed with red ✓ check marks.
- 5** Press **OK** to rotate the photos.

### Note:

To rotate a photo displayed full-screen, press **Menu**, select **Edit**, then select **Rotate** and press **OK**. Then select **Right** or **Left** and press **OK**. To rotate other photos in the folder, press right or left on the 4-way ring.

You can turn off the Auto-Rotation feature. See “Backup Settings” on page 72 for details.

## Viewing Videos

The viewer supports video files in resolutions ranging from  $320 \times 240$  pixels to  $720 \times 576$  pixels, with file sizes up to 2GB.

### Supported Video Formats

File format	Video codec	Audio codec	Detail
.avi	MPEG	G.711, PCM, QT LPCM, ADPCM, MS ADPCM, IMA ADPCM, MS IMA ADPCM, G.722, G.726	30 fps: $720 \times 480$ 25 fps: $720 \times 576$ 60 fps: QVGA

File format	Video codec	Audio codec	Detail
.mov	MPEG-4 (Advanced Simple Profile)	AAC-LC, PCM, QT LPCM, ADPCM, MS ADPCM, IMA ADPCM, MS IMA ADPCM, G.722, G.726	30 fps: $720 \times 480$ 25 fps: $720 \times 576$ 8 Mbps (peak) 4 Mbps (avg.)
	Motion JPEG	G.711, PCM, QT LPCM, ADPCM, MS ADPCM, IMA ADPCM, MS IMA ADPCM, G.722, G.726	30 fps: $720 \times 480$ 25 fps: $720 \times 576$ 60 fps: QVGA
	H.264/AVC (Baseline Profile)	AAC-LC	30 fps: $720 \times 480$
	H.264/AVC (Baseline Profile Level 1.3)	PCM, QT LPCM	25 fps: $720 \times 576$ 3 Mbps (peak) 2.5 Mbps (avg.)

File format	Video codec	Audio codec	Detail
.mp4 m4v	MPEG-4 (Advanced Simple Profile)	AAC-LC, PCM, QT LPCM, ADPCM, MS ADPCM, IMA ADPCM, MS IMA ADPCM, G.722, G.726	30 fps: 720 × 480 25 fps: 720 × 576 8 Mbps (peak) 4 Mbps (avg.)
	H.264/AVC (Baseline Profile Level 1.3)	AAC-LC, QT LPCM	30 fps: 720 × 480 25 fps: 720 × 576 3 Mbps (peak) 2.5 Mbps (avg.)

## Playing Videos

You can transfer video files directly from memory cards as described in “Copying Files From a Memory Card” on page 20. Or you can copy and convert video files from your computer, as described in “Copying Files From Your Computer to the Viewer” on page 46.

- 1 Use the 4-way ring or jog dial to select **Backup Files** or **My Videos**, then press **OK**.
- 2 Select the folder containing the video you want to play, then press **OK**.

- 3 Use the 4-way ring or jog dial to select the video you want to play, then press **OK**.

### Note:

You can set the video screen size by selecting **Play at Full Screen** or **Play at Original Size** from **Play Settings** in the pop-up menu. Setting **Play at Full Screen** displays the image by adjusting the longest side to the LCD display without changing the aspect ratio.

- To play or pause the video, press **OK**.
- To adjust the audio volume, use the jog dial or press the **+** (plus) or **–** (minus) buttons.
- To rewind or fast-forward, press left or right on the 4-way ring. Press repeatedly to increase the speed. (This function may not work with some videos, such as .mov).
- To stop the video and return to the previous screen, press **Back**.

The viewer remembers where you stopped. When you resume, playback starts 3 seconds before the stop point (for videos longer than 1 minute). If you want to play the video from the beginning, press **Menu**, select **Play Settings**, then select **Play from Beginning**.

- To view information about the video, press **Display**. You see a progress bar on the video. Press **Display** again to view information including frame rate, bit rate, and video and audio codecs:



## Setting the Display Mode

You can choose from five different modes to adjust the color, brightness, and contrast for various types of videos.

- 1 While a video is playing, press the **Menu** button to display the pop-up menu.
- 2 Select **Display mode**, then press **OK**.

3 Select one of the following:

- **Home video:** for camcorder video (the default setting)
- **Cinema:** for increased contrast and color saturation
- **Nature:** to display video in a wider color space than sRGB
- **Power saving:** to decrease the brightness of the LCD backlight and save battery life
- **Original:** to display video with the most accurate color and brightness

4 Press **OK** to return to the video.


## Viewing Files on a TV

You can connect the viewer to a TV or projector and view your images, videos, and slide shows.

You will need a camcorder AV cable (3.5-mm mini-plug to 3 RCA plugs), available at many electronics stores.

- 1 Connect the cable's three RCA plugs to the video and audio **IN** jacks on your TV or projector.

- 2 Connect the cable's mini-plug to the A/V Out jack on the side of the viewer.

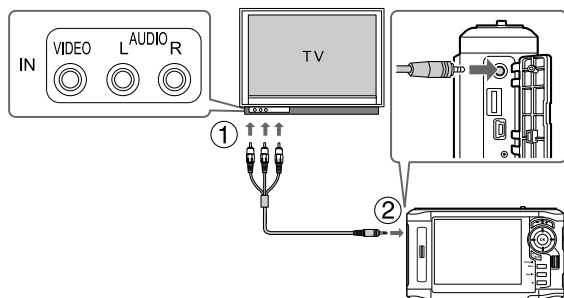

The viewer's LCD screen turns off.

- 3 Set the TV or projector to display video input from the viewer.

You can use all of the viewer's controls to play slide shows, photos, and videos on your TV or projector.

**Note:**

You may need to set the Video Out setting to match your TV (see page 71).

Some TVs may crop your images on the top and bottom, or you may notice some flickering, for example, near the edges of the screen. This is a normal result of your viewer's high image resolution.

## Changing the File View Mode

You can switch between two file display modes in My Photos. Folder View displays files in their folders on the viewer. DSC View displays all files in one folder.

- 1 Use the 4-way ring or jog dial to select My Photos or Backup Files.



- 2 Press OK.
- 3 Press the Menu button, select Settings, then press OK.
- 4 Select Folder View or DSC View, then press OK.

## Chapter 4

# Playing Music

You can transfer audio files from your computer and play them on the viewer. You can create playlists using the Epson Link2 software on your computer, or using the viewer itself.

This chapter describes how to transfer and play music, and how to manage your audio files on the viewer.


### Copying Music From Your Computer

First, make sure you have installed the Epson Link2 software, following the instructions in your *P-6000/P-7000 Basics* guide.

If you want to copy files from a music CD, you first need to convert the files to MP3 or M4A format using a CD copying software on your computer. You can also use this software to change the song and artist names displayed on the playlist if necessary.

WMA and WAV files are automatically converted to M4A when they are transferred. You can specify conversion settings if necessary; see “Setting Backup and Conversion Preferences” on page 47 for instructions.


- 1 Connect the AC adapter to the viewer and plug it in.
- 2 Turn on the viewer and your computer.
- 3 Use the included USB cable to connect the viewer to your computer.

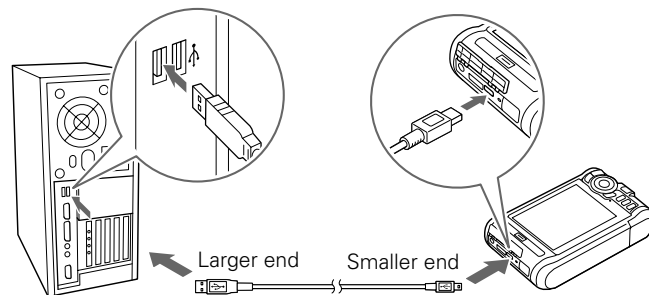




- 4 Make sure the viewer is on the Home screen, then press the ★ button to connect to your computer.




The LCD screen turns off.

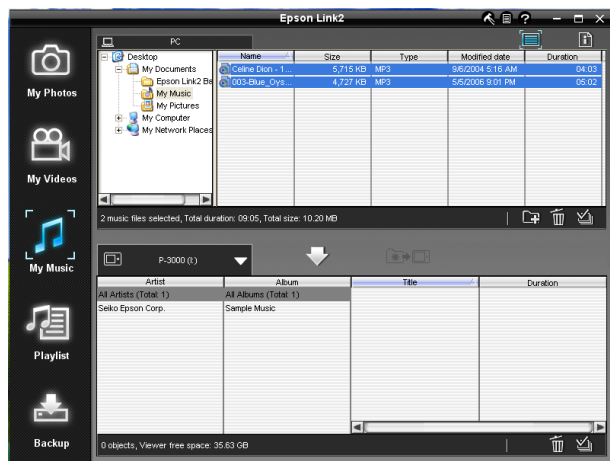- 5 Double-click the  Epson Link2 icon on your desktop to open the program.
- 6 Click My Music on the screen, then locate the audio files you want to copy from your computer.



### Caution:

Epson Link2 uses ID3 tags to organize your music files. If the ID3 tag information is missing, these items will appear as “unknown.” The viewer will rename your files to make them playable. Always keep backup copies of your songs, and never transfer your only copies to the viewer.

- 7 Click the  down arrow in the center of the screen to transfer the files to your viewer.
- 8 When the transfer is finished, disconnect the viewer from your computer:
  - **Windows®:** Right-click the  or  icon in the lower right corner of your screen and select **Safely Remove Hardware** or **Unplug or Eject Hardware**. Then remove the USB cable.
  - **Macintosh:** Drag and drop the viewer icon to the trash, then remove the USB cable.
- 9 If you see a message on the viewer asking you to update the music list, click OK.

### Note:

Only audio files transferred from a computer can be displayed in My Music. If you want to play a music file copied from a memory card, select it in Backup Files, then press **OK** to play it.

## Supported Audio Formats


The viewer can store up to 10,000 audio files. It supports the following audio formats without copyright protection and with a maximum file size of 200MB:

Audio file extensions	Audio codec	Details
.m4a	AAC (MPEG4)	Maximum bit rate: 320 kbps (8 to 48 kHz, 16 bit, stereo, mono)
.mp3	MP3 (MPEG2.5-Layer 3)	Bit rate: 8 to 160 kbps (8 to 12 kHz, 16 bit, stereo, mono)
	MP3 (MPEG2-Layer 3)	Bit rate: 8 to 160 kbps (16 to 24 kHz, 16 bit, stereo, mono)
	MP3 (MPEG1-Layer 3)	Bit rate: 32 to 320 kbps (32 to 48 kHz, 16 bit, stereo, mono)


### Note:

The viewer supports non-lossless-compliant M4A and WMA files. Some files may not be played, even if the formats are supported.

## Playing Audio Files

You can connect headphones to the  jack on top of the viewer, or listen through the viewer's built-in speaker.

- 1 Select **My Music** on the Home screen using the 4-way ring or jog dial, then press OK.

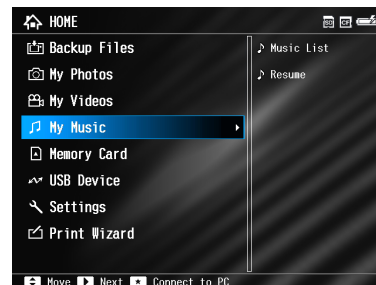


- 2 Select **Music List**, then press OK. If you don't see the songs you transferred to the viewer, select **Update Music List** and press OK.

### Note:

To continue playing from a previously played track, select **Resume**, then press OK.


- 3 Select a category to start playing, then press right on the 4-way ring.

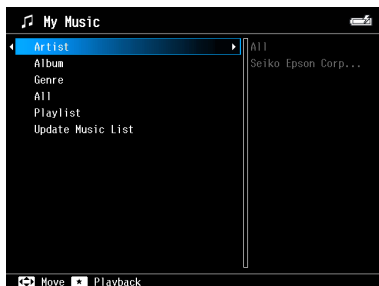

You can narrow your search by selecting one of the categories and navigating its subcategories using the 4-way ring. Select **All** to include all items in the list.

- Artist - Artist name - Album name - Track name
- Album - Album name - Track name
- Genre - Genre name - Artist name - Album name - Track name
- All - Track name
- Playlist - Playlist name - Track name  
(for details, see “Creating a Playlist” on page 40)
- Update Music List (to update audio data after transferring from your computer.)

- 4 Select the track you want using the 4-way ring, then press **OK**.

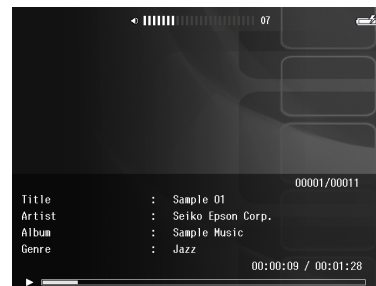

You can do the following while listening to music or audio files.

- To play or pause music, press **OK**.
- To adjust the volume, use the jog dial or press the **+** (plus) or **-** (minus) buttons.
- To skip back or forward, press left or right on the 4-way ring. Press and hold to rewind or fast-forward.
- To return to the previous screen (without stopping the audio), press **Back**. (If you return to the main My Music screen, audio playback stops.)
- To display information about the audio file such as codec, bit rate, and sampling rate, press **Display**.

## Setting Repeat and Shuffle Options



In My Music, press the **Menu** button, select **Play Mode**, and press **OK**. Set the following items using the 4-way ring or jog dial, then press **OK**.


First select either **Shuffle** or **Normal Play Order** to set the playback order, then select the desired repeat play mode.

To play...	Select...
Current category once	No Repeat
Current track repeatedly	Repeat One Song
Current category repeatedly	Repeat All
Current category in random order	Shuffle
Current category in normal order repeatedly	Normal Play Order

## Creating a Playlist

You can create playlists using the Epson Link2 software, or on the viewer itself. Follow the steps below to create a playlist using Epson Link2, or see “Creating a Playlist on the Viewer” on page 41.

- 1 Connect the viewer to your computer as described on page 36.
- 2 Double-click the  Epson Link2 icon on your desktop to open the program.
- 3 Click **Playlist** on the left side of the screen.
- 4 Click the  icon in the lower right corner.

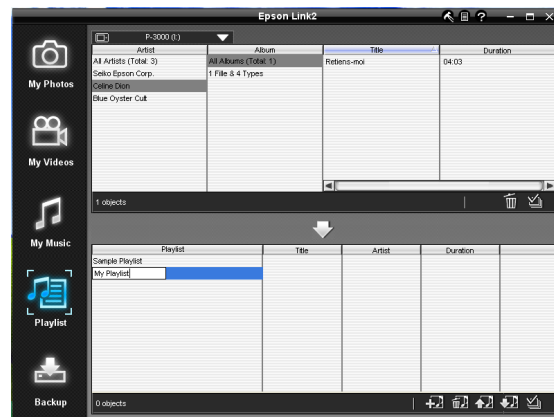

- 5 Enter a name for the playlist.
- 6 Select the songs you want to add. If you want to add all the songs from an album or by an artist, you can select the album or artist.
- 7 Click the down arrow in the center of the screen to add the songs to your playlist.

After you have created playlists, you can use the buttons in the lower right corner of the screen to rearrange the songs and edit the lists.

## Creating a Playlist on the Viewer

You can also create and edit playlists on the viewer.

- 1 In My Music, press the **Menu** button to display the pop-up menu.
- 2 Select **Add to Playlist**, then press **OK**.
- 3 Select **Create New Playlist**, then press **OK**.

The on-screen keyboard appears, with **Playlist001** as the default name.



- 4 To use this name, highlight **Done** and press **OK**.

To enter a new name, use the **Back** (backspace) button to clear the current name. Then enter a new name using the 4-way ring or jog dial (highlight each character and press **OK** to enter it).

- To move the cursor forward or backward, press the **+** (plus) or **-** (minus) buttons.
- To delete the last letter input, press **Back**.
- To enter a space, press **Menu**.
- To switch between upper- and lowercase, press **Display**.
- To cancel the name, highlight **Cancel** and press **OK**.

- 5** After entering the name, select **Done**, then press **OK**.
- 6** Select the tracks for the playlist using the 4-way ring and the ★ button. The selected files are displayed with red ✓ check marks.  
  
If you want to select all the tracks displayed, press **Menu** and select **Select All**.
- 7** When you have selected all the tracks you want, press **OK**.

**Note:**

To delete a playlist, select it in My Music, press **Menu**, select **Delete this Playlist**, then press **OK**.

## Adding Tracks to an Existing Playlist

- 1** Display a list of songs in My Music, then press **Menu**.
- 2** Select **Add to Playlist**, then press **OK**.
- 3** Select the list you want to add to, and press **OK**.
- 4** Select the tracks for the playlist using the 4-way ring and the ★ button, then press **OK**.

## Removing Tracks From a Playlist

- 1** Select a playlist in My Music, then highlight a track you want to remove.
- 2** Press **Menu**, select **Delete**, and press **OK**.
- 3** Select each track you want to remove using the 4-way ring and the ★ button, then press **OK**.  
  
The tracks are removed from the playlist, but not deleted from the viewer.

## Changing the Order of a Playlist


- 1** Select a playlist in My Music then press **OK**.
- 2** Select a track you want to move.
- 3** Press **Menu**, then select **Change Song Order**.
- 4** Press up or down on the 4-way ring to move the track within the playlist.
- 5** When the track is where you want it, press **OK**.
- 6** Repeat steps 2 through 5 to change the order of additional tracks. When you're finished, press **Back**.

## Using the Equalizer

You can use the equalizer to select from 7 music type settings or create a customized setting of your own.

- 1 In My Music, press the **Menu** button to display the pop-up menu.
- 2 Select Audio Equalizer Setting.
- 3 Select the setting you want and press OK.
  - ☐ Normal ☐ Pop
  - ☐ Jazz ☐ Live
  - ☐ Classical ☐ Full Bass
  - ☐ Rock

To create a custom setting, select **Custom** and press **OK**.

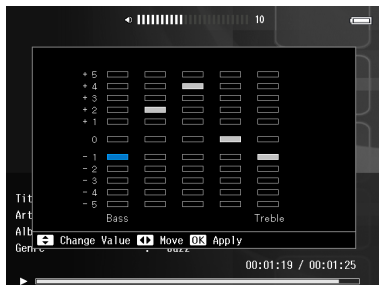

- 4 Adjust the level of each frequency using the 4-way ring, then press **OK**.

### Note:

You may need to listen with headphones to hear the effects of the various settings.

## Deleting Audio Files From the Viewer

- 1 In My Music, press the **Menu** button to display the pop-up menu.
- 2 Select **Delete**.
- 3 Select audio files to delete using the 4-way ring and the ★ button.
- 4 Once you have selected all the files you want to delete, press **OK**. You see a confirmation message.
- 5 Select **Yes**, then press **OK**.

## Chapter 5

# Managing Files

You can back up files from the viewer to your computer, and copy files from your computer to the viewer. You can also transfer files to and from USB devices.


This chapter explains how to work with the files and folders on your viewer and transfer them between the viewer and other devices.

### Copying Files To and From Your Computer

You can use the Epson Link2 software to back up files from the viewer to your computer and copy files from your computer to the viewer. Make sure you have installed the software, following the instructions in your *P-6000/P-7000 Basics* guide.

- 1 Connect the AC adapter to the viewer and plug it in. Then turn on the viewer and your computer.

- 2 Use the included USB cable to connect the viewer to your computer.

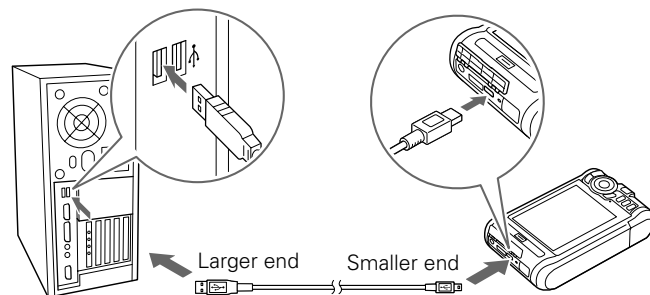

- 3 Make sure the viewer is on the Home screen, then press the ★ button to connect to your computer.

The LCD screen turns off.

#### **Note:**

Although your computer may recognize the viewer as a removable drive, it is best to transfer files using the Epson Link2 software.




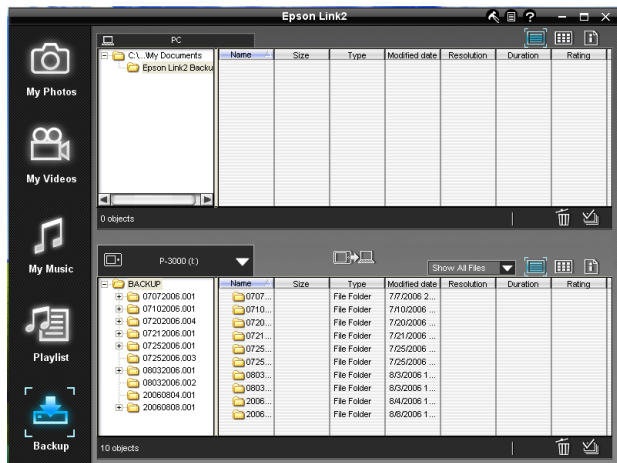
### Caution:

When the viewer is connected to a computer, do not connect a USB device to the **Host** USB port on the viewer. Do not change the names of any folders on the viewer from your computer, or the viewer may become unusable.

## Backing Up Files to Your Computer

You can back up files to your computer automatically or manually. First, make sure you connect the viewer as described on page 44.


- 1 Double-click the  **Epson Link2** icon on your desktop to open the program.



- 2 If you see a message that Epson Link2 has found files in your viewer's Backup Files folder, click **Yes** to copy the files.

### Note:

Only files that haven't already been copied will be transferred.

- 3 To transfer files manually, click the **Backup** icon on the left side of the screen, then click the  icon in the middle of the screen.

All the files in the Backup Files folder of the viewer are copied to your computer.

By default, the files are copied to the Epson Link2 Backup folder in Documents or My Documents.

If you want to change the location or turn off the automatic backup feature, see "Setting Backup and Conversion Preferences" on page 47.

- 4 If a confirmation dialog box is displayed, select whether to delete or keep the transferred files in the viewer.

### Note:



You can also select individual video or photo files to transfer from the viewer to your computer. For instructions, click the ? in the upper right corner of the Epson Link2 screen.

## Copying Files From Your Computer to the Viewer

You can copy photos, videos, and music from your computer to the viewer. For instructions on copying music, see “Copying Music From Your Computer” on page 36.

WMV files are automatically converted to MP4 when they are transferred, and videos that exceed 2GB are automatically divided into multiple files.

If you want to specify conversion settings, see “Setting Backup and Conversion Preferences” on page 47.



- 1 Connect the viewer to your computer as described on page 44.
- 2 Double-click the  Epson Link2 icon on your desktop to open the program.
- 3 Select **Photos**, **Videos**, or **Music**, depending on the type of files you want to transfer.
- 4 Select the files to transfer in the Computer window, then click the  down arrow in the center of the screen. The files are transferred to the viewer.

### Note:

You can also transfer files by dragging and dropping them into the lower contents window. For more information, click the ? in the upper right corner of the Link2 screen.

## Disconnecting the Viewer From Your Computer



When you are finished transferring files between your computer and the viewer, make sure you follow these steps to disconnect.

- 1 Do one of the following:
  - **Windows:** Right click the  or  icon in the lower right corner of your screen and select **Safely Remove Hardware** or **Unplug or Eject Hardware**.
  - **Macintosh:** Drag and drop the viewer icon to the trash.
- 2 Remove the USB cable from your computer.
- 3 Remove the USB cable from the viewer.


## Setting Backup and Conversion Preferences

You can use the Settings window in Epson Link2 to change the folder where files from the viewer are saved on your computer.

You can also change the conversion settings for video files transferred from your computer to the viewer. In Windows, you can also change the conversion settings for audio files.

- 1 Double-click the  Epson Link2 icon on your desktop to open the program.
- 2 Click the  settings icon in the upper right corner of the screen.

The Settings window appears.

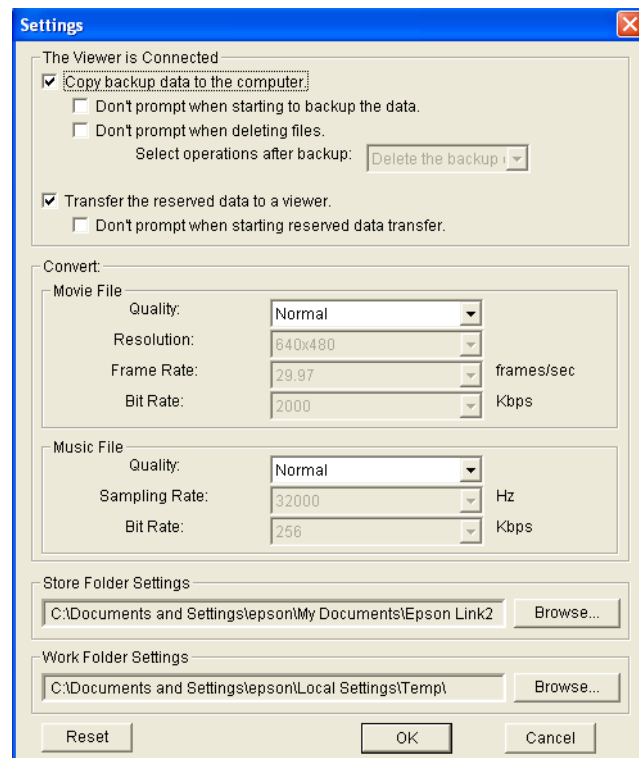

**3** If you don't want to have files from the viewer automatically backed up on your computer, deselect the **Copy backup data to the computer** checkbox. You can still back up files manually, as described on page 45.

**4** If you want to specify the conversion settings for video files, click the arrow next to **Normal** in the Movie File box.

Select **Normal**, **High Quality**, **High Compression**, **Custom**, or **No Conversion**.

Selecting **Custom** allows you to specify the resolution, frame rate, and bit rate.

Choose higher settings for improved video quality, or lower settings for reduced file sizes. Frame rates lower than 29.97 may cause flicker or poor quality video.

**5** If you want to specify the conversion settings for music files, click the arrow next to **Normal** in the Music File box (Windows only).

Select **Normal**, **High Quality**, **High Compression**, or **Custom**.

Selecting **Custom** allows you to specify the sampling rate and bit rate. Choose higher settings for improved audio quality, or lower settings for reduced file sizes.

**6** If you want to change the folder where files are backed up on your computer, you can adjust the Store Folder Settings. The default folder is Epson Link2 Backup in My Documents (Windows XP or 2000) or Documents (Windows Vista® or Macintosh).

**7** When you are finished, click **OK**.

For more information about backup and conversion settings in Epson Link2, click the ? in the upper right corner of the Epson Link2 screen.

## Using the Viewer With USB Devices

You can connect a flash memory drive or other USB device to your viewer and copy files to or from the device.

The viewer supports devices that are compatible with the USB Mass Storage specification, including:

- Digital cameras
- Flash memory drives
- Memory card readers
- External hard drives
- Epson multimedia storage viewers

**Note:**


USB hubs are not supported, and some USB devices may not work without a power connection. Epson cannot guarantee the compatibility of any device.

## Connecting a USB Device

Before you connect a USB device, connect the AC adapter to the viewer and plug it in if possible. If your USB device has an AC adapter, use it to prevent the possible loss of files during transfer.

- 1 Open the connector cover on the side of the viewer.
- 2 Plug the device into the **Host** USB connector on the side of the viewer.

If the device has a USB cable, connect one end of the cable to the device and the other end to the **Host** USB connector on the viewer.

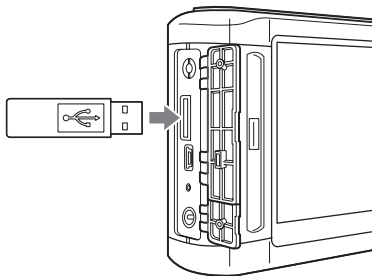**Note:**


To prevent a possible malfunction, do not use both USB connectors on the viewer at the same time.

- 3 Turn on the viewer and the USB device if necessary.

## Copying Files to the Viewer

After you connect a USB device, you can copy all the files to the viewer, or select individual files to copy.

- 1 On the Home screen, use the 4-way ring to highlight **USB Device**, then press **OK**. You see the USB Device menu:

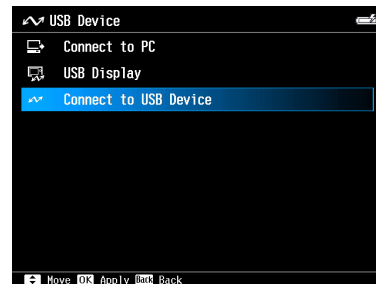

- 2 Select **Connect to USB device**, then press **OK**.

**3** Do one of the following:

- To copy all files, select **Backup USB device to Viewer**, then press **OK**. The files are copied to a folder that is automatically created in the Backup Files folder on the viewer.

The folder is named according to the date, for example, **03292008M.001**. You can change the date format by selecting **Settings > Date and Time** on the Home screen (see page 73). Folders are numbered in the order they are copied.

Skip to step 11.

- To copy selected files, select **Browse USB Device** in the USB Device menu, then press **OK**. You see your files displayed in thumbnail view.

Continue with the steps below.

**4** Press the **Menu** button to display the pop-up menu.

**5** Select **Copy/Move**, then press **OK**.

**6** Select **Select and Copy Files**, then press **OK**. Small white checkboxes appear on each thumbnail image.

**7** Use the 4-way ring to highlight each file you want to copy, then press the **★** button to select it. The selected items are displayed with red **✓** check marks.

**8** When you are finished selecting files, press **OK**.

**9** Use the 4-way ring to highlight **My Photos** or **My Videos**, then press right on the 4-way ring to select it.

**10** Do one of the following:

- To copy the items into the selected folder, press **OK**. Your items are copied.
- To copy the items into a new folder, highlight **Create New Folder** and press **OK**. Then continue with step 2 on page 22 to enter a name for the new folder and copy the items.

**Note:**

It's easier to manage your files if you copy them into a folder you've named, instead of placing them in the root of a main folder (such as **My Photos** or **My Videos**).

**11** Wait until all the files are copied, then disconnect the USB device.

## Copying Files to a USB Device

You can copy all the files or selected files from the viewer to a USB device.

If your USB device has an AC adapter, connect the adapter and plug it in before starting.

## Backing Up All Files to a USB Device

This process may take some time, depending on the volume of data in the viewer.

- 1 Follow the instructions on page 49 to connect the USB device.
- 2 On the Home screen, use the 4-way ring or jog dial to highlight **USB Device**, then press **OK**.
- 3 In the USB Device menu, select **Connect to USB Device**, then press **OK**.

- 4 Select **Copy all Backup Files**.




- 5 Press **OK**, then wait while the files are copied.

## Copying Selected Files to a USB Device

You can select individual files or folders to copy.

- 1 Follow the instructions on page 49 to connect the USB device.
- 2 Select the file or folder you want to copy.

- 3 Press the Menu button.

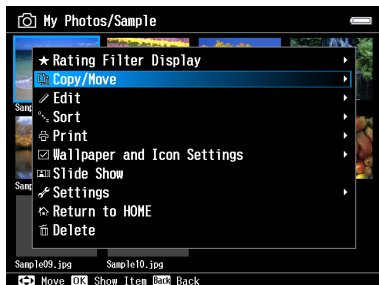

- 4 Select Copy/Move, then press OK.
- 5 Select Select and Copy Files, then press OK. Your photos are displayed with white checkboxes.
- 6 Use the 4-way ring or jog dial to highlight each file you want to copy, then press the ★ button to select it. The selected items are displayed with red ✓ check marks.
- 7 When you are finished selecting files, press OK.

- 8 Use the 4-way ring to highlight USB Device, then press right on the 4-way ring to select it.

- 9 Do one of the following:

- Select a folder to copy the items into, then press OK. Your items are copied.
- To copy the items into a new folder, highlight **Create New Folder** and press OK. Then see “Creating a New Folder and Copying Files” on page 22 to enter a name for the new folder and copy the items.

- 10 When the copy is complete, you can disconnect the device.

## Setting Folders as Private

You can select and hide folders so that other people cannot view the files.

### Note:


Even if folders are set as private folders on the viewer, they may still be viewed on a computer, depending on the computer setting.

- 1 Using the 4-way ring, select a folder you want to hide.
- 2 Press the Menu button, select **Settings**, then press OK.



- 3 Select **Show Private Folders**, then press **OK**.

You see the Password screen:

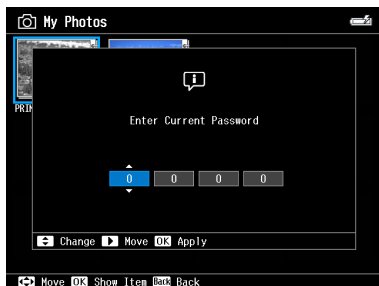

- 4 If you have already set a password for your viewer, enter the 4-digit password number using the 4-way ring, then press **OK**.

If you have not set a password, leave the password at the default setting, 0000, and press **OK**. For instructions on setting a password, see “Backup Settings” on page 72.

- 5 Select a folder you want to set as private, then press the **Menu** button.
- 6 Select **Settings**, select **Set/Unset as Private**, and press **OK**.

You see your folders displayed:



- 7 Use the 4-way ring to highlight each folder you want to set as private, and press **★** to select it. The selected items are displayed with red **✓** check marks.
- 8 Once you have selected all the folders you want to set as private, press **OK**.

**Note:**

To select all files and folders, press **Menu** and select **Select all**, then press **OK**.

To hide the folders set as private, select **Hide Private Folders** in step 3. To show private folders, select **Show Private Folders** in step 3.

## Renaming a Folder

### Note:

Folders in Backup Files can't be renamed.

- 1 Using the 4-way ring, select a folder to rename.
- 2 Press **Menu**, select **Edit**, then press **OK**.
- 3 Select **Rename**, then press **OK**. You see the on-screen keyboard:




- 4 Use the **Back** (backspace) button to clear the current name. Then enter a new name using the 4-way ring (highlight each character and press **OK** to enter it).
  - To move the cursor forward or backward, press the **+** (plus) or **-** (minus) button.
  - To delete the last letter input, press **Back**.

- To enter a space, press **Menu**.
  - To switch between upper- and lowercase, press **Display**.
  - To cancel the name, highlight **Cancel** and press **OK**.
- 5 After you enter the name, select **Done**, then press **OK**.

## Copying and Moving Files to a Folder

- 1 Open a folder to a thumbnail view, as shown below, and highlight the file or folder you want to copy or move.

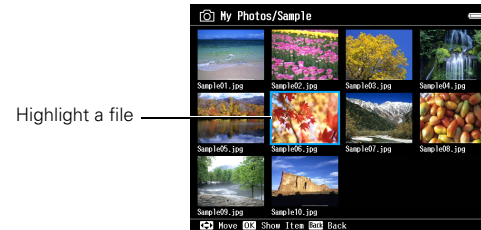

- 2 Press the **Menu** button, then select **Copy/Move**.

**3** Do one of the following:

- To copy files to another folder, select **Select and Copy Files**, then press OK.
- To move files to another folder, select **Select and Move Files**, then press OK.

**Note:**

To copy or move a single file, select the file you want to copy or move, press **Menu**, and select **Copy/Move**. Select **Copy this File** or **Move this File**, then continue with step 5.

**4** Use the 4-way ring or jog dial to highlight each additional item you want to copy or move, then press ★ to select it. The selected items are displayed with red ✓ check marks.

**Tip:**

To select all files and folders, press **Menu** and choose **Select All**.

**5** Press OK.

**6** Use the 4-way ring to select a folder to copy or move the items to.

**7** Do one of the following:

- To copy or move the items into the selected folder, press OK. Your items are copied or moved.
- To copy or move the items into a new subfolder within the selected folder, highlight **Create New Folder** and press OK. Then see “Creating a New Folder and Copying Files” on page 22 to enter a name for the new folder and copy or move the items.

**Tip:**

It's easier to manage your files if you copy or move them into a folder you've named, instead of placing them in the root of a main folder (such as My Photos or My Videos).


## Deleting Files and Folders

You can delete files and folders from the viewer using the menu and buttons as described below. To use the Link2 software for deletion, click the ? in the upper right corner of the Link2 screen.

**1** Select a file or folder to delete.

**2** Press **Menu**, select **Delete**, then press OK.

Checkboxes appear on each thumbnail image:

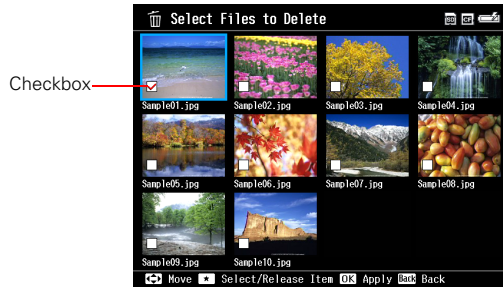


- 3 Use the 4-way ring or jog dial to highlight each file or folder you want to delete, and press **★** to select it. The selected items are displayed with red **✓** check marks.

- 4 Press **OK**.

**Note:**

To select all files and folders, press **Menu** and select **Select all**, then press **OK**.


- 5 If you are viewing a full-screen photo, press **Menu** and select **Delete** to enter deletion mode.

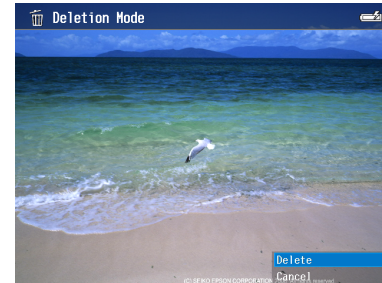


Select **Delete** again, then press **OK**. You can display additional photos to delete by pressing right or left on the 4-way ring. (To cancel deletion mode, select **Cancel** and press **OK**, or press the **Back** button.)


- 6 When the confirmation message appears, select **Yes**, then press **OK**.

## Locking Files and Folders

You can lock selected files or folders so they cannot be deleted or rotated. When a file or folder is locked, the  icon is displayed.

- 1 Select a folder or file to lock.
- 2 Press the **Menu** button to display the pop-up menu.
- 3 Select **Edit**, then select **Lock/Unlock** and press **OK**. Checkboxes appear on each thumbnail image:

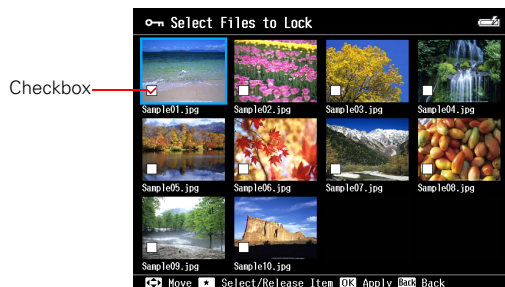


- 4 Use the 4-way ring to highlight each file or folder you want to lock, and press **★** to select it. The selected items are displayed with red  check marks.

### Note:

To select all files and folders, press **Menu** and select **Select all**, then press **OK**.

- 5 Press **OK** to lock the files or folders.
- 6 If you are viewing a full-screen photo, press **Menu**, select **Edit**, then select **Lock/Unlock** to enter lock mode.

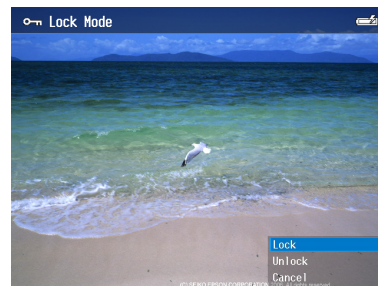

Select **Lock** or **Unlock** then press **OK**. You can display additional photos to lock by pressing right or left on the 4-way ring. To cancel, select **Cancel** and press **OK** or press the **Back** button.

### Note:

The lock on the folder or file remains in effect until you unlock it, even if you turn off the viewer.

## Setting a Folder Icon or Home Screen Wallpaper

You can set your favorite file as an icon for the folder or “wallpaper” for the Home screen.

- 1 Select the file you want to use.
- 2 Press **Menu**, then select **Wallpaper and Icon Settings**, then press **OK**.
- 3 Select **Set as Folder Icon** or **Set as Wallpaper of HOME**, then press **OK**.

## Rating Photos

You can rate your photos from one to five stars. This lets you filter your photos for display according to their rating.

When you copy a rated file to your computer, you must use the Epson Link2 software to copy the rating information. You can then move your rated files into certain Adobe applications.

To rate a single photo, select it in **My Photos** or **Backup Files**, then press the ★ button to rate it. Continue pressing the button to increase the rating up to ★5, or remove the rating.

## Selecting a Screen Saver

You can select a folder to be used as a screen saver. The photos in the folder will be displayed as a slide show when the viewer is plugged in using the AC adapter and is inactive for 3 minutes.

If you want to change the timing for the screen saver, see “Power Save” on page 71. If you want to change the transition effects, see “Slide Show” on page 72.

- 1 Select a folder, then press **Menu** to display the pop-up menu.
- 2 Select **Set as Screen Saver**, then press **OK**.

### **Note:**


To cancel the setting, select **Don't Use as Screen Saver**.

## Monitoring the Color of Images

You can display images from Adobe Photoshop® on the viewer to maintain color accuracy when editing your images. Make sure you have installed the USB Monitor Plug-in, following the instructions in your *P-6000/P-7000 Basics* guide.

- 1 Connect the AC adapter to the viewer and plug it in. Then turn on the viewer and your computer.

- 2 Use the included USB cable to connect the viewer to your computer.

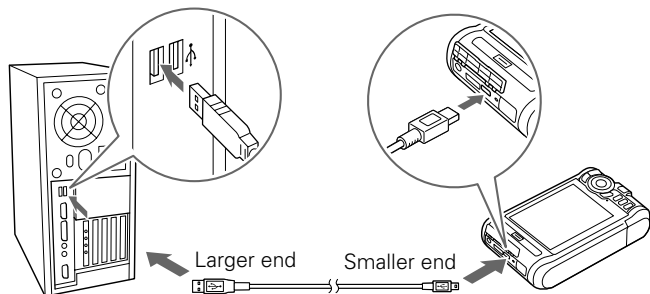

- 3 On the Home screen, use the 4-way ring to highlight **USB Device**, then press **OK**.
- 4 In the USB Device menu, select **USB Display**.  
Monitoring begins automatically.
- 5 When you're finished, disconnect the USB cable from the viewer and computer.

## Chapter 6

# Printing

You can print photos or videos by connecting the viewer to a PictBridge-compatible printer, such as the Epson Stylus® Photo R380, 1440, R1900 and R2400.


Check the Epson website to get the latest information on supported printers. See “Where To Get Help” on page 80.

Depending on your printer model and settings, you can use the following types of paper.


- Epson Ultra Premium Photo Paper Glossy
- Epson Premium Photo Paper Glossy
- Epson Premium Photo Paper Semigloss
- Epson Photo Paper Glossy

For details about paper, see your printer documentation.

## Connecting the Viewer to a Printer

Refer to your printer manual to locate the external device USB connector on the printer, which may be labeled  or EXT. I/F.


- 1 Connect the AC adapter to the viewer, then connect the small end of the USB cable to the **Device USB** connector on the viewer.

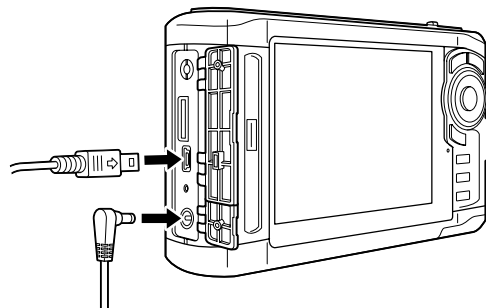

- 2 Turn on the viewer.



- 3 Connect the other end of the cable to the USB connector on the printer.

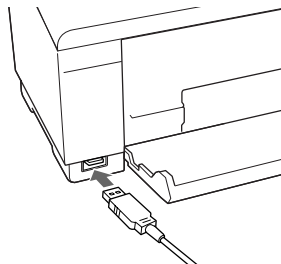

**Note:**

Disconnect the USB cable from the viewer when not operating with a computer or printer.

## Selecting a Photo

- 1 Select Print Wizard on the Home screen using the 4-way ring or jog dial, then press OK.



- 2 Select Create Custom Print, then press OK.
- 3 Select the photo you want to print using the 4-way ring, then press OK.

**4** You see the retouch confirmation message. Do one of the following:

- To retouch your photo before printing, select **Yes**, then press **OK**.

You see the Retouch Settings menu. Continue with the steps below to retouch your photo.

- To continue without retouching your photo, select **No**, then press **OK**.

**Note:**

If the photo you selected is not supported by the viewer, see “Printing Multiple Photos” on page 67 to print your photos.

You see the Cropping setting menu. Continue with the steps on page 63 to crop your photo.

## Retouching a Photo

You can retouch a photo before printing without modifying the original. Use one of the adjustment presets or adjust individual settings as necessary.


**1** Do one of the following:

- Select one of the adjustment presets. After a moment, you see the results of the retouching effects. If you are satisfied with the results, press **OK**.


Continue with step 5.

- Select **Manual Settings** to adjust individual settings, then press **OK**.

**2** Select the settings you want to adjust using the 4-way ring, then press **OK**.

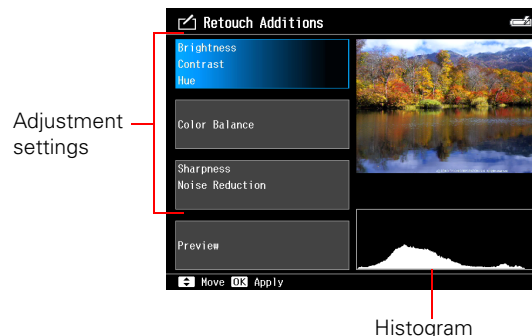

Adjust settings as necessary. After a moment, you see the results of the retouching effects.

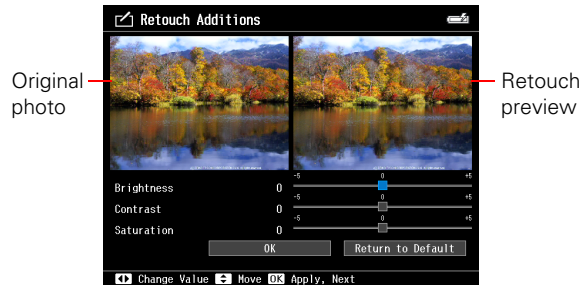

- 3 When you're finished adjusting the settings, highlight **OK** and press **OK** to return to the Retouch Additions screen.

**Note:**

To set the Retouch Additions settings to their original values, select **Return to Default**, then press **OK**.

- 4 When you're finished adjusting settings, select **Preview**, then press **OK**.
- 5 Do one of the following:
  - To save your changes, select **OK** or **Start Processing**, then press **OK**.

- To make additional adjustments to the image, select **Additional Adjustments** or **Custom Settings**, then repeat steps 2 through 4.


The retouched photo is automatically saved in a folder that is automatically created in the **My Photos > PRINT** folder on the viewer. The folder is named according to the date and the date format you selected, for example, **03292008M.001**.

When you're finished retouching your photo, you see the **Cropping** setting menu. Continue with the steps in the next section to crop your photo.

## Cropping a Photo

- 1 Select one of the following cropping methods using the 4-way ring or jog dial, then press **OK**:
  - **Fixed Aspect** to select a 1:1, 3:2, or 4:3 aspect ratio
  - **Free Aspect** to manually adjust the aspect ratio
  - **No Cropping** to continue without cropping your image. Continue with the steps on page 65 to select print layout settings.

You see a red cropping indicator.

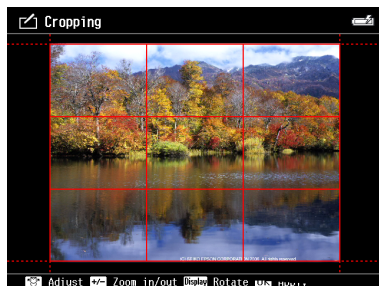

## 2 Crop your image using the following buttons:

- Use the + (plus) and – (minus) buttons to enlarge and reduce the cropping area.
- Use the jog dial to make fine adjustments to the crop area. To make vertical adjustments, press up or down on the 4-way ring, then rotate the jog dial. To make horizontal adjustments, press left or right on the 4-way ring, then rotate the jog dial.
- **Fixed Aspect:** Use the 4-way ring to move the cropping indicator. To rotate the crop area, press the **Display** button.
- **Free Aspect:** Use the 4-way ring to adjust the top and left edges of crop area, then press the ★ button to adjust the bottom and right edges of the crop area.

### Note:

While cropping a photo, press the **Menu** button to adjust the grid display, change the crop area aspect ratio, adjust the horizontal angle of the photo, or reset the crop area.

## 3 When you're finished adjusting the cropping area, press OK and do one of the following:

- To crop the image, select **OK**, then press **OK**.
- To make adjustments to the crop area, select **Additional Adjustments**, then repeat step 2.


The cropped photo is automatically saved in a folder that is automatically created in the My Photos > PRINT folder on the viewer. The folder is named according to the date and the date format you selected, for example, 03292008M.001.

When you're finished cropping your photo, you see the Select Print Layout Size menu. Continue with the steps on below to select layout settings.

## Selecting Layout Settings

- 1 Select the paper size that you are printing on using the 4-way ring or jog dial, then press **OK**.

You see a preview of your print layout:

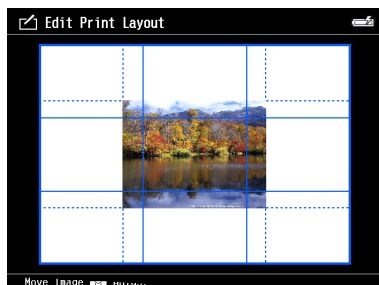

- 2 Use the following buttons to adjust the print layout:
  - Use the + (plus) or – (minus) buttons to enlarge and reduce your photo to fit the paper.
  - Use the 4-way ring to move the image on the page.
  - Use the jog dial to make fine adjustments to the photo position. To make vertical adjustments, press up or down on the 4-way ring, then rotate the jog dial. To make horizontal adjustments, press left or right on the 4-way ring, then rotate the jog dial.

- 3 To adjust the background color, frame, and watermark settings, press the **Menu** button and select settings as necessary.

**Note:**

Before you can add a watermark to your printed images, you need to create a watermark as described on page 68.

- 4 When you're finished adjusting the print layout, press **OK** and do one of the following:
  - To save the print layout, select **OK**, then press **OK**.
  - To make adjustments to the print layout, select **Additional Adjustments**, then repeat steps 2 to 3.

The photo with the print layout settings is automatically saved in a folder that is automatically created in the My Photos > PRINT folder on the viewer. The folder is named according to the date and the date format you selected, for example, 03292008M.001.

- 5 If you would like to save the layout as a template for creating similar photos, select **Yes** when you see the confirmation message. Name the template, select **Done**, then press **OK**.

When you're finished selecting layout settings, press **OK**.

## Printing Your Photos

Make sure the AC adapter is connected to the viewer before you print. If the viewer can't find the printer, make sure the printer is turned on and has paper and ink, then select **Check Printer Connection** to continue.

- 1 On the printer confirmation screen, use the 4-way ring to change the following settings:

Setting	Description
Number of Prints	Set the number of prints.
Print Date	Print the date when the photo was taken. If the photo does not include date information, the printing date is added.
Paper size	Choose the paper size loaded in the printer.
Paper kind	Choose type of paper loaded in the printer.
Print Mode	Choose <b>Photo</b> , <b>High speed</b> , or <b>Best Photo</b> .
Color Enhance	Automatically adjusts the photo when it's printed (not available for all types of image files).

- 2 When you have finished selecting settings, select **Start Printing**, then press **OK**.

## Making Copies of a Print

You can quickly make copies of a print that you previously retouched, cropped, and selected layout settings for.

- 1 Select **Print Wizard** on the Home screen using the 4-way ring or jog dial, then press **OK**.
- 2 Select **Make Copies of Custom Print**, then press **OK**.




- 3 Select the photo you want to print using the 4-way ring, then press **OK**.
- 4 Follow the steps in the previous section to finish printing your photo.

## Printing Multiple Photos

You can print multiple photos without retouching or cropping.

- 1 Select **Print Wizard** on the Home screen using the 4-way ring or jog dial, then press **OK**.
- 2 Select **Print Original Photo**, then press **OK**.

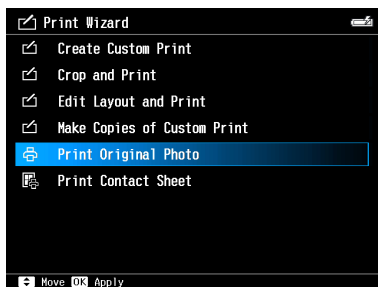

- 3 Select the folder that contains the images you want to print, then press **OK**.
- 4 Select the photos you want to print using the 4-way ring, then select the number of copies you want to print using the + (plus) and – (minus) buttons.
- 5 When you're finished selecting photos, press **OK**.
- 6 Select a print layout setting using the 4-way ring, then press **OK**.

- 7 Follow the steps in “Printing Your Photos” on page 66 to finish printing your photos.

## Printing a Contact Sheet

You can print a contact sheet containing small versions of the photos on the viewer.

- 1 Select **Print Wizard** on the Home screen using the 4-way ring or jog dial, then press **OK**.
- 2 Select **Print Contact Sheet**, then press **OK**.



- 3 Select the type of contact sheet you want to print, then press **OK**.
- 4 Select the folder that contains the images you want to print, then press **OK**.

- 5 Use the 4-way ring or jog dial to highlight each photo you want to print, then press the ★ button to select it. The selected items are displayed with red ✓ check marks.

**Note:**

To select all files, press **Menu** and choose **Select All JPEG Files**, **Select All RAW Files**, or **Select All Files**, then press **OK**.

- 6 When you're finished selecting photos, press **OK**.
- 7 Follow the steps in "Printing Your Photos" on page 66 to finish printing your photos.


## Creating a Watermark

You can add a copyright watermark to your images when printing them from the viewer. You can store up to three text or graphic watermarks.

### Creating a Watermark with Text

- 1 Select **Settings** on the Home screen using the 4-way ring or jog dial, then press **OK**.
- 2 Select **Watermark Settings** then press **OK**.

- 3 Select **Create New Watermark** then press **OK**.

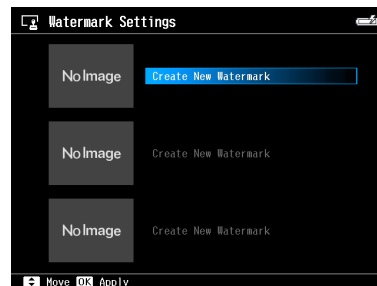

- 4 Enter the text for your new watermark using the 4-way ring or jog dial (highlight each character and press **OK** to enter it).
- To move the cursor forward or backward, press the + (plus) or – (minus) buttons.
  - To delete the last letter input, press **Back**.
  - To enter a space, press **Menu**.
  - To switch between upper- and lowercase, press **Display**.
  - To cancel the name, highlight **Cancel** and press **OK**.
- 5 After entering your text, highlight **Done** and press **OK**.



- 6** Select a color for the watermark, then press **OK**.
- 7** When the confirmation message appears, press **OK**.

## Using an Image as a Watermark

### **Note:**

You can only assign PNG format images created in Adobe Photoshop. The images must be no larger than 720 × 480 pixels and less than 10MB in size.


- 1** Copy your image file to the viewer's Photos folder.
- 2** Select the image file on the viewer, then press **OK**.
- 3** When the confirmation message appears, select **Yes**, then press **OK** to assign the image as a watermark.

## Chapter 7

# Customizing Settings

You can change settings for displaying images, copying files, controlling the viewer's sounds, and other functions.

On the Home screen, select **Settings** and press **OK**. You see this screen:

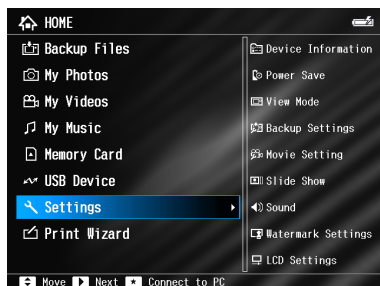

Use the 4-way ring or jog dial to select and change any of the settings described in this chapter.

## Device Information

Use the following options to check the firmware version of the viewer, the available hard drive space, and to set a password for private folders:

- **Firmware Version** to display the viewer's firmware version.
- **Hard Drive Capacity** to display the available space on the viewer's hard drive and also on any memory cards that are loaded in the viewer. The total file size is also given for all files in the Backup, My Photos, My Videos, and My Music folders.
- **Set Password** to set a password for private folders. The default password is 0000.

## Power Save

Use the following options to adjust how the viewer saves power:

- **Backlight Timer** to set when the LCD screen turns dark during inactivity. You can select 1, 3, 5, 10, or 15 minutes.
- **Sleep Timer** to set when the LCD turns off during inactivity. You can select 1, 3, 5, 10, or 15 minutes.
- **Power Off Timer** to set when the viewer turns off during inactivity. If the AC adapter is connected to the viewer, it will not turn off but will play a screen saver instead. You can select 1, 3, 5, 10, or 15 minutes.
- **Screen Saver** to set when the screen saver begins during inactivity (if the AC adapter is connected). You can select 1, 3, 5, 10, or 15 minutes. See “Slide Show” on page 72 to control the features of the screen saver.

## View Mode

Use the following options to adjust how the viewer displays images:

- **Video Out** to select **NTSC** or **PAL** according to the type of TV system or external display connected to the viewer.
- **Auto-Rotation** to determine whether the viewer auto-rotates images according to Exif information included in the file by the camera that took the photo.
- **Unsupported Files** to set whether unsupported files are displayed on the viewer. If you select **Show**, unsupported files appear as gray boxes with ? question marks inside.
- **Color Space** to set the color space, if color space information in the image is unspecified. Select **sRGB** or **AdobeRGB**.
- **RAW Image Display Settings**

## Backup Settings

Use these options to change how the viewer handles various Backup operations:

- **Backup Method** to select what files are backed up. Select **Backup All Data** to copy all files or **Backup New Data** to copy only new files.
- **Process After Backup** to set what happens after files are copied. Select **Verify backed up data** to verify that the files were copied successfully. Select **Verify & del. orig. data** to clear the files from their original location automatically after successfully copying them, or **Confirm** to ask each time if you want to clear them. Or select **No action** to copy files without doing anything after they're copied.
- **Backup Complete Sound** to select one of several preset sounds to alert you when the viewer finishes backing up files.

## Movie Setting

Use these options for movies played on the viewer:

- **Screen Size** to adjust the screen size of a video. You can select **Play at Full Screen** or **Play at Original Size**.
- **Playback Mode** to play the video file once or to play video files continuously. Select **Playback Continuously** or **Stop at End of File**.
- **Movie Display Mode** to adjust the color, brightness, and contrast for various types of videos.

## Slide Show

Use these options to select effects, timing, and background music for slide shows. These settings also control the features of your screen saver.

- **Effects** to choose one of five slide show effects.
- **Duration** to choose the time between slide transitions. You can select from 1 to 30 seconds.
- **Slide Show Music** to choose background music for the slide show. You can select none, one of three presets, or a music playlist that you've created.
- **Clock** to choose whether to display the current time in the corner of the screen.

## Sound

Use these options to control the default volume for movies and music, and to set audible alerts.

- **Guide Beep** to turn on or off sounds made by the viewer when an error occurs.
- **Key Beep** to turn on or off sounds made by the viewer when you press the buttons.
- **Volume** to set the default volume for music and videos. You can change the volume when playing music or videos using the jog dial or by pressing the + (plus) or – (minus) buttons.

## Watermark Settings

Lets you create or delete watermarks.

## LCD Settings

Use these options to adjust the LCD screen and how the viewer displays images:

- **LCD Brightness** to control the brightness of the screen.
- **LCD Custom setting** to set the color temperature, gamma, gray point, and gray level of the LCD.

## Date and Time

If you remove the battery, the date and time settings will be erased after about one day. Use this screen to re-enter the date and time, if necessary.

- Enter the **Year, Month, Day, Hour, and Minute**.
- Use **Date Format** to change the format of the file dates shown on the Details screen. Folders created in Backup Files are also named according to the selected format with a letter M, D, or Y to indicate the date format you selected when the photos were copied.

## Language

Lets you choose one of ten languages.

## Chapter 8

# Maintenance and Troubleshooting

This chapter describes how to clean the viewer and solve problems.

## Cleaning the Viewer




Follow these guidelines to clean the viewer:

- Turn off the viewer and unplug the AC adapter before cleaning.
- Use a clean, dry cloth to wipe it clean.
- Do not use harsh or abrasive cleaners.

## Error Messages

When a problem occurs, an error message or icon may appear on the LCD. Refer to the following table to diagnose an error message. For more assistance, see “Problems and Solutions” on page 75.

Error message	Description
Unable to access file.	Wait until the memory card access light turns off, then reinsert the memory card and try again.
An error occurred during verification. Files were not deleted from the memory card.	Some files failed to be copied. Check the files and try again.
Cannot access the hard drive. There may be a problem with the hard drive, or it may not be formatted as FAT32.	Backup all the data to the computer and contact Epson as described in “Where To Get Help” on page 80.


Error message	Description
No response from the printer. Please check the printer.	Make sure your printer is on and the USB cable is connected correctly. Check the printer's manual to make sure it's PictBridge-compatible.
	Turn off the viewer and wait until it cools down.
	The battery power is running out. Charge the battery. For details, see "Charging the Battery" on page 11.
 Press Reset	Press the reset button. See "Resetting the Viewer" on page 79.

## Problems and Solutions

Use the information in this section to diagnose problems and find solutions.

### Power Problems

#### The power does not turn on.

Cause	What to do
The battery has run out.	When the  icon appears on the top right corner of the LCD, the battery has run out. See "Charging the Battery" on page 11.
The battery is not installed correctly.	Make sure the battery is installed correctly. See "Installing the Battery" on page 11.
The viewer may have shut off automatically to save battery power.	Slide the power switch down to turn the viewer back on.
The battery may need to be replaced.	See "Replacing the Battery" on page 80.

## File Viewing Problems

### The image is not displayed.

Cause	What to do
The image format is not supported.	If an image doesn't appear or appears as ?, it may not be in a supported file type. See "Supported Image Formats" on page 27.
The image data is corrupted.	Copy the image again.
The video or audio file is not supported.	See "Supported Video Formats" on page 32 or "Supported Audio Formats" on page 38.
The LCD is too dark.	Adjust the LCD brightness. See "LCD Settings" on page 73. The screen may have turned off automatically to save power. Press any button to turn the screen on. If you've connected the viewer to your TV or computer, the LCD screen turns off.

You've connected the viewer to your TV and the image is cut off or flickering.

Some TVs may crop your images at the top and bottom, or you may notice some flickering near the edges of the screen. This is a normal result of your viewer's high image resolution.

### The video is not displayed clearly or stops abruptly.

Cause	What to do
The bit rate of the video is too high.	Check the bit rate. See "Supported Video Formats" on page 32 for details.

### Sound breaks off when the video or audio is played.

Cause	What to do
The bit rate of the file is too high.	Check the bit rate. See "Supported Video Formats" on page 32 or "Supported Audio Formats" on page 38 for details.



### No sound comes out when a video is played.

Cause	What to do
The Audio Codec of the file is not supported.	Check the file format. See “Supported Video Formats” on page 32 or “Supported Audio Formats” on page 38 for details.

## File Operation Problems

### You cannot copy a file or files.

Cause	What to do
There is not enough space available on the hard drive to copy all of the files on the memory card.	Check the hard drive space. See “Device Information” on page 70. Delete unnecessary files or reduce the number of files to copy from the memory card.
The viewer’s hard drive space doesn’t increase, even though data has been deleted.	If you’ve connected the viewer to your computer, it’s best to delete files using the Link2 software, or data may not be removed completely. Check the Recycle Bin (Windows) or Trash (Macintosh) and empty it to clear any files.

You cannot copy files from an external USB device.	Connect the AC adapter to the viewer. If the external USB device has its own power adapter, connect it too.
--	---

### You cannot delete a file.

Cause	What to do
The file is locked.	Unlock the file and then delete it. See “Locking Files and Folders” on page 57 and “Deleting Files and Folders” on page 55.

### You cannot use the buttons on the viewer.

Cause	What to do
The buttons are deactivated because the power switch is set to Hold.	Slide the power switch back to the middle position.

### You cannot set/unset a folder as private.

Cause	What to do
The password is incorrect.	If you forget the password, enter 5555, 7777, then 3333 to reset it to the default (0000).

## Printing Problems

### You cannot print.

Cause	What to do
The printer is not supported.	Make sure your printer is supported. See page 60.
The printer's power is off.	Turn on the printer.
The USB cable is not connected correctly.	See "Connecting the Viewer to a Printer" on page 60 and reconnect the cable.
You cannot print a JPEG image.	Make sure the JPEG image does not exceed 4600 pixels in either the vertical or horizontal direction.


## Updating the Firmware and Printer Driver

Epson will occasionally update the viewer firmware. You can download the latest firmware for the viewer from Epson's [support website](#). Instructions for updating the firmware are provided online.

## Uninstalling Software

If you need to uninstall the Epson Link2 software, follow the procedure below for Windows or on page 79 for Macintosh.

### Windows

- 1 Click  or **Start**, point to **All Programs** or **Programs**, then select **EPSON**. Select **Epson Link2**, then click **Uninstaller**.

#### **Note:**

For Windows Vista, when you see the User Account Control screen, click **Allow**.

- 2 After the confirmation dialog box appears, click **Yes**.

- 3** When you see a message that the uninstall is complete, click **Finish**.
- 4** If you see a message asking you to restart, click **Restart Now**.


## Macintosh

- 1** Connect the viewer to your Macintosh.
- 2** Double-click the **P-6000** drive on your desktop.
- 3** Double-click the installation software icon.
- 4** Select **Custom Install**.
- 5** Select **Epson Link2**.
- 6** On the software installation screen, select **Uninstall**.
- 7** When you see a message asking you to restart, click **Restart Now**.

## Resetting the Viewer

If the viewer stops working, or you want to restore its default settings, you can reset it.

Gently insert the end of a paper clip into the **Reset** button next to the viewer's USB ports.

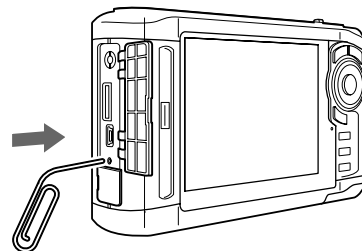

The viewer shuts off, resets to its default settings, and comes back on.

## Replacing the Battery

You can purchase a replacement lithium-ion battery (B32B818262) from an Epson authorized reseller.

To find the nearest reseller, call 800-GO-EPSON (800-463-7766). Or you can purchase online at [www.epsonstore.com](http://www.epsonstore.com) (U.S. sales) or [www.epson.ca](http://www.epson.ca) (Canadian sales).

## Where To Get Help

Epson provides these technical support services:

### Internet Support

Visit Epson's [support website](#) for solutions to common problems with your viewer. You can download software and documentation, get FAQs and troubleshooting advice, or e-mail Epson with your questions.

## Speak to a Support Representative

Before you call Epson for support, please have the following information ready:

- Product name (Epson P-6000)
- Product serial number (located on the bottom of the viewer)
- Proof of purchase (such as a store receipt) and date of purchase
- Computer configuration
- Description of the problem

Then call:

- U.S.: (562) 276-4303, 6 AM to 6 PM, Pacific Time, Monday through Friday.
- Canada: (905) 709-3839, 6 AM to 6 PM, Pacific Time, Monday through Friday.

Days and hours of support are subject to change without notice. Toll or long distance charges may apply.

## **Appendix A**

# **Notices and Specifications**

### **System Requirements**

#### **Windows System Requirements**

To use your viewer software, your system should have:

- A Microsoft® Windows compatible PC with a Pentium® III processor (1 GHz or faster recommended)
- Microsoft Windows 2000 Professional (SP3 or later), Windows XP, Windows XP Professional x64 Edition, or Windows Vista.
- At least 256MB RAM
- 100MB free hard disk space for installation (1GB or more recommended), 2GB required for operation
- SVGA monitor (800 × 600), 16-bit color or higher
- USB type A port

#### **Macintosh System Requirements**

To use your viewer software, your system should have:

- 700 MHz G4 processor or higher (PowerPC® or Intel®)
- Macintosh OS X 10.3 to 10.5.x
- At least 512MB RAM
- 150MB free hard disk space for installation (1GB or more recommended), 2GB required for operation
- SVGA monitor (800 × 600), 32,000 colors or more
- USB type A port

## Safety Instructions

Read all these instructions before using the viewer, and keep this guide handy for later reference. Follow all warnings and instructions marked on the viewer and any options.

### Using the Viewer

#### Caution:

Do not drop the viewer or expose it to any impact to avoid damaging the internal hard disk and losing stored files. Do not format the hard disk from your computer or the viewer will be unusable.

Epson is not responsible for backing up or recovering data. It is strongly recommended that you make your own backup files.

- Follow all warnings and instructions marked on this product.
- Use only AC adapter model A351H and lithium-ion battery model D111A with this product.
- When connecting the viewer to a computer or other device with a cable, ensure the correct orientation of the connectors. Each connector has only one correct orientation. Inserting a connector in the wrong orientation may damage both devices connected by the cable.
- Do not insert objects into the slots or openings on the viewer.
- Do not touch the components inside the viewer unless instructed to do so in the documentation. Never force the viewer's components into place. Although the viewer is designed to be sturdy, rough handling can damage it.
- Never spill liquid onto the viewer.
- If the viewer emits unusual noises, odors, or smoke, cancel the current operation and turn it off immediately. Remove the battery and disconnect the AC adapter from the viewer, then unplug the AC adapter from the power outlet. Contact Epson.
- Do not use your headphones for long periods at high volume as this can cause permanent hearing loss.
- Do not use your headphones while operating a vehicle or performing an activity that requires attention to external sound. When wearing your headphones, we strongly recommend setting the volume so that you can hear your normal speaking voice.
- Do not stand the device upright as it may fall over and be damaged.
- Do not use the viewer after moving it between extreme temperatures, which may cause condensation to form on electronic parts.

- If you use the viewer in places where the use of electronic devices is limited, such as in airplanes or hospitals, follow all instructions in those places.
- Do not use the viewer outdoors during a thunderstorm.
- To prevent fire or electric shock, do not cover the viewer with a blanket or other covering that may give off a static electric shock.
- To prevent fire or electric shock, do not expose the viewer or its options to rain or moisture.
- To prevent fire or explosion, do not use the viewer where flammable or volatile gas is stored.

## Using the Battery

### Caution:

There is a risk of explosion if the battery is replaced by the incorrect type. Use the specified new batteries only. Dispose of used batteries according to the instructions.

- If battery acid gets into your eyes or on your skin, immediately rinse the affected area thoroughly with water and seek medical treatment. If a battery is swallowed, seek medical treatment immediately.
- Use only an Epson lithium-ion battery for the viewer according to the instructions in this manual.
- Use only AC adapter model A351H and the viewer (Model G961A/G961B) to charge batteries.
- Do not use the battery that comes with the viewer for other devices.
- To protect against short-circuiting, do not remove the outside sleeves of the battery.
- Do not handle the battery with wet hands or use it near water.
- Do not expose the battery to water or high humidity.
- Do not drop, puncture, disassemble, mutilate, or short-circuit the battery.
- Do not place the battery near or into fire or water.
- Do not use batteries that are leaking or damaged in any way.
- Do not charge the battery on devices except the viewer.
- Do not charge the battery near open flame or in very hot locations.
- Keep batteries away from heat sources.
- Do not leave the battery in a vehicle to prevent the battery from overheating.
- Do not insert objects into any openings as they may touch dangerous voltage points or short-circuit components.

- Prevent the battery from coming into contact with metal objects that could short-circuit it, such as coins or keys.
- Do not insert the battery into power outlets or other power sources such as car cigarette lighter sockets.
- Do not solder wires or terminals directly to the battery.
- Do not touch battery terminals.
- Keep batteries away from open flame if they leak or smell strange.
- If overheating, discoloration, or distortion occur, remove the battery from the viewer and do not use it.
- Charge the battery before using it if it has not been used for a long period.

## Storing the Battery

- When not using this device for a long period, remove the battery from the viewer and store it separately.
- Do not store batteries where the temperature or humidity is very high.
- Store batteries out of children's reach.

## Disposing of the Battery

Before disposing of the battery, make sure you discharge it completely.

### Warning:

Be sure to securely cover the end of the battery with tape to prevent combustion or explosion when disposing.

Do not incinerate or dispose of the battery in fire.

Do not dispose of batteries as ordinary refuse. Instead, dispose of them in a collection or recycle box in accordance with local laws.

For users in the U.S. and Canada:



This mark indicates that the battery will be recycled by the RBRC. When you are ready to dispose of the battery, contact the RBRC at (800) 822-8837.

## Using the AC Adapter

- Use only the type of power source indicated on the AC adapter's label, and always supply power directly from a standard, domestic power outlet with a power cord that meets the relevant local safety standards.
- Place the AC adapter near an electrical outlet where the power cord can be easily unplugged.



- The AC adapter and power cable provided are designed for use with the viewer. Do not attempt to use them with other electronic devices unless specified.
- Do not remove the AC adapter from this device during operations (connecting the AC adapter during operations is possible).
- The AC adapter included is designed for use with the viewer. Use of any other adapter could result in fire, electrical shock, or injury.
- Use only AC adapter model A351H with the viewer.
- Do not connect the AC adapter when the battery is not installed. Otherwise, the viewer may be damaged.
- Use only the power source that meets the power requirements indicated on the label attached to the product. If you are not sure of the power supply specifications in your area, contact your local power company or regulatory agency.
- Make sure the total amperage of all devices plugged into the power outlet does not exceed the power outlet's ampere rating.
- If you use an extension cord with the viewer, make sure the total amperage of all devices plugged into the extension cord does not exceed the cord's amperage rating.
- Do not use a damaged or frayed AC adapter.
- Never disassemble, modify, or attempt to repair the AC adapter by yourself.
- Do not use power outlets controlled by wall switches or automatic timers.
- Do not use power outlets on the same circuit as large motors or other appliances that may cause voltage fluctuations.
- Avoid using outlets on the same circuit as photocopiers or air control systems that regularly switch on and off.
- To prevent fire or electric shock, do not cover the AC adapter with a blanket or similar covering.
- Position the viewer's power cord so that it will not be stepped on or run over.
- Do not place any objects on the power cord or the AC adapter.
- Keep the power cord straight at the ends and at the points where it enters the transformer.
- The power cord should be placed to avoid abrasions, cuts, fraying, crimping, kinking, and other damage.
- If you cannot insert the plug into the power outlet, contact an electrician.

- Remove the AC plug from the outlet during lightning storms.

## Using a Memory Card

- Use only memory cards designed for the product's specifications. (See page 17 for details.)
- The methods for using memory cards vary according to card type. See the documentation included with your memory card for details.
- Do not remove a memory card or turn off the product while the memory card access light is flashing.

## Using the LCD

- The LCD panel on the viewer may contain a few small bright or dark spots. These are normal and do not mean that your LCD panel is damaged in any way.
- If the LCD panel on the viewer is damaged, contact Epson.

- If the liquid crystal solution contained in the LCD panel on the viewer leaks out and gets onto your hands, wash them thoroughly with soap and water. If it gets into your eyes, flush them immediately with water. If discomfort or vision problems remain after a thorough flushing, see a doctor immediately.
- Use only a soft, dry cloth to clean the display. Do not use liquid or chemical cleaners.

## Storing, Maintaining, or Transporting the Viewer

- Do not store the viewer outdoors.
- Do not store the viewer near water.
- Do not store the viewer in a location subject to high temperature or humidity.
- Do not store the viewer in a location subject to rapid changes in temperature or humidity.
- Do not store the viewer in a location subject to direct sunlight or strong light sources.
- Unplug the viewer from the power outlet before cleaning it. Use a damp cloth for cleaning and do not use liquid or aerosol cleaners.

- Remove the battery, unplug the viewer, and refer servicing to qualified service personnel under the following conditions: The power cord or plug is damaged; liquid has entered the viewer or its options; the viewer or its options have been dropped or the case is damaged; the viewer or its options do not operate normally or exhibit a distinct change in performance.

**WARNING:** The cords included with this product contain chemicals, including lead, known to the State of California to cause birth defects or other reproductive harm. **Wash hands after handling.** (provided in accordance with Proposition 65 in Cal. Health & Safety Code § 25249.5 and following)

## Standards and Approvals

### Epson P-6000

EMC:	FCC Part 15 Subpart B Class CAN/CSA-CEI/IEC CISPR22 Class B
------	--

### AC Adapter (Model A351H)

Safety:	UL60950 CSA C22.2 No. 60950
EMC:	CAN/CSA-CEI/IEC CISPR22 Class B

### Battery (Model D111A)

Safety:	UL2054
---------	--------

# Specifications

## General

LCD	Size:	4.0 inches
	Pixels:	640 × 480
	Colors:	Approx. 16,770,000
HDD	2.5 inch HDD, 80GB, (73.8GB FAT32 available for storage)	
Dimensions (without projections) and weight	Height:	3.5 inches (88.7 mm)
	Width:	5.9 inches (150 mm)
	Depth:	1.3 inches (33.1 mm)
	Weight: (approx.)	15.1 oz (428 g), including battery
Temperature	Operating (or charging):	41 to 95 °F (5 to 35 °C)
	Non-operating:	−4 to 140 °F (−20 to 60 °C)
Humidity (without condensation)	Operating:	30 to 80%
	Non-operating:	10 to 80%

Altitude	Operating:	9,842 feet or less
	Non-operating:	39,370 feet or less
Memory card	CompactFlash memory card (Type2/ 3.3V, including Microdrive); SD memory card, SD High-Capacity Card, MultiMedia Card, MultiMedia Card Plus	
	<b>Note:</b> A commercially available CF adapter is needed to use other memory cards (see page 17).	
Power sources	Lithium-ion battery (Model D111A) AC adapter (Model A351H)	
Battery life (when fully charged)*	Approx. 3 hours when playing a slide show (default settings)	
	Approx. 3 hours when playing video (MPEG4, 2 Mbps, using headphones)	
	Approx. 6 hours when playing audio (MP3, 128 kbps, using headphones)	

\* Times may vary depending on the memory card being used, the number of files, ambient temperature, and other factors.

## Electrical

Input voltage	DC 5.0 V
Rated current	Maximum 2.3 A
Power consumption	6.3 W (when using the battery) 7.9 W (when using the AC adapter)

## Interface

USB connector	Two USB 2.0 (Mass Storage Class) interfaces, Full-Speed and High-Speed mode Host: Standard A Device: Mini-B
A/V Out connector	Quadruple mini pin jack (Ø 3.5 mm)
Headphone Out connector	3-pole mini pin jack (Ø 3.5 mm)
CF Card slot	One slot (Type2/3.3V) for CompactFlash or Microdrive memory cards  <b>Note:</b> A commercially available CF adapter is needed to use other types of memory cards (see page 17).
SD Card slot	One slot for SD memory card or MultiMedia card

## Battery

Type	Rechargeable lithium-ion battery
Model	D111A
Size (H × W × D)	0.88 × 0.80 × 2.78 inches (22.45 × 20.4 × 71 mm)
Ratings	3.7 V, 2600 mAh
Temperature	Storage: -4 to 104 °F (-20 to 60 °C)  Keep the battery in a cool place when storing for a long period.

## AC Adapter

Model	A351H
Input	AC 100 to 240 V, 50 to 60 Hz, 0.3 to 0.1 A
Output	DC 5.0 V, 2.3 A
Power consumption	Maximum 18 W

## Optional Accessories

Type	Lithium-ion battery, D111A
Product code	B32B818262
Type	Multimedia Viewer Travel Pack
Product code	B32B818281

# Index

## A

A/V Out connector, 9, 34

AC adapter

- connecting, 12

- connector, 9

- safety, 84 to 86

- specifications, 89

- standards, 87

Activity light, 13

adapter, memory card, 17

AdobeRGB, 30, 71

Audio

- conversion, 48

- copying files to viewer, 36 to 37

- creating playlist, 40 to 42

- deleting files, 43

- equalizer, 43

- file formats, 38

- playing, 38 to 43

- problems, 76 to 77

- repeat and shuffle, 40

## B

Backing up

- from memory cards, 20 to 22

- preferences, 47

- to/from USB devices, 50 to 51

- to computer, 44 to 46

Backup Files icon, 15

Battery

- charging, 11 to 12

- cover, 9

- disposing of, 84

- icon, 12

- installing, 11

- removing, 12

- replacing, 80

- safety, 83 to 84

- specifications, 89

Beep settings, 73

Bit rate

- audio, 38

- video, 32

## Buttons

- locking, 14
- using, 10

## C

### Cable

- USB, 44 to 46, 60 to 61
- video, 34

### Charge light, 11

### Charging the battery, 11 to 12

### Cleaning the viewer, 74

### Codec, 32

### Color space, 30, 71

### CompactFlash

- adapter, 17
- card slot, 9, 18
- icon, 15

### Computer

- connecting to, 36, 44
- disconnecting from, 37, 46

### Connecting

- computer, 36, 44
- printer, 60 to 61
- TV or projector, 34
- USB devices, 49

## Copying

- files from memory cards, 20 to 22
- files to/from computer, 44 to 46
- files to/from USB devices, 49 to 52
- problems, 77

## Customizing settings, 70 to 73

## D

### Date and time, setting, 13 to 14, 73

### Deleting

- audio files, 43
- files and folders, 55

### Device USB connector, 9, 36, 44 to 46, 60 to 61

### Direct printing, 60 to 69

### Display button, 29

### Display modes, video, 34

### Display Photo Enhance, 30

### DNG files, 27

## E

### Eject button, 9

### Electrical specifications, 89

### Epson

- Link2, 37, 40, 44 to 48
- printers, 60
- purchasing battery, 80
- technical support, 80



Equalizer, 43  
Error messages, 74 to 75  
Exif, 29

## F

File formats  
    audio, 38  
    image, 27  
    video, 32  
File Operation settings, 72  
Files  
    copying from memory card, 20 to 22  
    copying to/from computer, 44 to 46  
    copying to/from USB devices, 49 to 52  
    deleting, 55  
    locking, 57  
    problems copying, 77  
    problems viewing, 76  
    rating, 58  
Firmware, updating, 78  
Firmware version, 70

## Folders

    changing display, 25  
    copying files to, 21 to 22  
    creating, 22 to 23  
    deleting, 55  
    locking, 57  
    renaming, 54  
    setting as private, 52 to 53  
    setting as screen saver, 58  
    setting icon, 58

## H

Hard drive capacity, 70  
Headphones  
    connector, 9  
    using, 38  
Histogram, 29  
Hold icon, 15  
Home screen, 15  
Host USB connector, 9, 49

## I

ID3 tags, 37

Images

- copying to folder, 22 to 23
- displaying as a slide show, 30
- displaying information, 29
- display problems, 76
- file formats, 27
- printing, 60 to 69
- rating, 58
- rotating, 31, 71
- viewing, 27 to 31
- zooming, 28

Installing battery, 11

Interface specifications, 89

## J

JPEG files, 27

## L

Language setting, 13, 73

LCD, 9, 76, 86

Lights, 10

Link2 software

- backing up files, 45
- copying files, 44 to 46
- creating playlist, 40
- setting preferences, 47
- transferring music files, 37

Locking

- buttons, 14
- files and folders, 57

## M

Macintosh

- disconnecting from, 46
- system requirements, 81

Maximum bit rate, video, 32

Memory card

- access light, 16
- adapter, 17
- copying files, 20 to 22
- safety instructions, 86
- types, 17

- Memory Card icon, 15
- Memory Stick, 17
- Menu options, 25 to 26
- Metadata, 29
- Microdrive, 17
- Movie Settings, 72
- MultiMedia card, 17
- Music
  - conversion, 48
  - copying to viewer, 36 to 37
  - creating playlist, 40 to 42
  - deleting files, 43
  - equalizer, 43
  - file formats, 38
  - playing, 38 to 43
  - repeat and shuffle, 40

## O

- Overexposure preview, 29

## P

- Password, 53
- Photo Enhance, 30
- Photos, *see* Images
- PictBridge, 60

- Playing
  - music, 38 to 43
  - videos, 32 to 34
- Playlist
  - creating, 40 to 42
  - modifying, 42
- Pop-up menu, 25 to 26
- Power
  - problems, 75
  - saving, 16, 71
  - switch, 9
  - turning off, 16
  - turning on, 13
- Printing
  - photos, 60 to 69
  - problems, 78
- Private folders, 52
- Problems
  - audio and video, 76 to 77
  - copying and deleting files, 77
  - power, 75
  - printing, 78
  - solving, 74 to 78
  - viewing files, 76
- Projector, connecting to, 34
- Protecting files, 57

## R

- Rating photos, 58
- RAW files, 27
- Reset button, 9, 79
- Resetting the viewer, 79
- Rotating images, 31

## S

- Safety instructions, 82 to 87
- Screen icons, 24
- Screen saver, 58
- Secure Digital
  - cards, 17
  - card slot, 9, 19
  - icon, 15
- Settings
  - customizing, 70 to 73
  - Date and time, 13 to 14, 73
  - icon, 15
  - Language, 13, 73
- Slide show
  - creating, 30
  - settings, 72
- Sound
  - problems, 76 to 77
  - settings, 73
- Speaker, 9

## Specifications

- AC adapter, 89
- battery, 89
- electrical, 89
- general, 88
- interface, 89
- standards and approvals, 87
- sRGB, 30, 71
- Status and error messages, 74 to 75
- Support, technical, 80
- System requirements, 81

## T

- Technical support, 80
- Time, setting, 13 to 14
- Troubleshooting
  - audio and video problems, 76 to 77
  - error messages, 74 to 75
  - file operation problems, 77
  - file viewing problems, 76
  - power problems, 75
  - printing problems, 78
- Turning off power, 16
- Turning on power, 13
- TV, connecting to, 34

## U

Underexposure preview, 29

Updating firmware, 78

USB

- cable, 36, 44 to 46, 60 to 61

- connectors, 9

USB devices

- connecting, 49

- copying files, 49 to 52

- types, 48

## V

Video

- codec, 32

- conversion, 48

- display modes, 34

- file formats, 32

- playing, 32 to 34

- problems, 76 to 77

- screen size, 33

- selecting NTSC or PAL, 71

- settings, 72

## W

Wallpaper, 58

Windows

- disconnecting from, 46

- system requirements, 81

## X

xD-Picture card, 17

## Z

Zooming images, 28