

EPSON Stylus® Photo 925

Start Here




CPD-14609

1 Unpack


1 Remove everything from the box.



2 Remove all the tape and packing material from the printer.

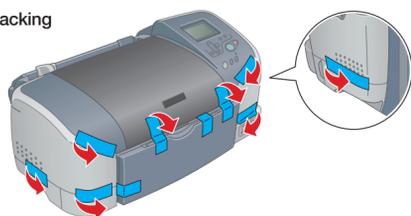


3 Open the output tray and lift the printer cover. Then remove the tape and insert.

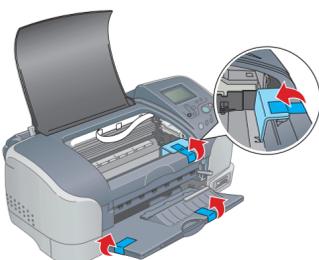


2 Attach the Paper Holders

1 Insert the paper support into the slots in the back of the printer.

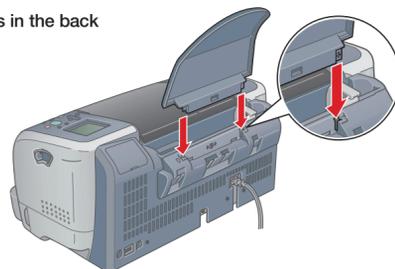

2 Insert the tabs on the roll paper holders into the slots at the back of the printer.

Note: For instructions on using the roll paper holders, see your Printer Basics book.

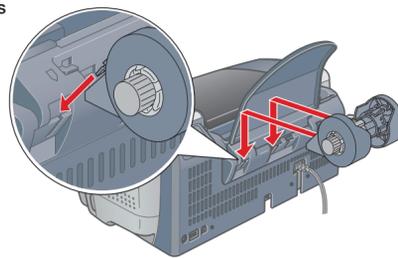


3 Connect the Printer

You need a USB cable (not included) to connect your printer to your computer.

1 Shut down your computer. In Windows®, click **Start** and select your **Shut Down** or **Turn Off** option.

Leave your computer turned off until section 7.


2 Plug the square end of the cable into your printer's USB port.

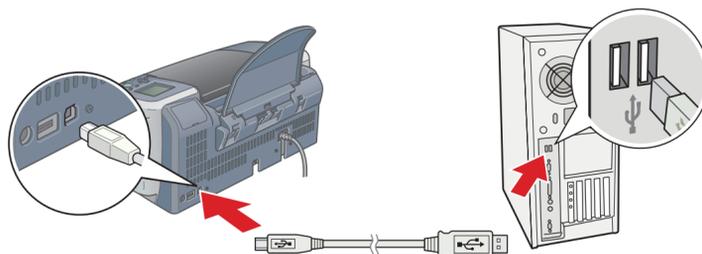

3 Plug the flat end of the USB cable into any available USB port on your computer.


4 Turn On the Printer

1 Plug the printer's power cord into a grounded electrical outlet.

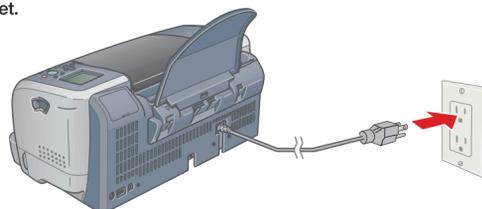

2 Press the silver power button to turn on the printer.

Caution: Never use an external switch, such as a wall switch or power strip switch, to turn the printer on or off.

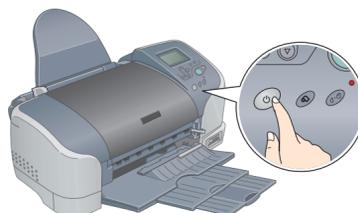

5 Install the Ink Cartridges

1 Open the output tray.

2 Lift the printer cover.

3 Unwrap the ink cartridges and pull off the yellow tape seals.

Caution: Install both ink cartridges, and leave them installed for all types of printing, or the printer won't work.

4 Lift up both ink cartridge clamps.

5 Tilt each cartridge toward you as you lower it into the holder. Make sure the tabs rest on the hooks in the back.

6 Lower the clamps so they snap shut.

7 Press the Maintenance button and close the printer cover.

Caution: Don't turn off the printer or interrupt charging while the light is flashing or you'll waste ink.

A progress bar is displayed in the LCD panel during ink charging. It takes about 2 minutes.

8 After ink charging is finished, press the custom button 1.







6 Load Paper

1 Load some paper against the right side of the sheet feeder.

2 Slide the left edge guide against the paper.

3 Pull out the output tray extensions.

Note: For instructions on loading and printing on roll paper, see your Printer Basics book.

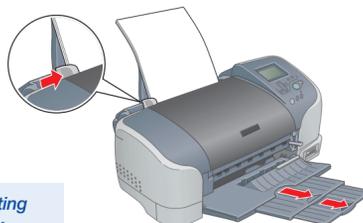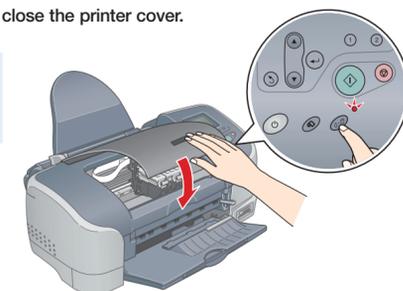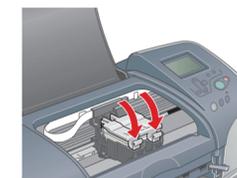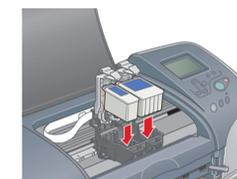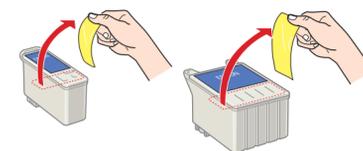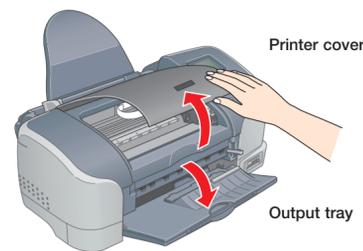

7 Install Software

Windows

The installation works differently depending on the version of the Windows you're using.

If you're using Windows Me or 2000, see "Installing Your Printer Software" in the *Printer Basics* book for instructions.

If you're using Windows XP or 98, carefully follow the appropriate steps below.

Windows XP

1 Make sure your printer is connected and turned on. Then turn on your computer.

2 Wait for Windows XP to detect your printer connection and display a screen like this:

Note: If this screen doesn't appear, make sure your printer is turned on and connected.

3 Put the EPSON® CD-ROM in your CD-ROM or DVD drive and wait a few seconds for the CD-ROM to be recognized.

Your software installs automatically and various messages appear on the screen.

4 Click **Finish**. You see another New Hardware Wizard screen.

5 Click **Next**. More software is installed.



6 Click **Finish**. You see this message.

7 Click **OK**.

8 When you see the license agreement, click **Agree**.

9 When you see this screen, click **Continue**.

Now go to "Installing Optional Software" in the next column.

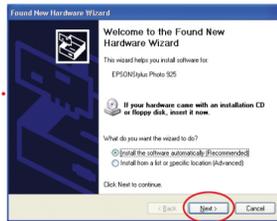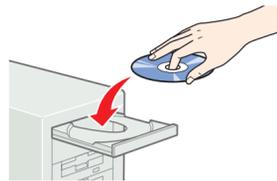

Windows 98

1 Make sure your printer is connected and turned on. Then turn on your computer.


2 Wait for Windows 98 to detect your printer connection and display a screen like this:

DON'T CLICK ANY BUTTONS ON THE SCREEN YET.

Note: If this screen doesn't appear, make sure your printer is turned on and connected.

3 Put the EPSON CD-ROM in your CD-ROM or DVD drive and wait a few seconds for the CD-ROM to be recognized.


4 Click **Next** on the Add New Hardware Wizard screen.

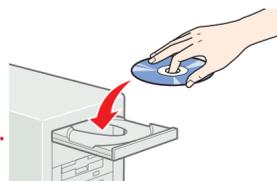

Continue in next column

Windows 98 (continued)


5 Click the **Search for** option, then click **Next**.

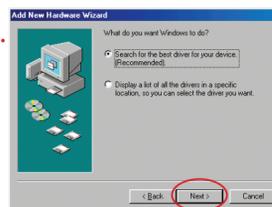

6 Click **CD-ROM drive**, then click **Next**.



7 At this screen, click **Next**.

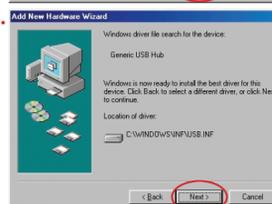

8 The installation proceeds automatically. When installation halts, click **Finish**.



Your computer detects your printer and you see a screen like this:

9 Continue clicking **Next** or **Finish**. The installation proceeds automatically.

10 At the final Add New Hardware Wizard screen, click **Finish**. You see this message.




11 Click **OK**. When you see the license agreement, click **Agree**.

12 When you see this screen, click **Continue**. Additional software is installed, then you see the EPSON PhotoStarter Setup screen.



13 Click **Next** and follow the on-screen instructions. Do the same thing when you see the EPSON CardMonitor Setup.

14 When setup is complete, select **Yes** to restart your computer and click **Finish**. Leave in the CD-ROM as your computer restarts.

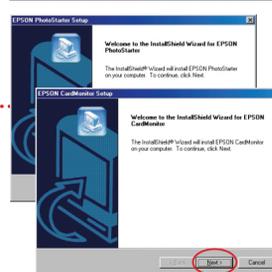

Continue with the steps below to install optional software.

Installing Optional Software

1 At the Optional Software menu, click the button for each program to learn more about it. If you want the program, click **Install** and follow the instructions on the screen.



2 If you see a message about installing QuickTime®, click **Yes** and follow the on-screen instructions. You don't need a registration number.

3 When you're finished installing software, close any open windows.

4 Click **Exit**.

5 When you see the registration screen, register your printer with EPSON as instructed. Remove the CD-ROM and keep it in case you need to reinstall any software later.

You're ready to print! See section 8.

Macintosh OS 8.5.1 to 9.x

If you're using Macintosh® OS X, see "Installing Your Printer Software" in the *Printer Basics* book for instructions.

1 Make sure your printer is connected and turned on. Then turn on your Macintosh. If you see this screen, click **Cancel**.



2 Put the EPSON CD-ROM in your CD-ROM or DVD drive.



3 Double-click **EPSON** on your desktop, if necessary, then double-click **EPSON** in the window that opens.

4 Read and agree to the license agreement to continue the installation.


5 Click **Install Printer Driver and Utilities** and follow the on-screen instructions to install the software and restart your Macintosh.



6 After your Macintosh restarts, register your printer with EPSON as instructed.

7 Open the **Chooser** from the Apple® menu.

8 Select **SP 925**, and select your **USB port**.

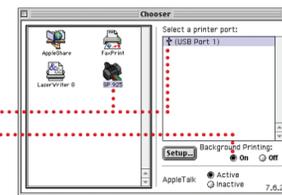

Turn on background printing, then close the Chooser.

9 Double-click **EPSON** in the window on your desktop again. You see the Install Menu again.

10 Click **Install Optional Software**. You see this screen.



11 Click the button of each program to learn more about it. If you want the program, click **Install** and follow the instructions on the screen.

Note: Some of the optional software requires Macintosh OS 8.6.

12 If you see a message about installing QuickTime, click **Yes** and follow the on-screen instructions. You don't need a registration number.

13 When you're finished installing software, close any open windows and click **Back** to return to the Install Menu.

14 Click **Install Printer Manual**.

15 When you're finished, click **Exit**. Remove the CD-ROM and keep it in case you need to reinstall any software later.


You're ready to print! See section 8.

8 Print

Now you're ready to print. For instructions, use these resources:

• Your *Printer Basics* book

Learn about loading paper, printing, maintaining your printer, solving problems, and contacting EPSON.

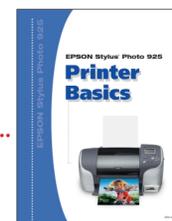

• Your *Quick Reference* booklet

See how easy it is to print without a computer.



• Your on-screen *Reference Guide*

Click the **Printer Manual** icon on your desktop to view more information about your printer.

EPSON and EPSON Stylus are registered trademarks of SEIKO EPSON CORPORATION.

General Notice: Other product names are for identification purposes only and may be trademarks of their respective owners. EPSON disclaims any and all rights in those marks.

♻️ Printed on recycled paper.

Copyright © 2002 by Epson America, Inc. 7/02

Printed in USA