

EPSON Stylus® Photo 925

# Quick Reference

## Printing Without a Computer



CPD-14610

# Using This Guide


Your EPSON Stylus Photo 925 lets you print without even connecting a computer. It's as easy as following these steps:

- Turn on the printer
- Connect your camera or insert its memory card (pages 3 and 4)
- Select your photos (page 6) and print settings (page 8)
- Load paper (page 5 for sheets or page 12 for roll paper)
- Print your photos


For more details on printing—with or without a computer—see *Printer Basics*.

## Keeping This Guide Handy

Use the hook that came with this guide to hang it on the side of your printer. ....

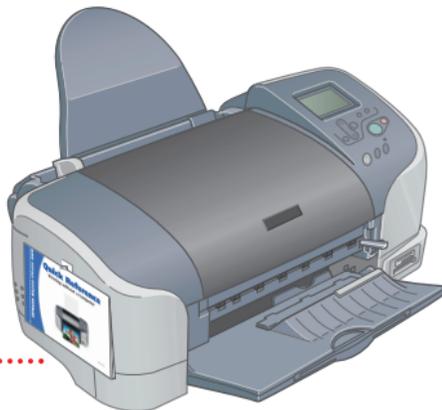

# Using the Control Panel

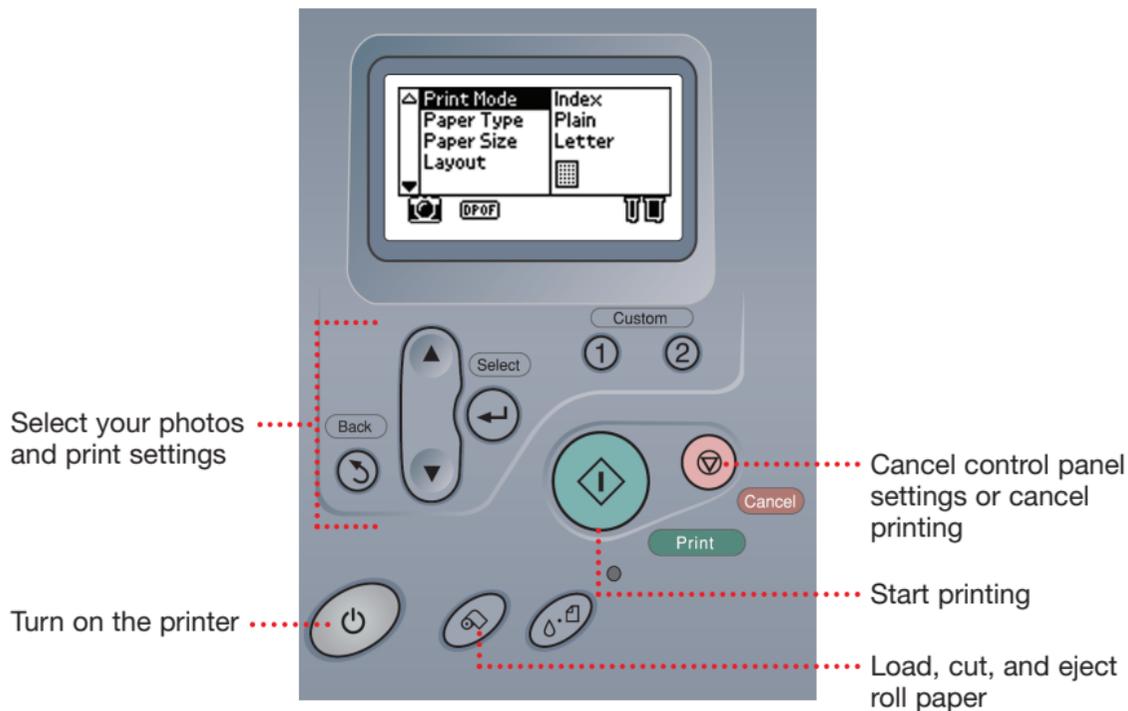

# Inserting a Memory Card

1. Insert the memory card into the appropriate slot, as shown:



SmartMedia™  
(top)




Memory Stick®  
(middle)



CompactFlash™ or  
Microdrive™ (bottom)

**Note:** If you're using a Memory Stick or SmartMedia card, it won't be possible to insert it fully; this is normal.

2. The printer checks for images on the card. After a moment, you see a screen similar to this and your images are available for printing. ....

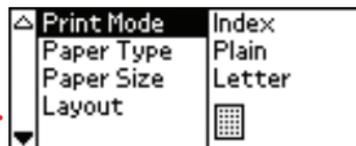


**Caution:** Do not eject a card while the light next to the card slot is flashing, or you may lose data on the card.


If your computer is connected to the printer, do the following before ejecting the card.  
Windows XP or 2000: Click the Unplug or Eject Hardware icon on the taskbar, then stop the EPSON Mass Storage Device. Macintosh: Drag the memory card icon to the trash.

# Connecting a Digital Camera

1. Remove any memory cards from the printer.
2. Connect the USB cable from your camera to the back of the printer. Some digital cameras require a special USB cable; if so, be sure to use the one that came with the camera.

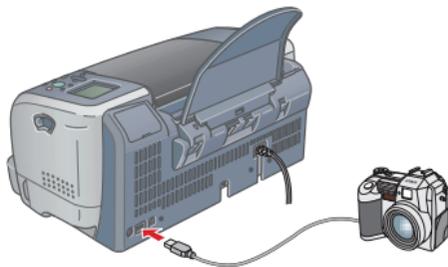

3. Make sure the printer and your camera are turned on. The printer checks for images on the card. After a moment, you see a screen similar to this and your images are available for printing. ....

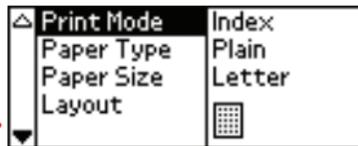


**Note:** Not all cameras are compatible. If necessary, remove the camera's card and insert it in the printer as described on page 3.

# Printing an Index


An index shows small, numbered images of all the photos on your memory card. This helps you select the photos you want to print.

1. Load several sheets of plain paper in the printer:
  - Place the paper against the right edge of the feeder.
  - Slide the left edge guide against the paper.
2. Press the  **Cancel** button to clear any settings you may have made. **Index** is automatically selected as the Print Mode setting:

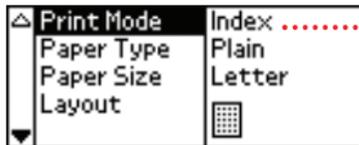

Index is automatically selected

3. Press the  **Print** button. Your index starts printing.

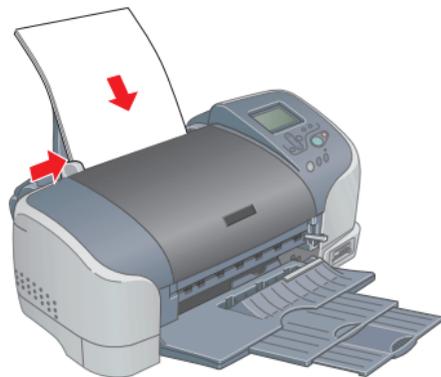

# Selecting Photos to Print

You can select one photo or a set of photos for printing. If you don't have the optional preview monitor, first print an index as described above.



## Selecting One Photo

1. Press the  **Cancel** button to clear any previous settings.
2. Highlight **Print Mode**, then press the  **Select** button.

3. In the Print Mode menu, use the  and  buttons to highlight **One**, then press  **Select**.



4. Highlight the **Select Photo** menu, then press the  **Select** button. Use the  and  buttons to select the photo you want to print, then press  **Select**.



Be sure to select your paper type and layout options before printing. See page 8.

## Selecting a Set of Photos

1. Press the  **Cancel** button to clear any previous settings.
2. Highlight **Print Mode**, then press the  **Select** button.
3. In the Print Mode menu, highlight **Set** then press  **Select**.




**Note:** If you want to print all your photos, select All as the Print Mode.



4. Use the  button to highlight the **Select Photo** menu, then press  **Select**.
5. Highlight **Select**, press  **Select**, then press  **Select** again.
6. Use the  and  buttons to select the first photo you want to print, then press  **Select**.
7. Use the  button to highlight **Enter**, then press  **Select**.
8. Repeat steps 5 through 7 for each additional photo you want to print.



When done, your list of selected photos is displayed.....  
(If you've selected four or more photos, use the  
⬆ button to scroll up and view the rest of them.)

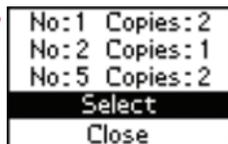

9. Use the ⬇ button to highlight **Close**, then press ⬅ **Select**.  
Your photos are selected for printing.

Be sure to select your paper type and layout options before printing. See below.

## Printing Your Selected Photos

1. Load paper in the printer. If you're using roll paper, see page 12.
2. Enter the **Paper Type** menu. Highlight the type of paper you've loaded, then press ⬅ **Select**.....



**Note:** It's important to select the correct Paper Type setting for the paper you're using, or the print quality may not be what you expect. See *Printer Basics* for details.

3. Enter the **Paper Size** menu, then select the size of paper you've loaded. For example, if you're printing with roll paper, select **4" Roll**.

*continue* .....

4. In the **Layout** menu, select one of the options listed below.

**Note:** The printer automatically resizes your photos to fit the size of paper you've selected.

 One photo, borderless, printed lengthwise on the paper

 20 photos per sheet; includes the photo number and date

 Roll paper only. One photo, borderless, printed across the paper.

 Roll paper only. Prints one photo, borderless, along the length of the paper (photo is cropped to create a “panoramic” look).

     1, 2, 3, 4, or 9 photos, with borders

 Six photos in various sizes on one sheet

5. If you're printing a single photo (Print Mode is set to **One**), you can print multiple sheets of your selected layout. Enter the **Copies** menu, then select from 1 to 100 copies. (You can also use **Copies** if you've selected **All** as your Print Mode.)

If you've selected a set of photos for printing, the number of pages required to print the photos is automatically determined (it's displayed as **Pages** next to the **Copies** setting).

6. To adjust the quality of your printout, enter the **Quality** menu and select a setting (some settings may not be available, depending on your selected Paper Type).
7. Press the  **Print** button. Your photos are printed.

# Cropping and Adjusting Images

You can adjust the image quality of your photos, and even crop them so you print only a part of each image. You can apply these settings to all your photos, or just to selected photos.

**Note:** Additional photo editing features are available. See *Printer Basics* for details.

1. Select the photos you want to print.
2. Enter the **Advanced Settings** menu (use the  $\Delta$  and  $\nabla$  buttons to highlight **Advanced Settings**, then press  $\leftarrow$  **Select**).
3. If you're printing just one photo, or if you're printing multiple photos and want to make the same adjustments to all of them, skip to step 5.
4. To make separate adjustments to selected photos, highlight **Photo Number**, then press  $\leftarrow$  **Select**. Select the first photo by number, press  $\leftarrow$  **Select**, then make any desired adjustments as described in the following steps. Repeat for any other photos you wish to adjust.
5. To adjust the image quality, highlight **Brightness**, **Saturation**, or **Sharpness**, as needed, then press  $\leftarrow$  **Select**. Highlight one of the five settings, then press  $\leftarrow$  **Select** to activate it.

*continue* ••••



6. To print only a portion of your image, highlight **Crop** then press  **Select**. Choose from 18 different cropping options—for example, **Upper Left 1.2x** prints only the upper-left area. (**Upper Left 1.5x** prints a smaller portion of the image.)

Your cropped image is automatically resized to fit the paper size and layout you select.

**Note:** If you're using the optional preview monitor, you see a yellow border around the cropped area. Use the border as a rough guide, as it indicates the approximate area of your cropped image.

See *Printer Basics* for information on ordering the preview monitor.



Upper left




Center




Lower Right

# Loading Roll Paper


1. Load the roll paper onto the holders. Make sure the paper is cut straight across.....

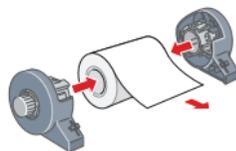

2. Slide the holders into the slots as shown.

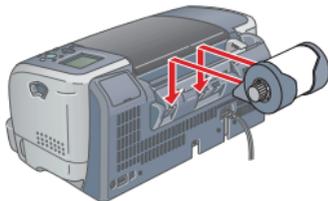


3. Feed the end of the paper into the printer as far as it will go, then slide the left edge guide against the paper.

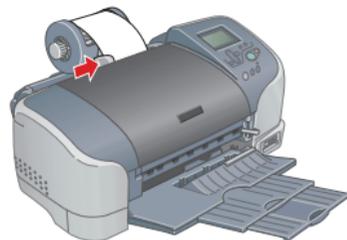

**Note:** Make sure the end of the paper is not curled, or it won't feed properly.

4. While holding the paper in place, press the  roll paper button. The paper feeds into the printer.

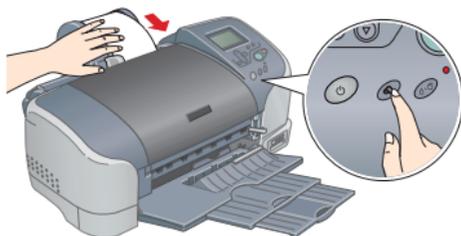


## Removing Roll Paper From the Printer

1. When you're done printing, press the  roll paper button to cut and eject the last page.

**Tip:** Your printer has a built-in cutter to make roll paper printing quick and easy.  
For details, see *Printer Basics*.


2. Press the  roll paper button and hold it down for about three seconds.  
The paper feeds all the way back and an error message appears.

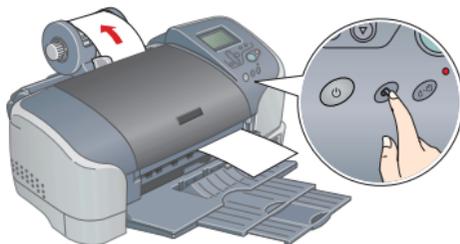

3. Pull the paper all the way out of the paper feed slot in back.
4. Press the  roll paper button to clear the error message.

## Other Great Features

- You can copy photos from your camera and store them onto a Zip® drive. This lets you save your photos so you can view, share, and reprint them in the future.
- Using your favorite photos and special EPSON paper, you can make fun, creative projects like stickers, greeting cards, and iron-on transfer decals. You don't even need to turn on your computer.

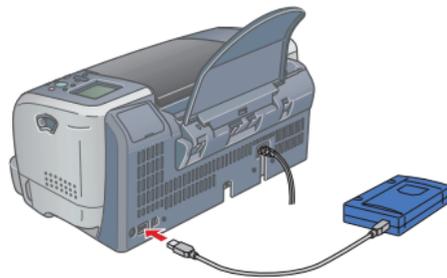

For more information on these features, see *Printer Basics*.

**EPSON Stylus Photo 925**



# **Quick Reference**

**Printing Without a Computer**

