 
 




Start Here

Epson Perfection® V350 Photo

1 Unpack

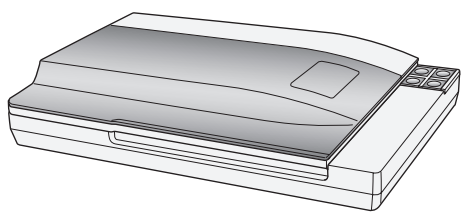


  Film holder

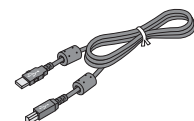


2 Install software

 Do not connect the USB cable yet.

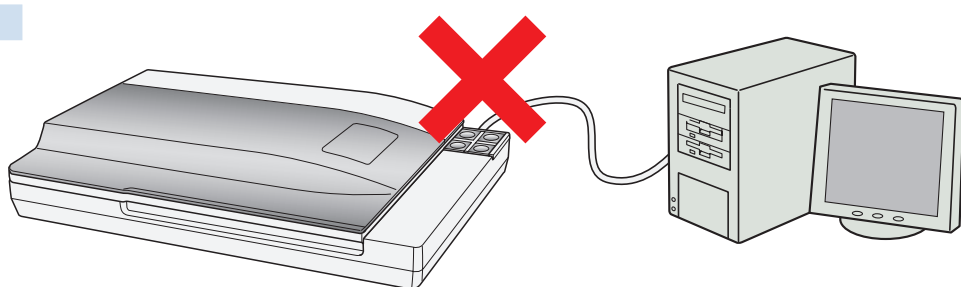


1

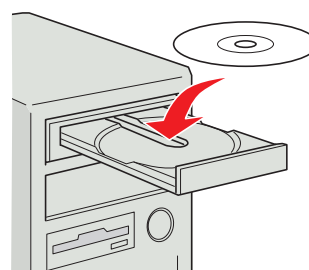 

Macintosh OS X:
Double-click the CD-ROM icon on the desktop.


Windows Vista™:
If you see the AutoPlay window, click **Run Epssetup.exe**. When you see the User Account Control screen, click **Continue**.

 2

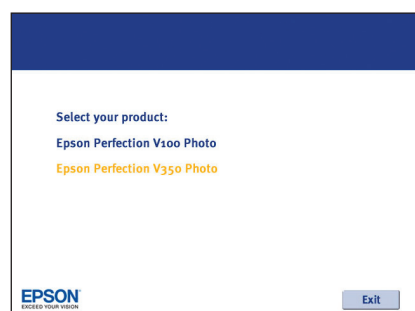

Select Epson Perfection V350 Photo.

 3

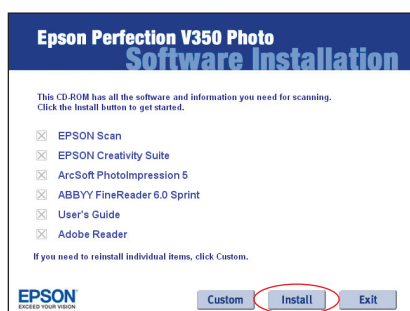


4

Follow the on-screen instructions and select the default options.

Remove the CD when you're finished installing software.

 
3 Remove protective tape

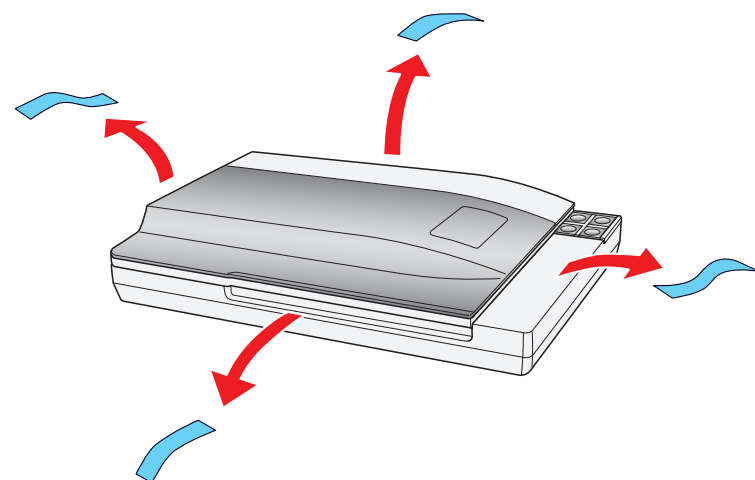

410918000


Printed in XXXXXX XX.XX-XX XXX

 4 Connect and plug in

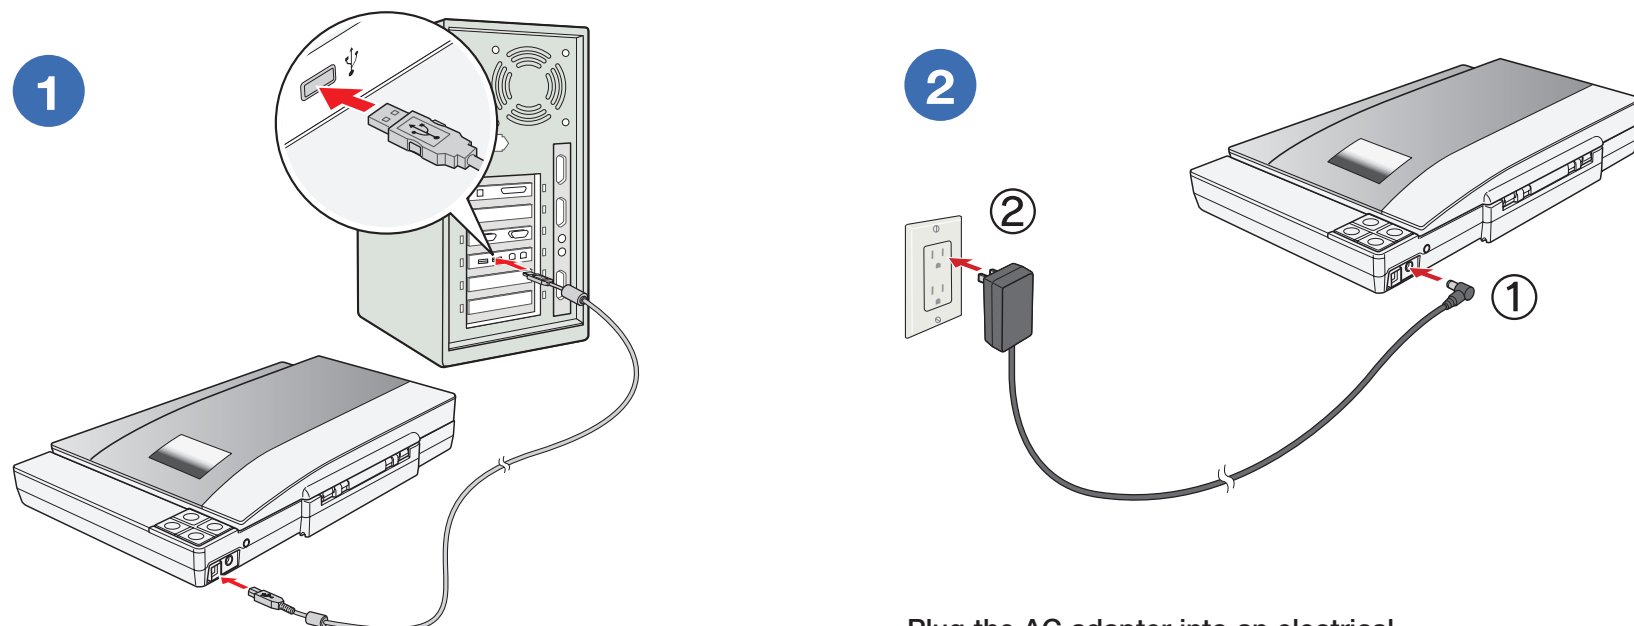


Plug the AC adapter into an electrical outlet to turn the scanner on.

 5 Scan a photo

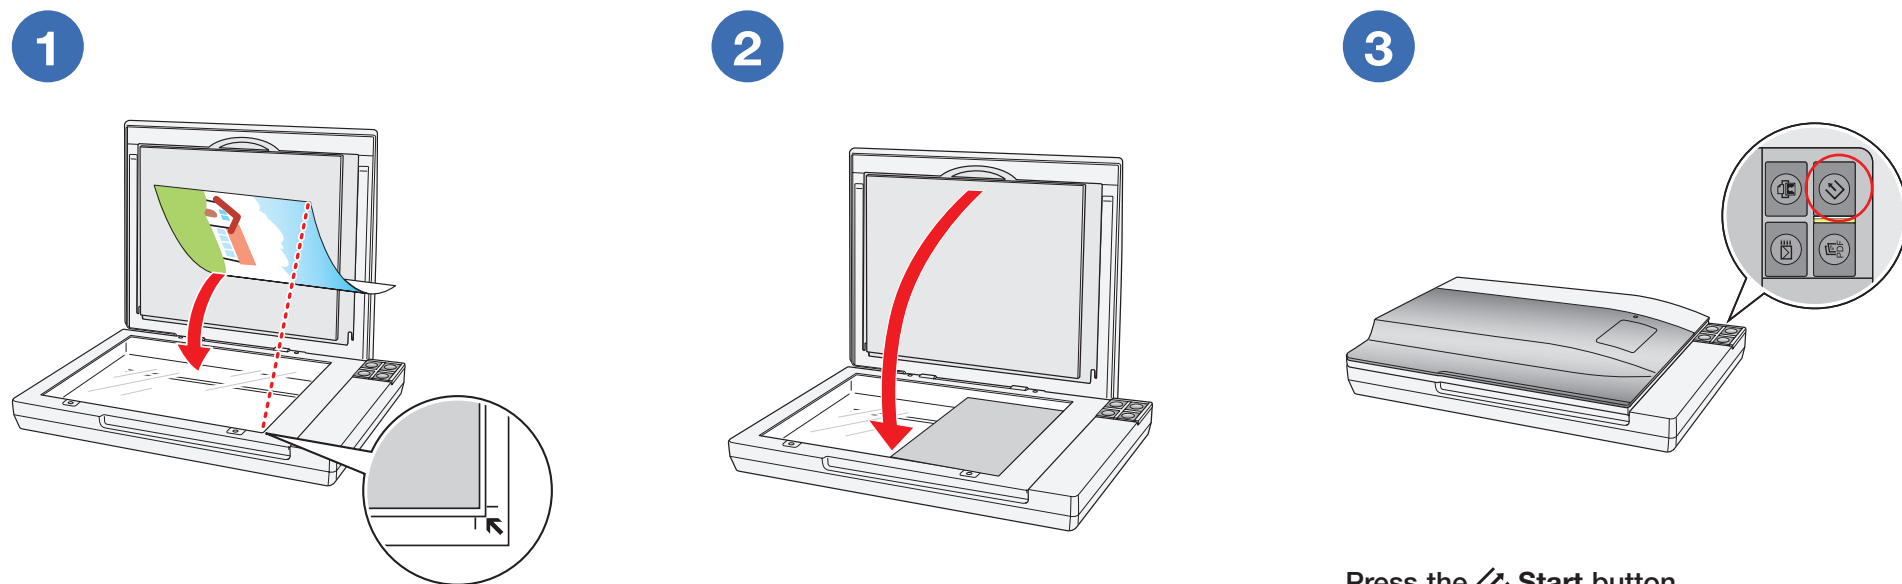

Press the  **Start** button.

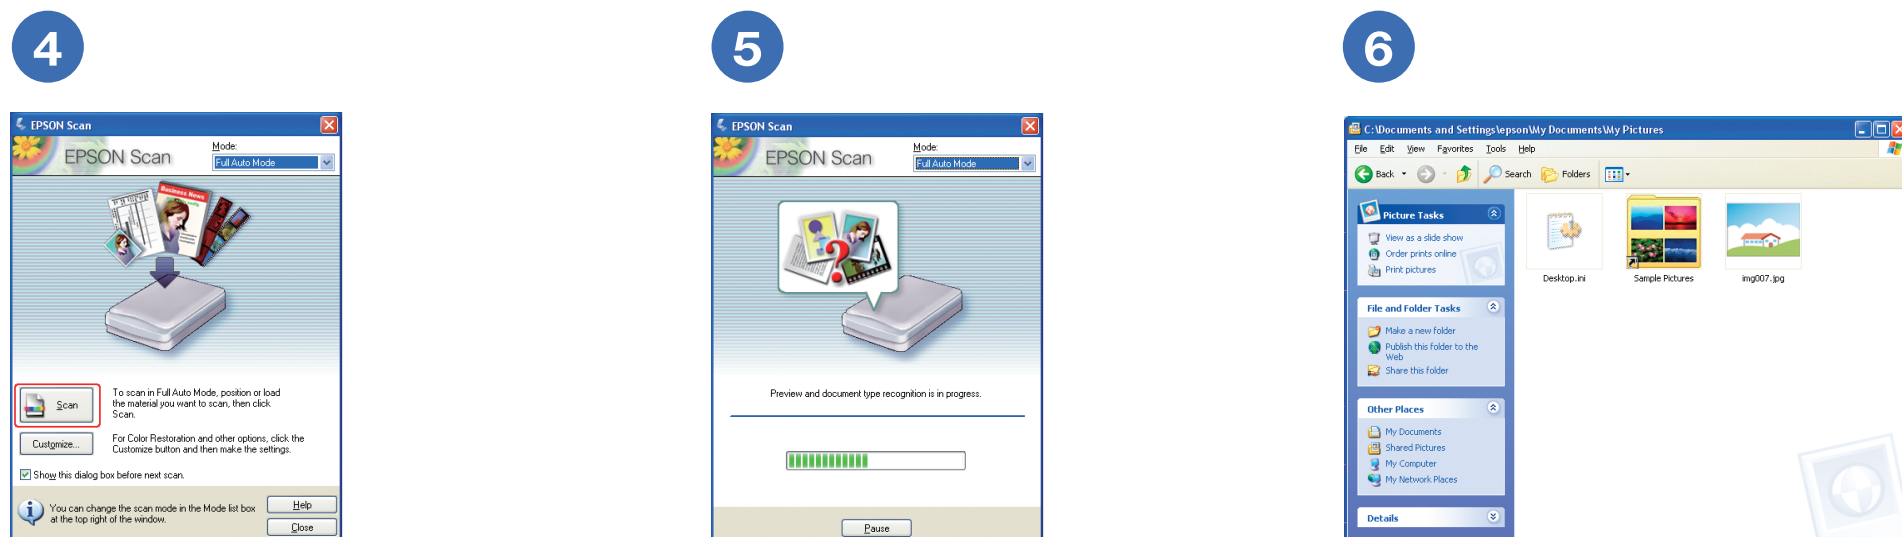 


Click **Scan**.

EPSON Scan opens and scans your photo in **Full Auto Mode**. Wait for your scan to finish or click **Pause** to change settings.


View your photo in **Pictures** (Windows Vista and Mac OS X) or **My Pictures** (other versions of Windows).

6 Scan negatives

 
1

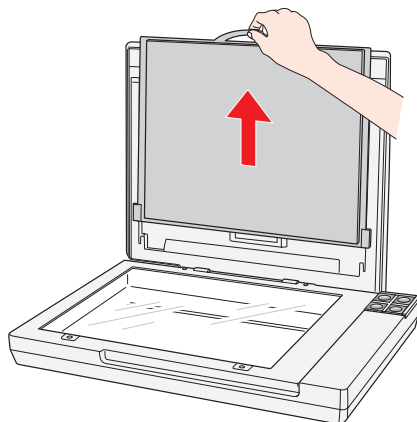


2

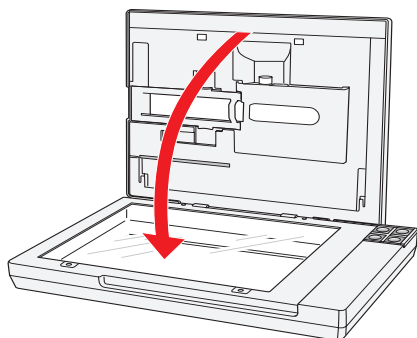 


3

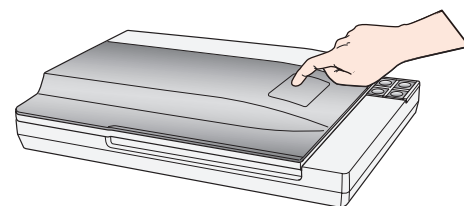 

4

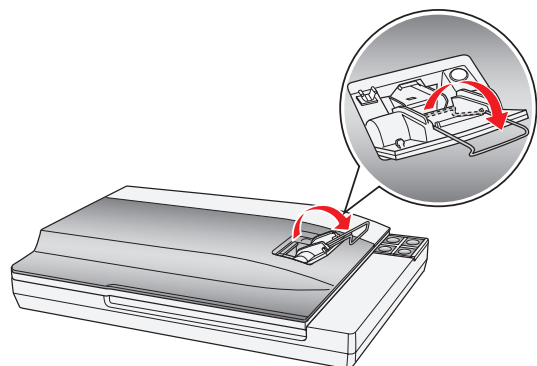 

5

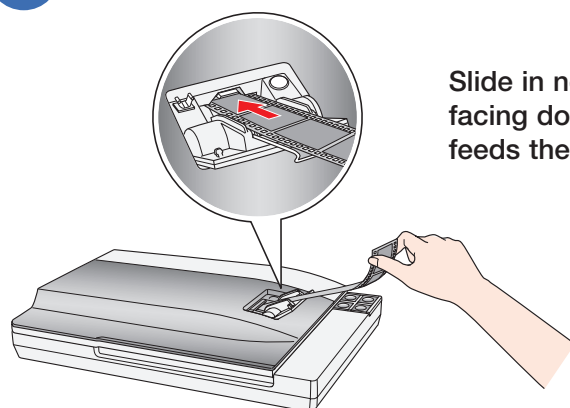 


Slide in negatives with the shiny side facing down. The scanner automatically feeds the negatives into position.

6

Follow steps 3 through 6 in section 5, "Scan a photo."

 7

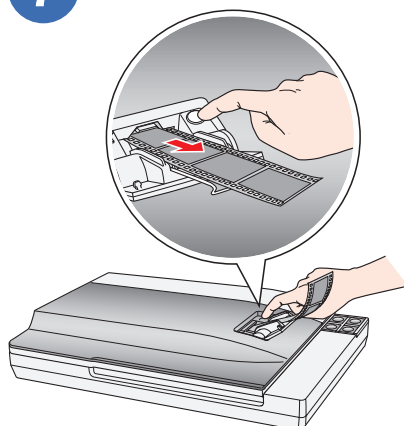

After scanning, press the button to eject your negatives.

Help

User's Guide

Double-click the **Perfection V350P User's Guide** icon on your desktop.

Scanner Software Help

Click the **Help** or **?** button on your scanner software screen.

Epson Technical Support

Internet Support

Visit Epson's support website at **epson.com/support** and select your product for solutions to common problems for the Perfection V350 Photo. You can download drivers and documentation, get FAQs and troubleshooting advice, or e-mail Epson with your questions.

Speak to a Support Representative

U.S.: (562) 276-4382, 6 AM to 6 PM, Pacific Time, Monday through Friday

Canada: (905) 709-3839, 6 AM to 6 PM, Monday through Friday

Toll or long distance charges may apply.

 
Software Technical Support

ArcSoft PhotoImpression®: Phone (510) 440-9901, Fax (510) 440-1270, www.arcsoft.com, support@arcsoft.com


ABBYY® FineReader®: (510) 226-6717, www.abbyyusa.com, support@abbyyusa.com

7 Scan slides


1

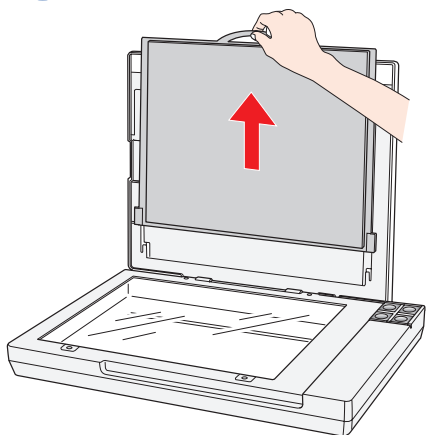

2

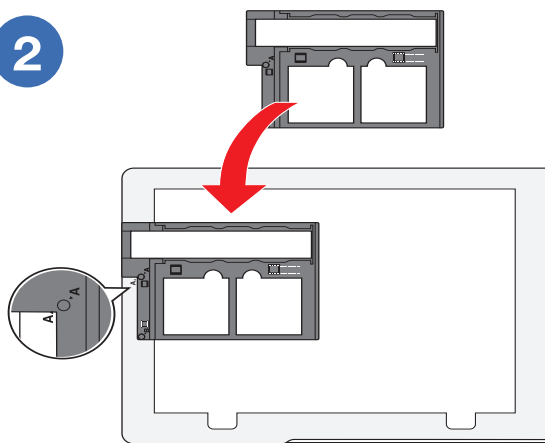 

3

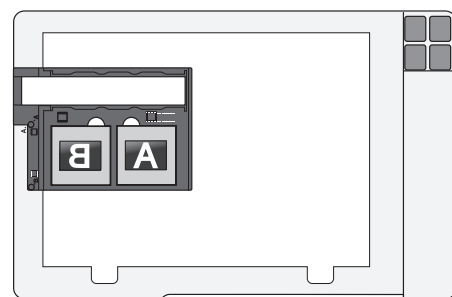 

4

 


5


Follow steps 3 through 6 in section 5, "Scan a photo."

Do more


Restore color

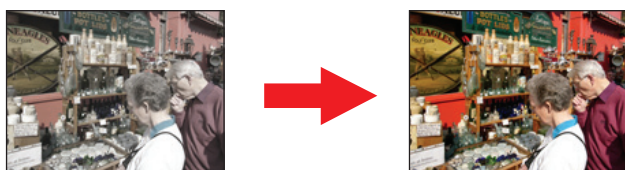

1

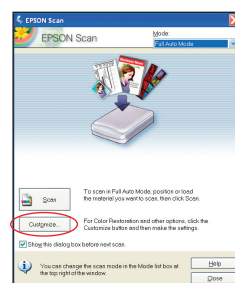 


2

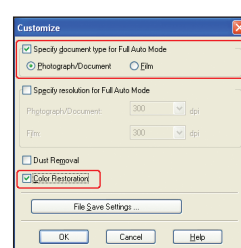 


Remove dust from originals



 
1

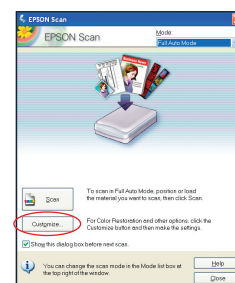


2

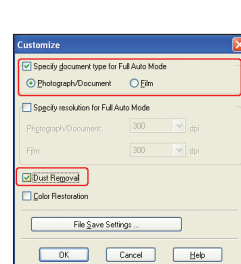 

Fix photos that are too dark because of backlighting

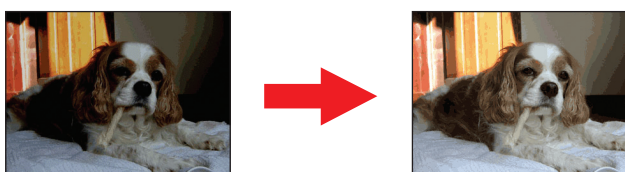 

1

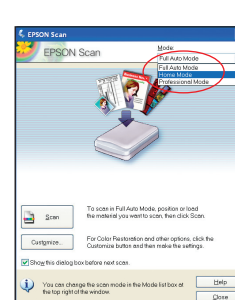 

2

