

How To Copy and Print



Epson Stylus® Photo RX600

CPD-17417R1
4049801-00
XXX

Here's How To . . .

 
- Make a quick letter-size copy (page 1)




- Print an exact duplicate of a 4 × 6-inch photo (page 5)



- Print photos from your camera's memory card (page 10)



 - Print photos from 35 mm film or slides (page 15)



And you can do all these things with your Epson Stylus® Photo RX600 *without* using your computer!

There's much more you can do with your RX600. See some examples on page 24.

To set up and connect your RX600, see the *Start Here* sheet.


For detailed instructions on using the RX600, see your *User's Guide*.

Making a Quick Letter-Size Copy


The default settings on the RX600 screen make it quick and easy to copy a letter-size document on plain paper. Here's how:

Loading Paper


- 1 Press the  On button to turn on the RX600.
- 2 Open the output tray.

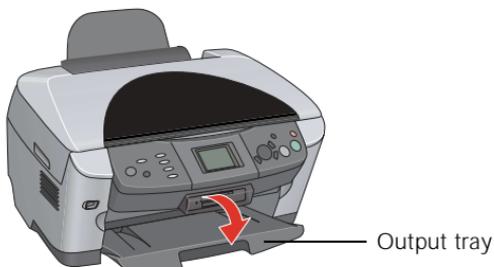


- 3 Flip the feeder guard forward.

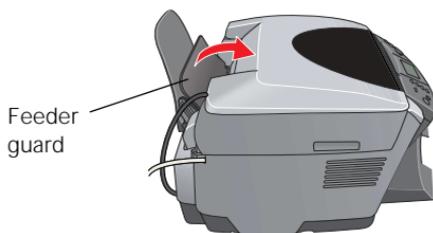

- 4 Insert a sheet of 8.5 × 11-inch plain paper—short edge first—against the right edge of the sheet feeder and under the tabs on the edge guides.
- 5 Press the sides of the left edge guide together and slide it against the paper (but not too tightly).

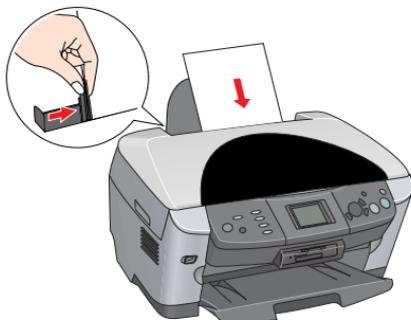


- 6 Flip the feeder guard back over the paper.

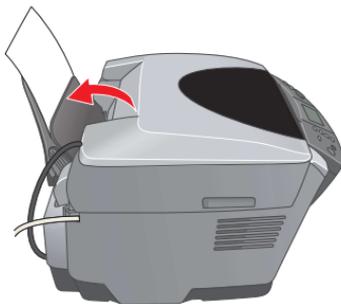


Placing Your Document


- 1 Open the scanner lid.

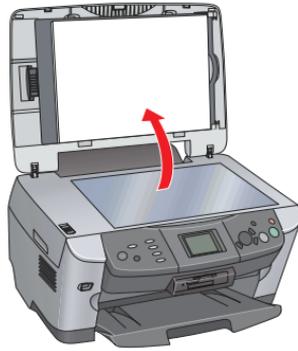

- 2 Place your document face-down on the glass, in the upper left corner. Move your document about 1/10 inch from the top and side edge so your entire document is scanned.

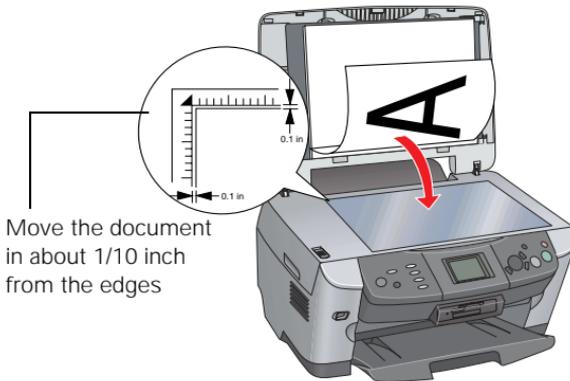


- 3 Close the scanner lid.

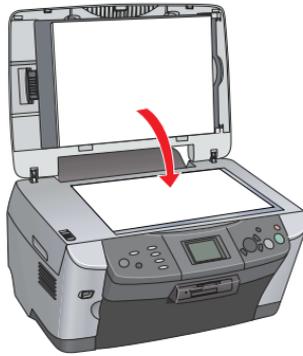

Copying Your Document

- 1 Press the Copy button to access the Copy Menu.

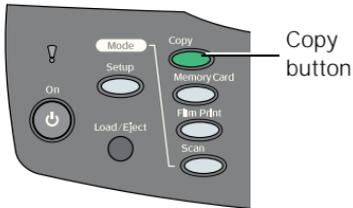

Standard Copy	
Copies	1
Reduce/Enlarge	Actual
Zoom In/Out	100%
Paper Type	Plain
Paper Size	Letter
Quality	Text

- 2 Press the **Color** button to make a color copy or press the **B&W** button to make a black and white copy.


Note: To cancel copying, press the **Stop** button. Canceling appears on the RX600 screen.

Printing a Duplicate of a Photo


You can print an exact duplicate of a 4 × 6-inch photo on Epson photo paper. In this example, you'll select Epson Premium Glossy Photo Paper.

Loading Paper


- 1 Press the  On button to turn on the RX600.
- 2 Open the output tray.

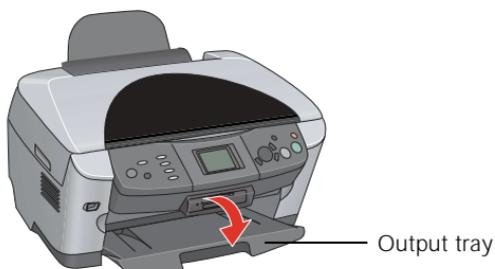


- 3 Flip the feeder guard forward.

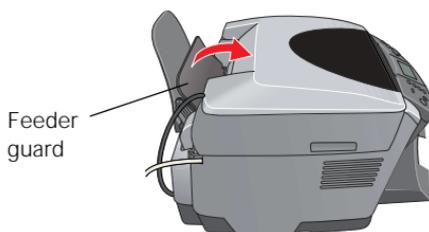

- 4 Insert a few sheets of 4 × 6-inch Premium Glossy Photo Paper—short edge first and shiny side up—against the right edge of the sheet feeder, under the tab.
- 5 Press the sides of the left edge guide together and slide it against the paper (but not too tightly). Make sure the paper is under the tab on the left edge guide.

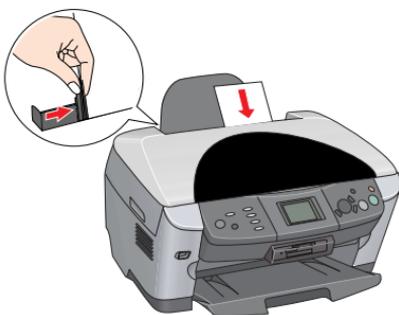


- 6 Flip the feeder guard back over the paper.

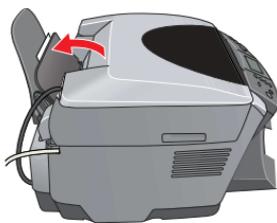


Placing Your Photo


- 1 Open the scanner lid.

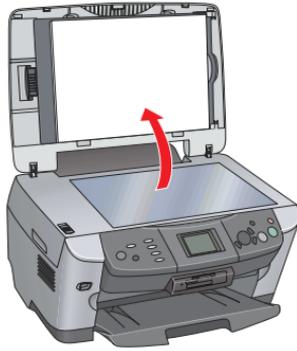

- 2 Place your 4 × 6-inch photo face-down on the glass, in the upper left corner. Move your photo about 1/10 inch from the top and side edge so your entire photo is scanned.

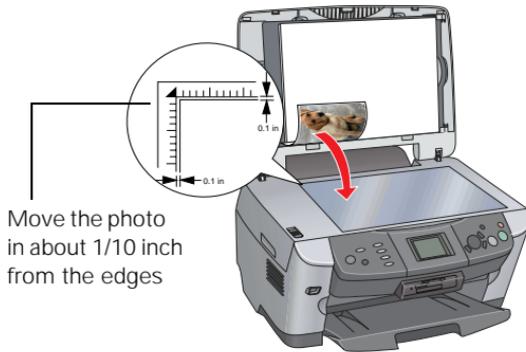


- 3 Close the scanner lid.

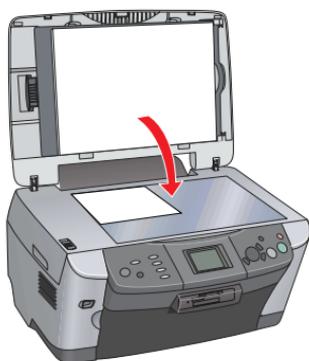


Printing Your Duplicate Photo

- 1 Press the Copy button to access the Copy Menu.

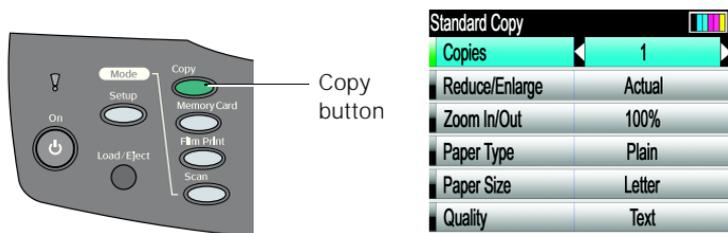

- 2 Press the Menu button to change the Copy Layout setting.

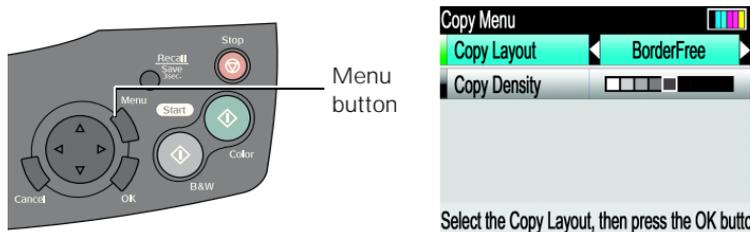


- 3 Press the ▲ or ▼ button to choose Copy Layout, then press the ◀ or ▶ button to change the setting to BorderFree.®

4 Press the OK button.


5 Select the following settings:

- Copies: choose the number of prints you want
- Reduce/Enlarge: choose AutoFitPage
- Zoom In/Out: leave this setting blank (if it is accidentally changed, reset the Reduce/Enlarge setting to AutoFitPage)
- Paper Type: choose Prem.Glossy
- Paper Size: choose 4x6in.
- Quality: choose BestPhoto

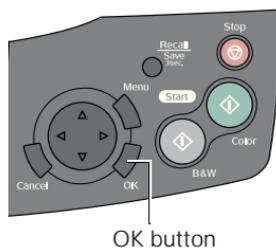

Press the ▲ or ▼ button to choose an option, then press the ◀ or ▶ button to change settings.

Before you print, make sure the RX600 screen looks like this:

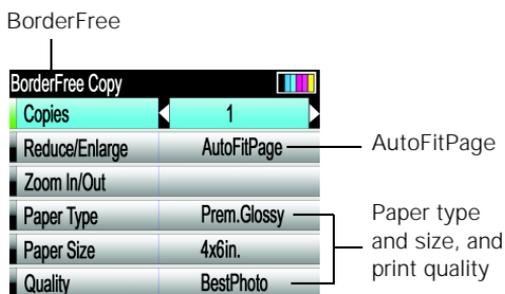

6 Press the ◊ Color button to make color prints or press the ◊ B&W button to make black and white prints.


Note: To cancel copying, press the ⓧ Stop button. Canceling appears on the RX600 screen.

Printing Photos from a Memory Card


You can view photos on your memory card and print them on 4 × 6-inch Epson photo paper. In this example, you'll select Epson Premium Glossy Photo Paper.

Loading Paper


- 1 Press the  On button to turn on the RX600.
- 2 Open the output tray.

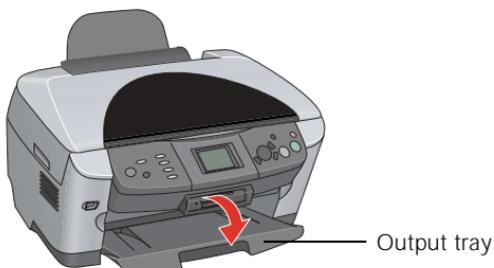


- 3 Flip the feeder guard forward.

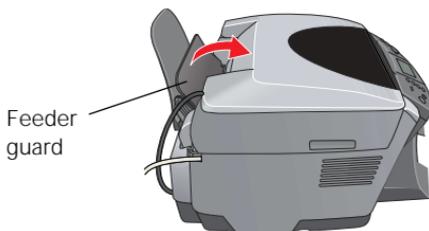

- 4 Insert a few sheets of 4 × 6-inch Premium Glossy Photo Paper—short edge first and shiny side up—against the right edge of the sheet feeder, under the tab.
- 5 Press the sides of the left edge guide together and slide it against the paper (but not too tightly). Make sure the paper is under the tab on the left edge guide.


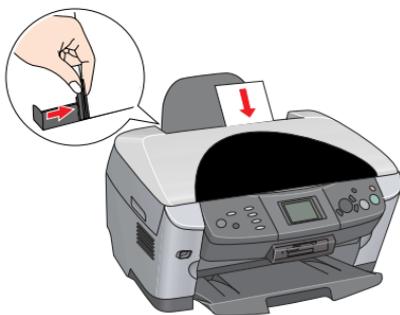


- 6 Flip the feeder guard back over the paper.

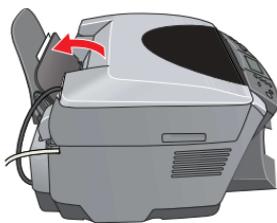


Inserting Your Memory Card

- 1 Press the Memory Card button to access the Memory Card menu.

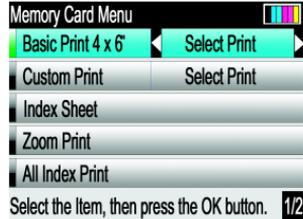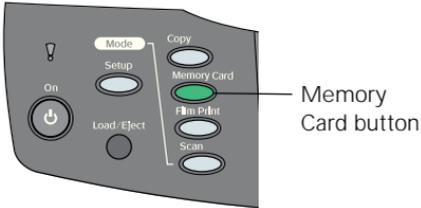


- 2 Open the memory card slot cover.

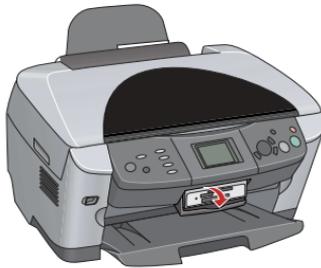

- 3** Insert your memory card into the correct slot. Be careful not to force it in (it won't go in all the way).

Note:

Do not insert more than one card.

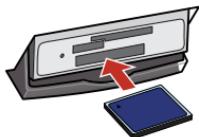

CompactFlash™ or
Microdrive™ (bottom)



Memory Stick®
(middle)



SD or MMC
(middle)

 


SmartMedia™
(top)



xD
(top)

- 4** The memory card light flashes, then turns green. Close the cover.




If the light doesn't turn green, or if you see the message No memory card. Operation Canceled on the RX600 screen, the card may be inserted incorrectly or may not be supported.

Note:


To remove the card, first make sure your RX600 is not printing and the memory card light is not flashing. Then open the memory card slot cover and pull the card straight out of the slot.

Viewing and Printing Your Photos

- 1 Press the ▲ or ▼ button to choose Basic Print 4 x 6", then press the ◀ or ▶ button to choose Select Print.

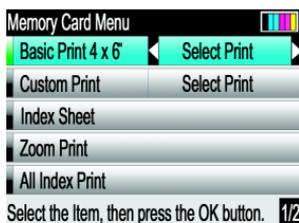

- 2 Press the OK button. The RX600 screen displays the first, second, and last photo on the card.

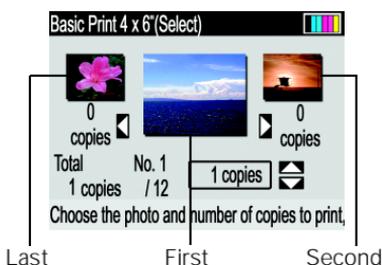

- 3 Press the ◀ or ▶ button to move through the photos.
- 4 When the photo you want to print is in the middle of the screen, press the ▲ or ▼ button to choose the number of copies to print of that photo.
- 5 Press the ◊ Color button to print a color photo. (You can't print in black and white from this mode.)


Note:

To cancel printing, press the Ⓢ Stop button. Canceling appears on the RX600 screen. To print an Index Sheet (also called a proof or contact sheet) with small thumbnails of all your photos, see your *User's Guide*.

Printing a Photo from Film or a Slide


You can print a 4 × 6-inch photo from a 35 mm film negative or a slide. (For additional details on film printing, see your *User's Guide*.)

Before you start, make sure the cable is connected to the TPU (transparency unit) connector. (If it is not connected, turn off the RX600, connect the cable, then turn the RX600 back on.)

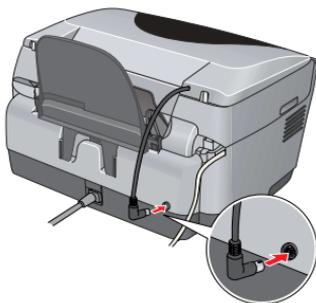


Loading Paper


- 1 Press the  On button to turn on the RX600.
- 2 Open the output tray.

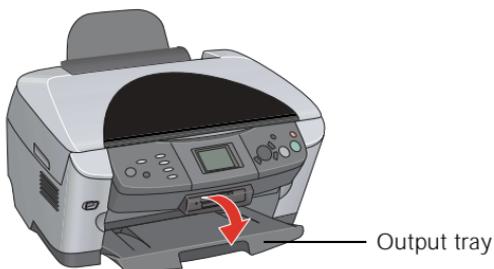


- 3 Flip the feeder guard forward.

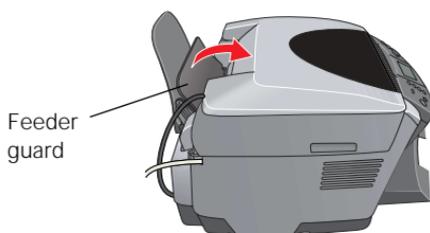

- 4 Insert a few sheets of 4 × 6-inch Premium Glossy Photo Paper—short edge first and shiny side up—against the right edge of the sheet feeder, under the tab.
- 5 Press the sides of the left edge guide together and slide it against the paper (but not too tightly). Make sure the paper is under the tab on the left edge guide.

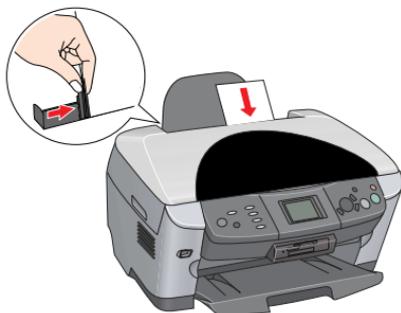


- 6 Flip the feeder guard back over the paper.

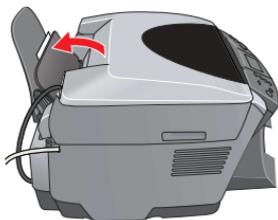


Removing the Film Holder


- 1 Open the scanner lid.

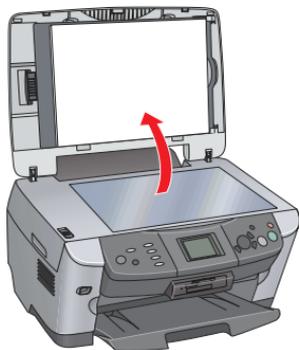

- 2 Remove the document mat from the scanner lid by pulling the handle to the left.

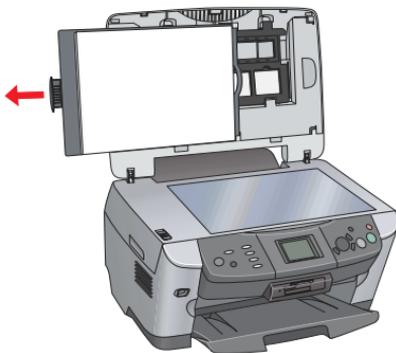

- 3 Carefully lift the film holder out of the scanner lid by pulling it straight up.

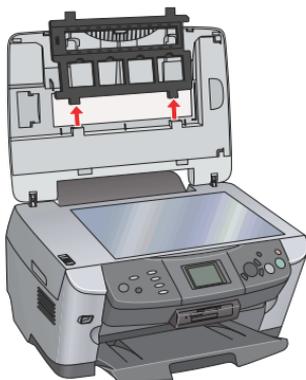


- 4 Continue with one of these sections:
- “Loading a Filmstrip” on page 19
 - “Placing a Slide” on page 20

Loading a Filmstrip


- 1 Lift off the filmstrip cover.




- 2 Slide the strip of film into the film holder, with the duller (emulsion) side up (the images should appear reversed). Position the top of the images next to the outside edge of the film holder.

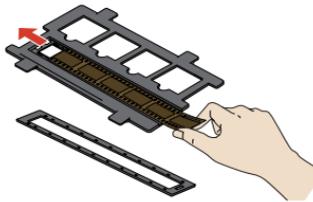

- 3 Reinstall the filmstrip cover over the strip of film (it snaps into place). Press it around the edges to make sure it is closed.
- 4 Place the film holder on the glass, inserting its positioning posts into the two holes near the scanner lid.

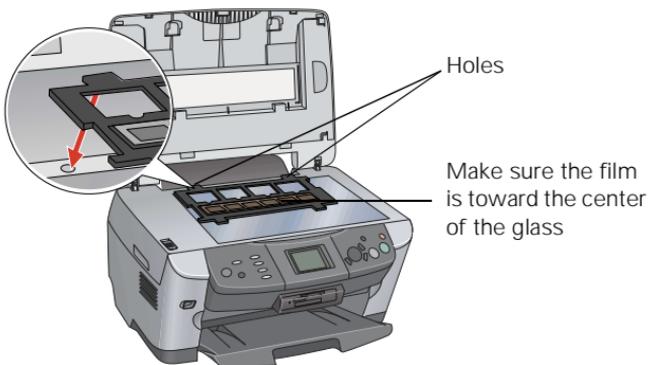


- 5 Close the scanner lid.

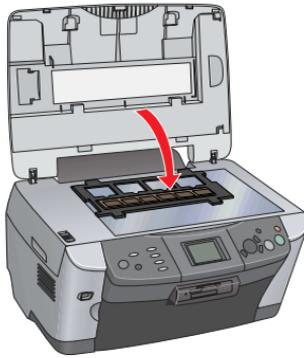


- 6 Continue with “Printing Your Photo” on page 22.

Placing a Slide

- 1 Place the film holder on the glass, inserting its positioning posts into the two holes near the scanner lid.

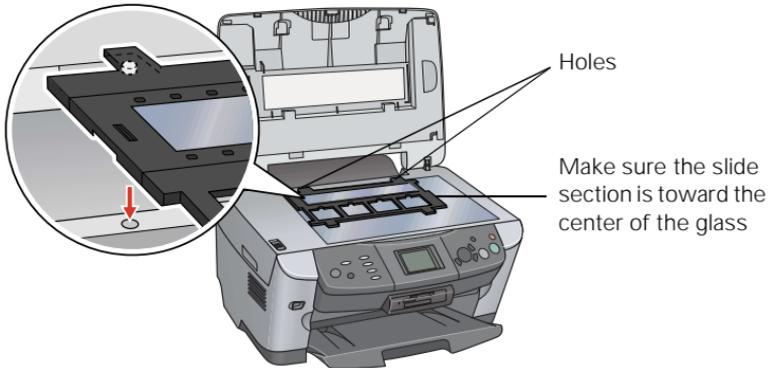

- 2 Place your slide in the holder with the duller (emulsion) side up.

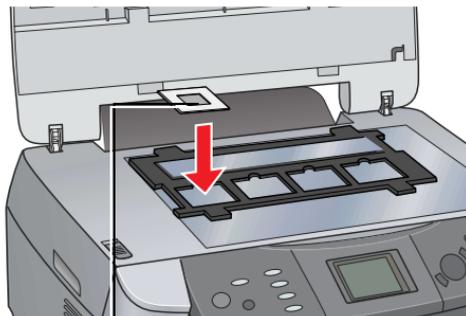


Make sure the top of images with portrait orientation face the front of the RX600

Note:

If your slide image is in landscape orientation (wider than it is long), place it in the same direction as slide images in portrait orientation (longer than they are wide). This copies the maximum image area, but your preview will be rotated.


- 3 Close the scanner lid.

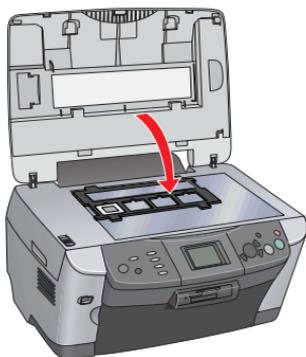

- 4 Continue with “Printing Your Photo” on page 22.

Printing Your Photo


- 1 Press the Film Print button to access the Film Print Menu.

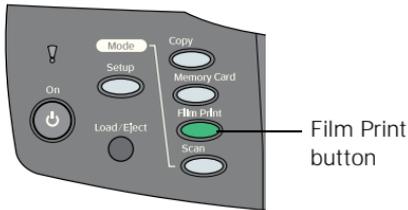


Place the film on the scanner bed, then press the

- 2 Press the ▲ or ▼ button to choose Basic Print 4 x 6".
- 3 Press the OK button.
- 4 Press the ◀ or ▶ button to choose one of the following:
 - For color filmstrip negatives: Negative Color Film
 - For color filmstrip positives: Positive Color Film (Strip)
 - For color slides: Positive Color Film (Slide)
 - For black and white filmstrip negatives: Negative B&W Film

Color
filmstrip
negative

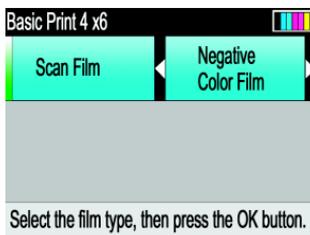


Slide

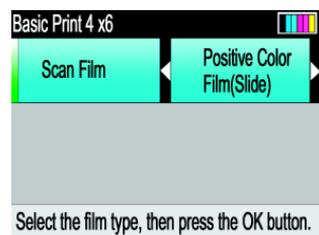

- 5 Press the OK button. The RX600 previews your photos and displays them on its screen.

- 6 Press the ◀ or ▶ button to move through the photos (if you placed more than one).

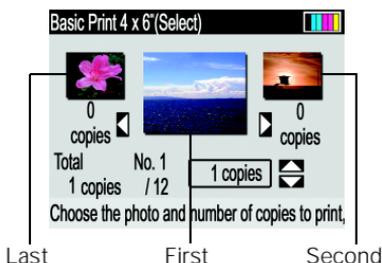

Note:

If your photos are upside-down or backward, re-position them in the film holder, press the **Cancel** button, and start again at step 1.

- 7 When the photo you want to print is in the middle of the screen, press the ▲ or ▼ button to choose the number of copies to print of that photo.
- 8 Press the ◊ Color button to print a color photo. (If you have a black and white photo, press the ◊ B&W button to print it.)

Note:

To cancel printing, press the ⓧ Stop button. Canceling appears on the RX600 screen.

- 9 To select another photo for printing, press the **Cancel** button and repeat steps 6 through 9.

If you're finished printing, press **OK** to return to the **Film Print Menu**, or simply select another **Mode** button on the left.

Note:

Your printed image may be cropped slightly from the original film or slide. This is because the proportions of film and slide images are different from the proportions of your paper.


What Else You Can Do

There is much more you can do with your Stylus Photo RX600.




Print and scan from your computer. See your *User's Guide*.

Make copies in a variety of layouts, with or without your computer. See your *User's Guide*.

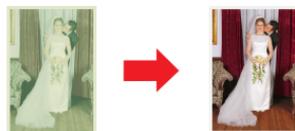

Copy or scan your old photos, film, or slides, and bring the colors back to life with advanced photo restoration technology. See the copying and scanning chapters in your *User's Guide*.

Save your memory card photos to a CD-ROM or Zip® drive connected to your RX600. You can also print photos saved on a CD-ROM or Zip disk. See your *User's Guide*.

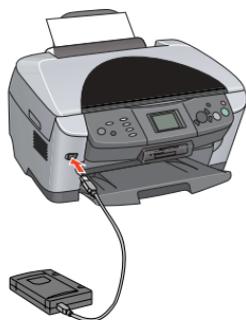



Send photos wirelessly from a Bluetooth®-enabled PDA, phone, computer, or other device to your RX600 using the optional Bluetooth Photo Print adapter. See your *User's Guide*.

If you have a PictBridge®- or USB Direct Print-enabled camera, you can connect it to the RX600 to print photos right from your camera. See your *User's Guide*.




If your camera has P.I.M. (PRINT Image Matching™) or Exif Print support, you can use these enhancement features when you print from your memory card. See your on-screen *Reference Guide* for details.

Epson and Epson Stylus are registered trademarks, and PRINT Image Matching and the PRINT Image Matching logo are trademarks of Seiko Epson Corporation.

BorderFree is a registered trademark of Epson America, Inc.

General Notice: Other product names used herein are for identification purposes only and may be trademarks of their respective owners. Epson disclaims any and all rights in those marks.

© 2004 Epson America, Inc. 2/04

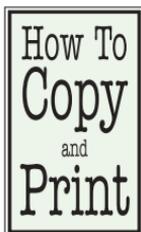

Epson Stylus Photo RX600