

Accessories

Ink Cartridges

Cartridge	Part numbers
Black	T036120
Color	T037020

Media

EPSON paper name	Size	Part number
Premium Bright White Paper	Letter	S041586
Photo Quality Ink Jet Paper	Letter	S041062
	A4	S041061
	Legal	S041067
Photo Quality Ink Jet Cards	A6	S041054
High Quality Ink Jet Paper	Letter	S041111
	A4	S041117
Glossy Photo Paper (Photo Paper)	4 x 6 inches, perforated Letter	S041134
		S041141
		S041271
	A4 Panoramic	S041272
		S041649
		S041140
S041145		
Ink Jet Transparencies	Letter	S041064
Matte Paper Heavyweight	Letter	S041257
Double-Sided Matte Paper	Letter	S041568
All-Purpose Glossy Paper	Letter	S041654
Photo Quality Glossy Paper	Letter	S041124
	A4	S041126
Photo Quality Self Adhesive Sheets	A4	S041106
Glossy Photo Greeting Card Kit	Letter	S041606
Photo Stickers Kit (CD-ROM/paper)	A6	S041144-KIT
	A6	S041144

User Replaceable Parts

Part name	Reference number	Part number
Printer cover	101	1253353
Paper support	102	1254040
Output tray (stacker)	103	1253255
Power cable	400	2020113

Printer Specifications

Printing

Printing method On-demand ink jet

Nozzle configuration

Black 48 nozzles
Color 45 nozzles (15 each: cyan, magenta, yellow)

Print direction Bidirectional with logic seeking

Input buffer 12KB

Mechanical

Paper feed method Friction

Paper path Sheet feeder, top entry

Sheet feeder capacity 100 sheets of 17 lb (65.8 g/m²) paper

Dimensions

Storage
Width: 16.7 inches (423 mm)
Depth: 9.0 inches (229 mm)
Height: 6.8 inches (172 mm)

Printing
Width: 16.7 inches (423 mm)
Depth: 18.1 inches (459 mm)
Height: 10.9 inches (277 mm)

Weight 5.47 lb (2.48 kg) without ink cartridges

Electrical

Input voltage range*	90 to 132 V
Rated frequency range	50 to 60 Hz
Input frequency range	49.5 to 60.5 Hz
Rated current	0.4 A to 0.2 A
Power consumption	Approx. 19 W (ISO10561 Letter Pattern) Approx. 3W in standby mode Approx. 2.7 W in Power Off mode

* Check the label on the back of the printer for your printer's voltage.

EPSON Stylus C44 Series

Environmental

Temperature

Operation	50 to 95 °F (10 to 35 °C)
Storage*	-4 to 104 °F (-20 to 40 °C) 1 month at 104 °F (40 °C)
Transit*	-4 to 140 °F (-20 to 60 °C) 120 hours at 140 °F (60 °C)

Humidity (without condensation)

Operation	20 to 80% RH
Storage*	5 to 85% RH

*Stored in shipping container

Safety Approvals

Safety standards	UL 1950, CSA C22.2 No. 950
EMC	FCC part 15 subpart B class B CSA C108.8 Class B

Ink Cartridges

Specification	Black ink cartridge (T036120)	Color ink cartridge (T037020)
Color(s)	Black	Cyan, Magenta, Yellow
Print capacity*	330 pages using ISO Letter Pattern 10561, 220 pages at 5% in calculation, except for the initial ink cartridge	180 pages, 5% each CMY (total 15%) in calculation, except for the initial ink cartridge
Cartridge life	Within 6 months after opening package, at 77 °F (25 °C)	
Storage temperature	-4 to 104 °F (-20 to 40 °C) 1 month at 104 °F (40 °C)	
Transit temperature	-22 to 140 °F (-30 to 60 °C) 1 month at 104 °F (40 °C) 120 hours at 140 °F (60 °C)	
Freezing temperature**	3.2 °F (-16 °C)	-0.4 °F (-18 °C)
Dimensions	0.78 × 2.08 × 1.52 inches (W × D × H) 19.8 × 52.7 × 38.5 mm (W × D × H)	1.69 × 2.08 × 1.52 inches (W × D × H) 42.9 × 52.7 × 38.5 mm (W × D × H)

* The figure given is based on continuous printing after ink replacement. The actual print capacity may vary.

** Ink thaws and is usable after approximately 3 hours at 77 °F (25 °C).

Caution: To ensure good results, use genuine EPSON cartridges and do not refill them. Other products may cause damage to your printer not covered by EPSON's warranties.

Don't use an ink cartridge if the date on the package has expired.

Paper

Paper type	Size	Paper types	Thickness	Weight
Plain paper, All-Purpose Glossy, Premium Bright White Paper, Photo Quality and High Quality Ink Jet Paper	Letter (8.5 × 11 inches) Legal (8.5 × 14 inches) Half letter (statement, 5.5 × 8.5 inches) Executive (7.5 × 10 inches) A4 (210 × 297 mm) A5 (148 × 210 mm) A6 (105 × 148 mm)	Plain bond paper or special paper distributed by EPSON	0.003 to 0.004 inch (0.08 to 0.11 mm) for plain bond paper	17 to 24 lb (64 to 90 g/m ²) for plain bond paper
Transparencies and Photo Quality Glossy Paper	Letter (8.5 × 11 inches)	Transparencies and glossy paper distributed by EPSON	0.005 inch (0.13 mm)	—
Matte Paper Heavyweight, Double-Sided Matte Paper	Letter (8.5 × 11 inches)	Matte paper distributed by EPSON	0.009 inch (0.23 mm)	44 lb (167 g/m ²)
Self-adhesive sheets	A4 (210 × 297 mm)	Self adhesive sheets distributed by EPSON	—	—
Envelopes	No. 10, 4.1 × 9.5 inches (104 × 241 mm) DL, 4.3 × 8.7 inches (110 × 220 mm) C6, 4.4 × 6.4 inches (114 × 162 mm)	Plain bond paper or air mail paper	0.006 to 0.02 inch (0.16 to 0.51 mm)	12 to 20 lb (45 to 75 g/m ²)
Ink jet cards	A6 (105 × 148 mm)	Ink jet cards distributed by EPSON	—	—
Glossy Photo Paper and Photo Paper	Letter (8.5 × 11 inches) A4 (210 × 297 mm) 4 × 6 inches (102 × 152 mm) Panoramic (210 × 594 mm)	Photo paper distributed by EPSON	—	—
Photo Stickers	A6 (105 × 148 mm), 16 frames/sheet	Photo stickers distributed by EPSON	—	—

Caution: Always load paper in the sheet feeder short edge first. Load envelopes short edge first with the flap side down and on the left.

Since the quality of any particular brand or type of paper may be changed by the manufacturer at any time, EPSON cannot attest to the quality of any non-EPSON brand or type of paper. Always test samples of paper stock before purchasing large quantities or printing large jobs.


Poor quality paper may reduce print quality and cause paper jams and other problems. If you encounter problems, switch to a higher grade of paper.

Do not load curled or folded paper.

Use papers under these conditions:
Temperature: 59 to 77 °F (15 to 25 °C)
Humidity: 40 to 60% RH

Store printouts on Photo Quality Glossy Film and Self Adhesive Sheets under these conditions:
Temperature: 59 to 86 °F (15 to 30 °C)
Humidity: 20 to 60% RH

Printable area

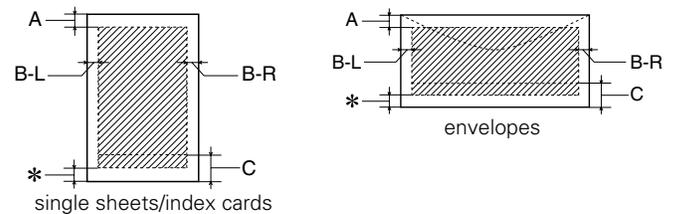

- A: The minimum top margin is 0.12 inch (3.0 mm).
- B-L: The minimum left margin is 0.12 inch (3.0 mm).
- B-R: The minimum right margin is 0.12 inch (3.0 mm).
- C: The minimum bottom margin is 0.55 inch (14.0 mm).
- * You can extend the minimum bottom margin to 0.12 inch (3.0 mm) using the Minimize Margins feature; however, print quality may decline in the expanded area.


Control Panel

To diagnose some problems, check the printer's control panel, as described below, or run a printer check (page 5).

Lights	Problem and solution	
 on	No paper is loaded in the printer	Load paper in the sheet feeder, then press the  maintenance button. The printer resumes printing and the light goes out.
	Paper has jammed in the printer	Press the  maintenance button to eject the jammed paper. If the error does not clear, open the printer cover and remove all of the paper inside, including any torn pieces. Then reload the paper in the sheet feeder and press the  maintenance button to resume printing.
	You have an empty ink cartridge	Follow the instructions on page 6 to replace the ink cartridge. If the  light remains on after you install a cartridge, one of your ink cartridges is installed incorrectly, or you installed the wrong cartridge. Following the instructions on page 6, remove the cartridge, check to make sure you have the correct EPSON cartridge, and reinstall it.
 flashing	The black or color ink cartridge is nearly empty	Obtain a replacement black or color ink cartridge. To determine which cartridge is nearly empty, follow the instructions on page 6.
 off  on	The print head is obstructed by jammed paper or other material and can't return to the home position	Turn off the printer. Open the printer cover and remove any paper or other obstructions from the paper path. Then, turn the printer back on. If the error does not clear, contact your dealer.
 flashing  flashing  flashing	An unknown printer error has occurred	Turn off the printer and contact your dealer.

Installing the First Ink Cartridges


1. Turn on the printer.
2. Open the cover and lift the ink cartridge clamps.

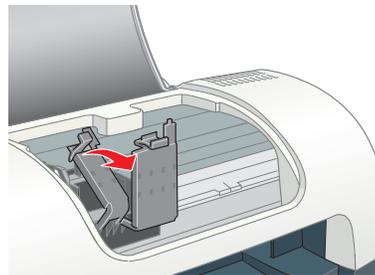

Caution: Don't touch the sensor on top of the ink cartridge holders.



3. Unpack the ink cartridges that came with your printer and remove the yellow tabs.

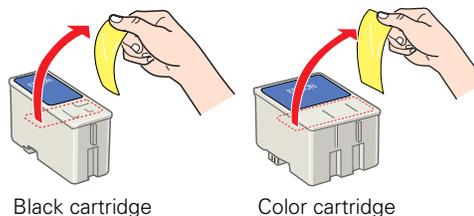


Black cartridge

Color cartridge

Caution: Don't remove the seals from the bottom of the cartridges; ink will leak out. Also, don't touch the green chips on the back of the cartridges.

Keep the cartridges out of the reach of children.

4. Insert the ink cartridges one at a time. The green chip on the cartridge should face the rear of the printer.

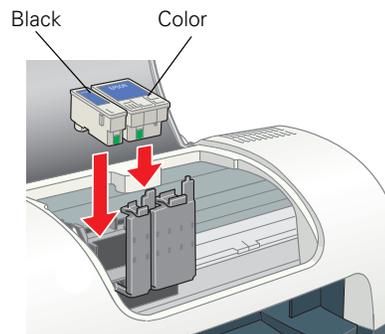

Caution: Install both ink cartridges or the printer won't work.

5. Press down on the ink cartridge clamps until they click shut.
6. Press the ⏻ maintenance button and close the printer cover. The ⏻ power light flashes and you hear the ink charging. Wait until ink charging is finished (the ⏻ power light stops flashing).

Caution: Don't turn off the printer or interrupt charging while the ⏻ power light is flashing or you'll use up more ink than necessary when you turn it back on.

Testing the Printer

You can run a printer check to determine whether a problem comes from the printer itself or some other source.

1. Make sure both the printer and computer are turned off. Then disconnect the USB cable from the printer.
2. Make sure letter-size or larger paper is loaded in the printer.
3. Hold down the ⏻ maintenance button, then press and release the ⏻ power button. Continue holding down the ⏻ maintenance button until the ⏻ power light starts to flash, then release it.

The printer prints one page showing its ROM version number and a nozzle check pattern. (If the pattern has gaps in its dots, you need to clean the print head; see page 7.)

4. Turn off the printer after it prints the check page. Then reconnect the USB cable and turn on your printer and computer.
 - If the check page prints, the problem probably lies in your software settings, interface cable, or computer. Your software may not be installed correctly.
 - If the check page doesn't print, you may have a problem with your printer. Try the suggestions in the electronic *User's Guide* on the printer software CD-ROM. If nothing works, contact your dealer or EPSON.

Printing on Special Media

Select the paper Type (Windows) or Media Type (Macintosh) setting according to the guidelines in the table below.

For this paper name...	Select this Type or Media Type setting
Plain paper and envelopes EPSON Premium Bright White Paper	Plain paper
EPSON High Quality Ink Jet Paper EPSON Photo Quality Ink Jet Paper EPSON Photo Quality Ink Jet Cards EPSON Photo Quality Self Adhesive Sheets	Photo Quality Ink Jet Paper
EPSON Matte Paper Heavyweight EPSON Double-Sided Matte Paper	Matte Paper - Heavyweight

For this paper name...	Select this Type or Media Type setting
EPSON Glossy Photo Paper EPSON Photo Paper EPSON All-Purpose Glossy Paper EPSON Photo Quality Glossy Paper EPSON Glossy Photo Greeting Cards	Glossy Photo Paper
EPSON Photo Stickers	Photo Quality Glossy Film
EPSON Ink Jet Transparencies	Ink Jet Transparencies

Additional Media Loading Guidelines

Caution: Don't use the cleaning sheets that may be included with your special media; they may damage the printer.

- Always load paper short edge first, even when printing landscape-oriented pictures.
- Always handle sheets by the edges, and don't touch the printable surface.
- Be sure to load the printable (whiter) side of the media face up in the sheet feeder.
- You can load paper up to the arrow on the left edge guide.
- In addition to the paper Type (Windows) or Media Type (Macintosh) setting, remember to select the correct Paper Size for your media in the printer software.
- If the special media has protective sheets between each sheet, be sure to remove the protective sheets before printing.
- Some special media have a cut corner that you need to position in the upper right corner when you load it.
- You can load EPSON special media as follows:

For this paper name...	Load this number of sheets
EPSON Photo Quality Ink Jet Paper	Up to 30 sheets; 10 sheets for legal-size
EPSON Photo Quality Ink Jet Cards EPSON Glossy Photo Greeting Cards	Up to 30 cards with the included support sheet beneath the stack
EPSON Photo Quality Self Adhesive Sheets EPSON Photo Stickers EPSON Photo Paper (Panoramic size)	One sheet at a time
EPSON Ink Jet Transparencies	Up to 10 sheets
EPSON Glossy Photo Paper (4 x 6-inch size) EPSON Photo Paper (4 x 6-inch size)	Up to 20 sheets with the included support sheet beneath the stack
EPSON Glossy Photo Paper (A4 and letter-size) EPSON Photo Paper (A4- and letter-size)	Up to 20 sheets at a time with the included support sheet beneath the stack
Matte Paper Heavyweight	Up to 20 sheets with the included support sheet beneath the stack

EPSON Stylus C44 Series

Replacing an Ink Cartridge

Use these ink cartridges before the expiration date on the package:

- Black: T036120
- Color: T037020

Caution: To ensure good results, use genuine EPSON ink cartridges and don't refill them. Other products may cause damage to your printer not covered by EPSON's warranty.

Low ink: red error light flashes and a status screen appears telling you which cartridge is low.

Empty cartridge: red error light stays lit and the empty cartridge is indicated on the screen; you must replace it to continue printing.

Checking Your Ink Supply

To check your ink supply, do one of the following:

Windows: Double-click the  Status Monitor icon on your taskbar (in the lower right corner of your screen). You see a window showing the ink remaining in each cartridge.


Macintosh OS 8.6 to 9.x: Open the File menu and choose Print. Click the  ink icon. You see a window showing the ink remaining in each cartridge.

Macintosh OS X: Double-click the Applications folder on your hard drive. Double-click EPSON Printer Utility, select the C44 Series printer in the Printer List window, and click OK. Then click the  EPSON StatusMonitor button. You see a window showing the ink remaining in each cartridge.


Removing and Installing Ink Cartridges

1. Open the printer cover
2. Press the  maintenance button for 10 seconds. The print head moves to the cartridge replacement position. (If both ink cartridges need replacement, it moves to the black cartridge position first. The black cartridge is on the left, and the color cartridge is on the right.)

Caution: Don't touch the ink cartridge sensor above the print head, as shown below.

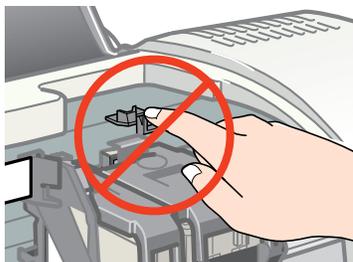


3. Lift the ink cartridge clamp and remove the cartridge.
4. Unpack the new ink cartridge and remove the yellow tab.

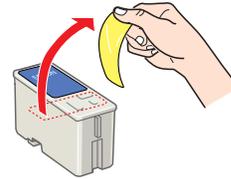

Warning: If ink gets on your hands, wash them with soap and water. If it gets in your eyes, flush them immediately with water.

5. Insert the new cartridge and close the clamp. Make sure the clamp is closed completely.

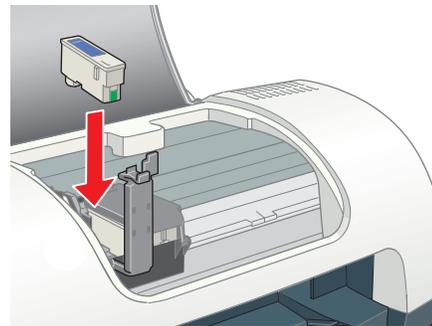

6. Press the  maintenance button. (If the other cartridge needs replacement, the print head moves into loading position. Repeat steps 3 through 5.)
Caution: Don't move the print head by hand; you could damage the printer. Always use the  maintenance button.
7. Wait until ink charging is finished (the green  power light stops flashing and the red  error light goes out). Ink charging takes about 30 seconds.
8. Close the printer cover.

If the red  error light remains on and the printer continues to make noise for more than five minutes, open the printer cover and press the  power button to turn the printer off. Then make sure that the ink cartridge clamps are completely closed. Close the printer cover and press the  maintenance button to finish ink charging. If that doesn't work, contact your dealer or EPSON.

Cleaning the Print Head

If your printouts are unexpectedly light or faint, or dots or lines are missing from the image, you may need to clean the print head. This unclogs the nozzles so they can deliver ink properly.

Print head cleaning uses ink, so clean it only if quality declines.

This section explains how to clean the print head using the Head Cleaning utility. This is the recommended method when the printer is connected directly to your computer (not over a network).

You can also clean the print head by holding down the  maintenance button on the printer's control panel for 7 seconds when the red  error light is off.

Caution: When you don't turn on your printer for a long time, the print quality can decline. It's a good idea to turn on your printer at least once a month to maintain good print quality.

Running the Head Cleaning Utility

1. Make sure the printer is turned on but not printing, and the red  error light is off. (If the  error light is flashing or on, you may need to replace the ink cartridge; see page 6 for details.)
2. Do one of the following:
 - **Windows:** right-click the  Status Monitor icon on the right side of the Windows taskbar. Then click **Head Cleaning**.
 - **Macintosh OS 8.6 to 9.x:** Open the File menu and choose **Page Setup** or **Print**. Click the  utility button, then click the  **Head Cleaning** button.
 - **Macintosh OS X:** Double-click the **Applications** folder on your hard drive. Double-click **EPSON Printer Utility**, select the **C44 Series** printer, and click **OK**. Then click the  **Head Cleaning** button.
3. Follow the instructions on the screen to clean the print head. Cleaning takes about 30 seconds, during which the printer makes some noise and the green  power light flashes.

Caution: Never turn off the printer while the  power light is flashing, unless the printer hasn't moved or made noise for more than 5 minutes.

4. When the  power light stops flashing, run a nozzle check to confirm the print head nozzles are clean.

Make sure plain paper (**not** special ink jet paper) is loaded in the printer and click **Print nozzle check pattern**. Then click **Print**. The nozzle check pattern prints (see the next section for details).


5. If the nozzle check pattern has no gaps or lines, click **Finish**.

If the pattern has white lines, click **Clean** to clean the print head again.

If you don't see any improvement after cleaning three or four times, check the solutions in the electronic *User's Guide* on your printer software CD-ROM. You can also turn the printer off and wait overnight—this allows any dried ink to soften—and then try cleaning the print head again.

Examining the Nozzle Check Pattern

Examine the nozzle check pattern you print. Each black and colored area should be solid, with no gaps or lines, as shown below:

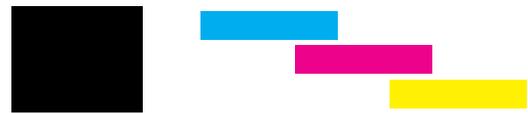

- If your printout looks okay, you're done.
- If you see any white lines or gaps (see below), clean the print head again; see the previous section for instructions.



Aligning the Print Head

If your printouts contain misaligned vertical lines, you may need to align the print head. Your printer must be connected to a local port, not on a network, to use the Print Head Alignment utility.

1. Make sure the printer is turned on, but not printing, and letter-size plain paper (**not** special ink jet paper) is loaded.

Caution: Load paper that's at least 8.27 inches (210 mm) wide to prevent ink from spraying inside the printer and smudging your printouts.

2. Do one of the following:
 - **Windows:** right-click the  Status Monitor icon on the right side of the Windows taskbar. Then click **Print Head Alignment**.
 - **Macintosh OS 8.6 to 9.x:** Open the File menu and choose **Page Setup** or **Print**. Click the  utility button, then click  **Print Head Alignment**.
 - **Macintosh OS X:** Double-click the **Applications** folder on your hard drive. Double-click **EPSON Printer Utility**, select the **C44 Series** printer, and click **OK**. Then click  **Print Head Alignment**.

EPSON Stylus C44 Series

3. Follow the instructions on the screen to print a test page. You see the alignment window.
4. On the printed page, select the pattern that shows the two vertical lines most precisely printed on top of each other. You may need to use a magnifying glass.
5. Select one pattern each for rows 1, 2, and 3. Then enter the number of the best pattern for each row in the corresponding boxes on the screen.
6. If you find a perfectly aligned pattern for each row, click **Finish**.

If you can't find a row that has a perfectly aligned pattern, select the best pattern and click **Realignment** to print another test page. Then repeat this step until all three rows have a perfectly aligned pattern.

Cleaning the Printer

To keep your printer working at its best, you should clean it several times a year. Follow these steps:

1. Turn off the printer, unplug the power cord, and disconnect the USB cable.
2. Remove all paper, then use a soft brush to clean any dust or dirt from the sheet feeder.
3. Clean the exterior of the printer with a soft, damp cloth.

Caution: Don't touch the gears inside the printer.

Never use a hard or abrasive brush, or alcohol or thinner for cleaning; they can damage the printer components and case.

Don't get water on the printer components and don't spray lubricants or oils inside the printer.

Don't remove the grease on the carriage rail. It is needed to lubricate movement of the print head.

Don't use any cleaning sheets included with special paper; they may jam inside the printer.

Transporting the Printer


If you move your printer some distance, you need to prepare it for transportation in its original box or one of a similar size.

Caution: To avoid damage, always leave the ink cartridges installed when transporting the printer.

Be sure to remove the tape used in step 4 after installing the printer in its new location.

Follow these steps:

1. Turn on the printer, wait until the print head locks in the far right position, then turn off the printer.
2. Unplug the power cord from the electrical outlet. Then disconnect both the power cord and the printer cable from the printer.
3. Remove any paper from the printer and remove the paper support.
4. Open the printer cover. Secure the ink cartridge holder to the printer with tape as shown, then close the printer cover.

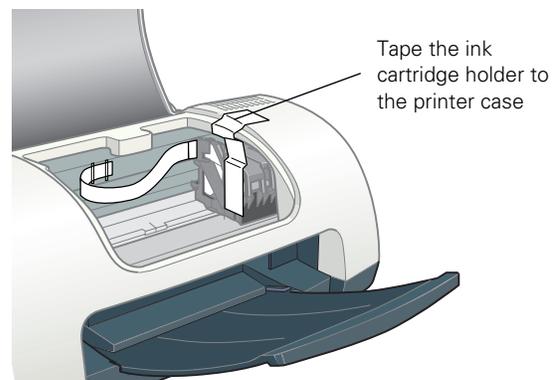

5. Push in the output tray.
6. Repack the printer and its attachments in the original box using the protective materials that came with them.

Keep the printer level as you transport it.

After transporting the printer, remove the tape securing the print head and test your printer. If you notice a decline in print quality, clean the print head (see page 7); if output is misaligned, align the print head (see page 7).

Related Documentation

PL-SC44UX	EPSON Stylus C44 Series Parts Price List
CPD-15884	EPSON Stylus C44 Series <i>Start Here</i>
CPD-15885	EPSON Stylus C44 Series <i>Installing Software/Important Notices</i> booklet
CPD-15883	EPSON Stylus C44 Series CD-ROM with <i>User's Guide</i> in HTML format