

EPSON Stylus® C62


# Start Here




CPD-14476  
4031970-00

## 1 Unpack


1 Remove everything from the box.

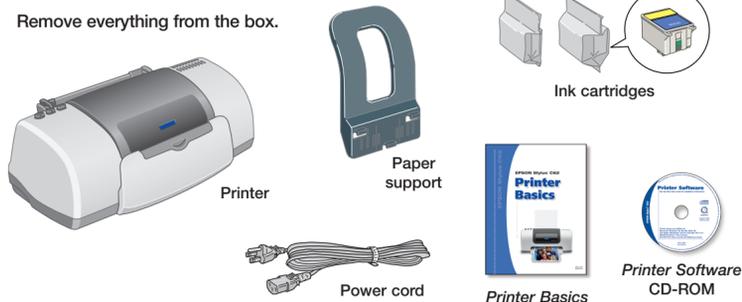


2 Remove the tape and packing material.

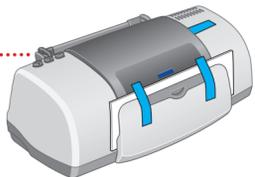

3 Peel off the tape beneath the cover and remove the insert.

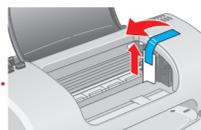

4 Slide the paper support into its three slots on the back of the printer.

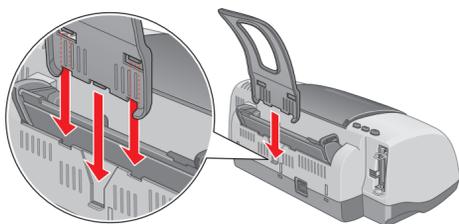

## 2 Connect the Printer


Printer connection cables are not included with your printer. You need **only one** of the following cables:

- USB cable (PC or Mac) **or**
- Parallel cable (PC only).

### USB Cable Users



- 1 Shut down your computer. In Windows®, click **Start** and select the **Shut Down** or **Turn Off** option.
- 2 Plug the flat end of the USB cable into any available USB port on your computer.

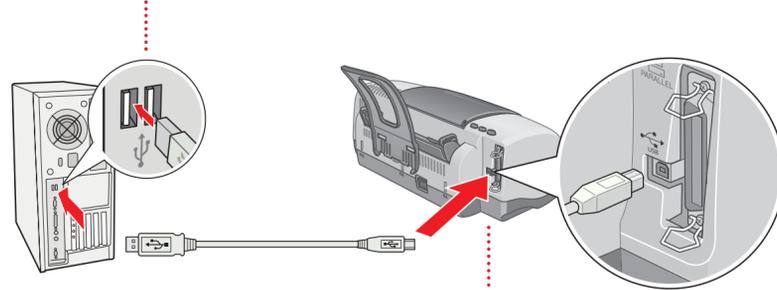


- 3 Plug the square end of the cable into your printer's USB port.

### Parallel Cable Users




- 1 Shut down your computer. Click **Start** and select the **Shut Down** or **Turn Off** option.
- 2 Plug the end of the cable with the screws on the side into your computer's parallel port and secure it.

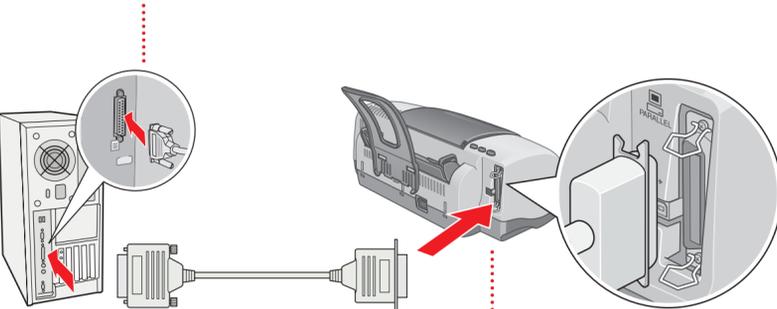

- 3 Plug the end of the cable with the slotted connector into your printer's parallel port, then secure it with the wire clips.

## 3 Turn On the Printer


- 1 Plug the printer's power cord into a grounded electrical outlet. (Don't turn on your computer yet.)

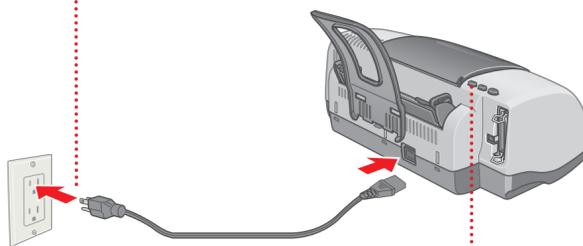


- 2 Press the power button to turn it on.

## 4 Install Ink Cartridges


- 1 Open the output tray.
- 2 Open the printer cover.

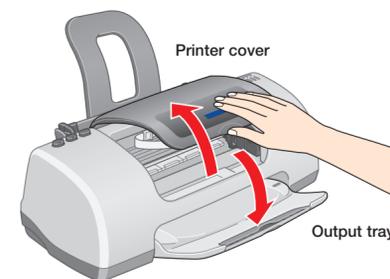


- 3 Lift up both ink cartridge clamps.

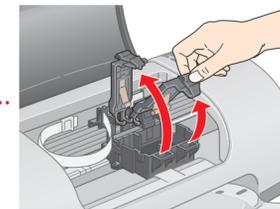

- 4 Unpack the ink cartridges that came with your printer and remove the yellow tape from the top.

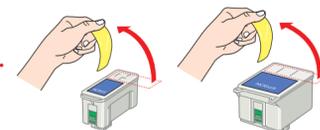


- 5 Lower each cartridge down into the holder.

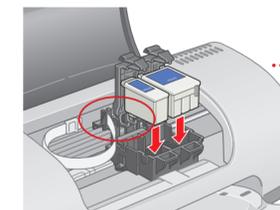

Make sure the tabs rest on the hooks in the back.


- 6 Shut the clamps and make sure they click into place.

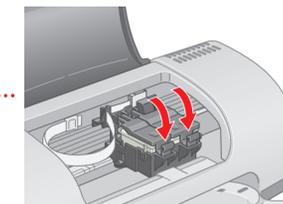

- 7 Close the printer cover.

- 8 Press the Ink Cartridge Replacement button.

The green power light flashes as your printer charges ink for about 1½ minutes.

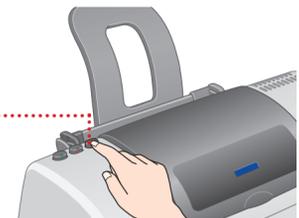


**CAUTION:** Don't turn off the printer or interrupt charging while the power light is flashing or you'll waste ink.


## 5 Load Paper

- 1 Load some paper behind the tabs inside the edge guides.

- 2 Press in the locking tab on the left edge guide and slide it to fit lightly against the paper stack.

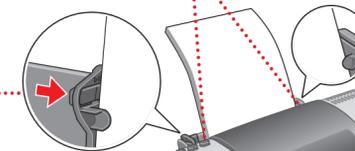

- 3 Pull out the output tray extension.

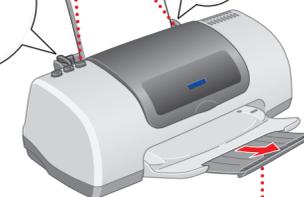

Turn over .....

# 6 Install Software

## Windows

The installation works differently depending on the version of the Windows operating system you're using.

If you're using Windows 2000 or Windows 95, see "Installing Your Printer Software" in the *Printer Basics* book for installation instructions.

If you're using Windows XP, Me, or 98, carefully follow the appropriate steps below.

## Windows XP

**1** Turn on your computer. (Make sure your printer is connected and turned on first.)

**2** Wait for Windows to detect your printer connection and display this screen:

*Note: If this screen doesn't appear, make sure your printer is turned on and connected.*



**3** Put the EPSON® CD-ROM in your CD-ROM or DVD drive and wait a few seconds for the CD-ROM to be recognized.



**4** Your printer software installs automatically and various messages appear on the screen. At the final Found New Hardware Wizard screen, click **Finish**.



**5** Now go to "Completing Windows Installation" in the next column.

## Windows Me and 98

**1** Turn on your computer. (Make sure your printer is connected and turned on first.)

**2** Wait for Windows Me or 98 to detect your printer connection and display a screen like this:

**DON'T CLICK ANY BUTTONS ON THE SCREEN YET.**

*Note: If this screen doesn't appear, make sure your printer is turned on and connected.*



**3** Put the EPSON CD-ROM in your CD-ROM or DVD drive and wait a few seconds for the CD-ROM to be recognized.



**4** Click **Next** on the Add New Hardware Wizard screen.



## Windows Me and 98 (continued)

**5 Me** Installation proceeds automatically. Click **Finish** when installation halts, then go to step 6.



**98** Click the **Search for** option, then click **Next**.



Click **CD-ROM drive**, then click **Next**.

At this screen, click **Next**.



Installation proceeds automatically. When installation halts, click **Finish** and go to step 6.

**6** Your computer detects your printer connection a second time and you see a screen like this:



**Me** Click **Next**, then click **Finish**. Installation proceeds automatically.

**98** Click **Next** at the next four screens, then click **Finish**. Installation proceeds automatically.



**7** At the final Add New Hardware Wizard screen, click **Finish**.

**8** Now go to "Completing Windows Installation" below.

## Completing Windows Installation

**1** After a moment, you see a license agreement screen. Read and agree to the license agreement to continue the installation.

**2** At the Options Menu, click **Print a Test Page** to check your installation. (If the page doesn't print correctly, see your *Printer Basics* book for a solution.)

**3** Click **Install EPSON Software™ Film Factory™** to install it on your system. Follow the on-screen instructions, then return to the Options Menu.

**4** Click **Install Printer Movies and Manual** to install the EPSON Printer Information Center on your desktop. It includes helpful printer animations and an additional manual.

**5** Click **Share Photos Online** to add a link to the EPSON PhotoCenter™ on your desktop.

**6** When you're finished, click **Exit**.

**7** When you see the registration screen, register your printer with EPSON as instructed. Remove the CD-ROM and keep it in case you need to reinstall any software later.

You're ready to print! See section 7.




## Macintosh OS 8.5.1 to 9.x


If you're using Macintosh® OS X, see "Installing Your Printer Software" in the *Printer Basics* book for installation instructions.

**1** Turn on your Macintosh. (Make sure your printer is still on.)

**2** Put the EPSON CD-ROM in your CD-ROM or DVD drive.

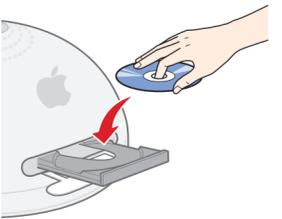

**3** Select **EPSON** on your desktop, if necessary.

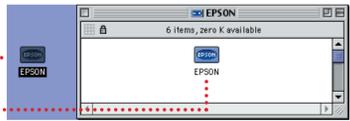

**4** Select **EPSON** in the window that opens.

**5** Read and agree to the license agreement to continue the installation.

**6** Click **Install Printer Driver** and follow the on-screen instructions to install the driver and restart your Macintosh.




**7** After your Macintosh restarts, register your printer with EPSON as instructed.

**8** Open the Chooser in the Apple® menu.



**9** Select **C62 Series**.

**10** Select your **USB port**.

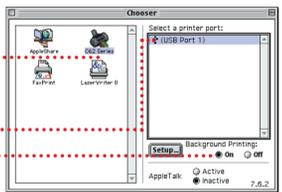

**11** Turn on background printing.

**12** Close the Chooser.

**13** Select **EPSON** in the window on your desktop again. You see the Main Menu.

**14** Click **Install EPSON Software Film Factory** to install it on your system. Follow the on-screen instructions, then return to the Main Menu.



**15** Click **Install Printer Movies and Manual** to install the EPSON Printer Information Center on your desktop. It includes helpful printer animations and an additional manual.

**16** Click **Share Photos Online** to add a link to the EPSON PhotoCenter on your desktop.

**17** When you're finished, click **Exit**. Remove the CD-ROM and keep it in case you need to reinstall any software later.


You're ready to print! See the details in section 7.

## 7 Print

Now you're ready to print. For instructions, use these resources:

• Your **Printer Basics** book

Learn about loading paper, printing, maintaining your printer, solving problems, and contacting EPSON.

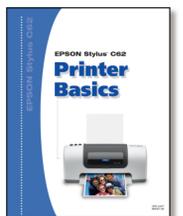

• **EPSON Printer Information Center** on your desktop

Click **Print Show** to view helpful animations that show you how to load paper, print, and perform other tasks.

Click **Reference Guide** to view detailed information about your printer.

