

EPSON Stylus® C82


Start Here



CPD-14293R1
4025621-01

1 Unpack


1 Remove everything from the box.

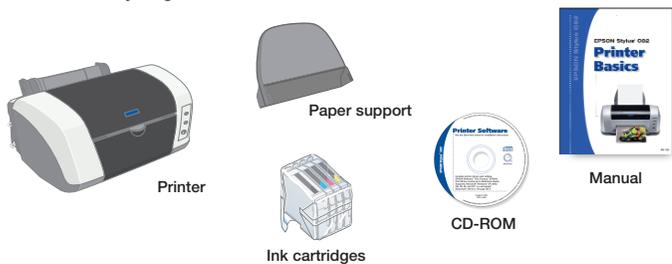

2 Remove all the blue tape and packing material inside and around the printer. The tape may be in slightly different places on your printer, so check carefully.




3 Slide the paper support into the grooves on either side of the sheet feeder. The paper support should fit securely.

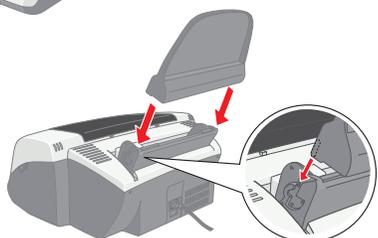

2 Power On


- 1 Plug the printer's power cord into a grounded electrical outlet.
- 2 Press the printer's power button until the green power light comes on.

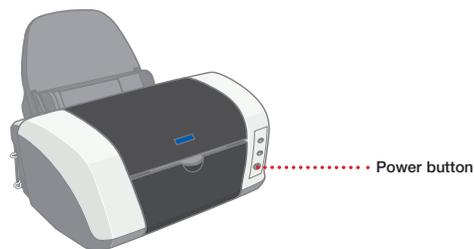

CAUTION: Use only the printer's power button to turn the printer on or off.

3 Load Ink

1 Lower the printer's output tray and open the cover.

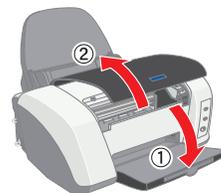


2 Shake the package of ink cartridges four or five times. Then remove the cartridges from the package. (Don't shake them after removing the packaging.)




3 Lower each ink cartridge into its holder with the green circuit board facing the back. Then gently push each ink cartridge down until it is firmly seated.

The color of the cartridge label should match the marker on the holder.

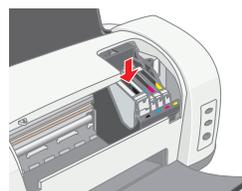

4 Press the ink button and close the printer cover.

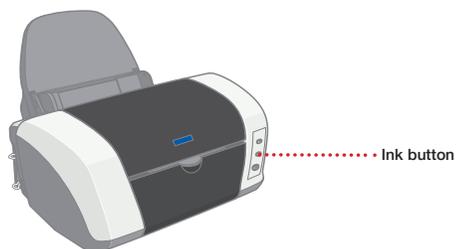

The green power light flashes as your printer charges ink for about 90 seconds.

CAUTION: Don't turn off the printer while the green power light is flashing, unless the printer hasn't moved or made any noise for more than 5 minutes.

4 Connect the Printer

Printer cables are not included with your printer. You need **only one** of the following cables:

- USB cable (PC or Macintosh®) or
- Parallel cable (PC only).

NOTE: If you have Windows® 95 or NT 4.x, you must use a parallel cable.

USB Cable Users (PC or Mac)




1 Shut down your computer. In Windows, click **Start** and select your **Shut Down** or **Turn Off** option.

Leave your computer turned off until section 6.

2 Plug the square end of the cable into the USB port on the side of the printer. (It's right above the parallel port.)

3 Plug the flat end of the cable into your computer's USB port until it stops. (You can use any open USB port.)

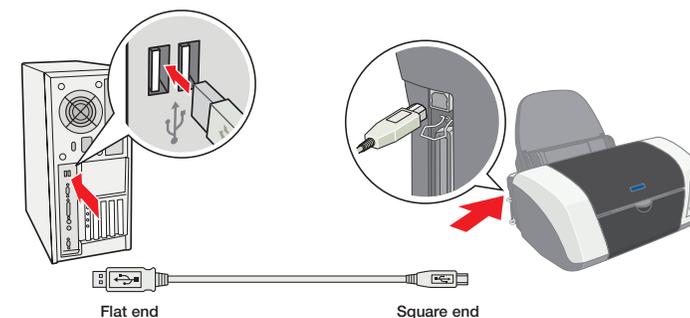

Parallel Cable Users (PC only)




1 Shut down your computer. Click **Start** and select your **Shut Down** or **Turn Off** option.

Leave your computer turned off until section 6.


2 Plug the end of the cable with the slotted connector into the parallel port on the side of the printer, then secure it with the wire clips.

3 Plug the end of the cable with the screws on the side into your computer's parallel port and secure it.

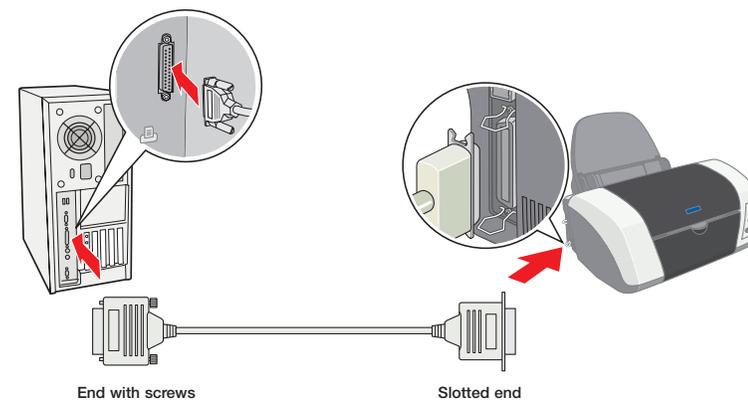

5 Load Paper

- 1 Fan a few sheets of paper and place them against the right edge guide. Don't push the paper in.

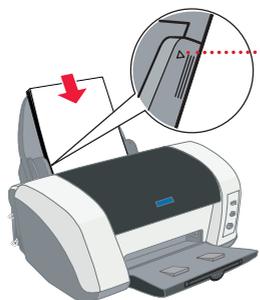

Don't load paper above this arrow

- 2 Slide the left edge guide against the paper, but not too tightly.
- 3 Pull out the output tray extensions.




6 Install Software

Follow the appropriate section below to install the printer software on Windows XP, Windows Me, Windows 98, or Macintosh OS 8.6 through 9.x.

For instructions on installing the software on Windows 2000, 95, or NT 4.x, or on Macintosh OS X, see your *Printer Basics* book.



Windows XP

- 1 Turn on your computer. (Make sure your printer is still on.)
- 2 Wait for this screen to appear.

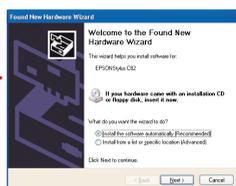

NOTE: If you don't see the *Found New Hardware* screen, make sure your printer is on and your cable is securely connected to your printer's port.

- 3 Put the EPSON CD-ROM in your drive.
- 4 Wait while the files are copied to your computer.
- 5 Click **Finish** when you see this screen.
- 6 You see the license agreement. Read the agreement and click **Agree**.

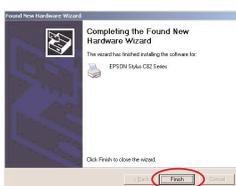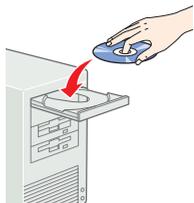

You see the Options Menu. Continue with the "Finishing Windows Installation" instructions to the right to complete your software installation.

Continued in next column

Windows Me and 98

- 1 Turn on your computer. (Make sure your printer is still on.) Wait until you see the Add New Hardware Wizard.




Windows Me



Windows 98

- 2 Put the EPSON CD-ROM in your drive.

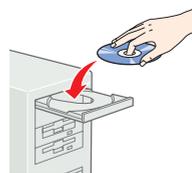

- 3 After a moment, click **Next** on the Add New Hardware Wizard screen.

Me If you're running Windows Me, go to step 7.

98 If you're running Windows 98, continue with step 4.

- 4 When you see this screen, click **Next** again.



- 5 You see a screen asking where you want Windows to search. Click **CD-ROM drive**. Then click **Next**.



- 6 Click **Next** on the following screen.



- 7 When you see a screen like this one, click **Finish**.

- 8 Do one of the following:


Me Click **Next** on the next screen.

98 Click **Next** on each of the four screens that follow.



- 9 When you see this screen, click **Finish**. Then wait while the files are copied to your computer.

- 10 Click **Finish** when you see this screen.

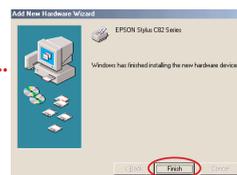

- 11 You see the license agreement. Read the agreement and click **Agree** to continue installation.

You see the Options Menu. Continue with the instructions below under "Finishing Windows Installation" to complete your software installation.

Finishing Windows Installation

- 1 When you see this screen, make sure you have paper in the printer, then click **Print a Test Page** to check that your printer is set up correctly.
- 2 Optionally, click **Install EPSON Software Film Factory** and follow the on-screen instructions.
- 3 Click **Install Manual and Printer Movies** and follow the on-screen directions to install the EPSON Printer Information Center on your desktop.
- 4 When you're finished, click **Exit** to close the Options Menu.
- 5 When you see the EPSON Product Registration screen, register your printer as instructed, then remove your CD-ROM.



You're ready to print! See the details in section 7.

Macintosh OS 8.6 through 9.x

- 1 Turn on your Macintosh. Then put the EPSON CD-ROM in your drive.
- 2 Double-click **EPSON** in your CD-ROM window. (You may have to double-click **EPSON** on your desktop to open the window.)



- 3 Read and agree to the license agreement to continue the installation.

- 4 Click **Install Printer Driver** and follow the on-screen instructions.

- 5 After your Macintosh restarts, register your printer with EPSON as instructed.

- 6 Open the Chooser and select your **C82 Series** printer icon.



- 7 Select your USB port and turn on background printing. Then close the Chooser.



- 8 Optionally, click **Install EPSON Software Film Factory** on the Main Menu and follow the on-screen instructions to install the software.

NOTE: You may have to double-click **EPSON** in your CD-ROM window to open the Main Menu.

- 9 Click **Install Manual and Printer Movies** and follow the on-screen instructions to install the EPSON Printer Information Center on your desktop.

- 10 When you're finished, click **Exit**. Then remove the CD-ROM and keep it in case you need to reinstall any software later.


You're ready to print! For more information, see section 7.

7 Print

Now you're ready to print. For instructions, use these resources:

- Your *Printer Basics* book

Learn about loading paper, printing, maintaining your printer, solving problems, and contacting EPSON.

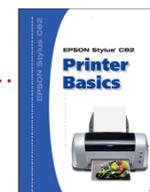

- EPSON Printer Information Center on your desktop

Click **Print Show** to view helpful animations that show you how to change ink cartridges and perform other tasks.



Click **Reference Guide** to view more information about your printer.

Use genuine EPSON inks and paper to get the best results from your printer. You can purchase ink cartridges, paper, and accessories from your local retailer or from the EPSON StoreSM at (800) 873-7766, or visit www.epsonstore.com (U.S. sales only). In Canada, please call (800) 463-7766 for dealer referral.

