

L5190 Start Here


IMPORTANT: Before using this product, make sure you read these instructions and the safety instructions in the online *User's Guide*.

Important Safety Instructions: When using telephone equipment, you should always follow basic safety precautions to reduce the risk of fire, electric shock, and personal injury, including the following:

- Do not use the Epson® product near water.
- Always keep this guide handy.
- Avoid using a telephone during an electrical storm. There may be a remote risk of electric shock from lightning.
- Do not use a telephone to report a gas leak in the vicinity of the leak.


Caution: To reduce the risk of fire, use only a No. 26 AWG or larger telecommunication line cord.

1 Unpack

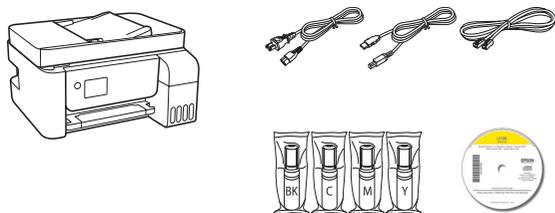

Note: Do not open the ink bottles until you are ready to fill the ink tanks. The ink bottles are vacuum packed to maintain reliability.

Remove all protective materials from the product.

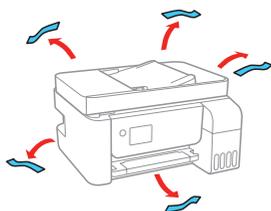

Note: Do not turn on the product yet.

2 Fill ink tanks

Warning: Keep the ink bottles out of the reach of children and do not drink the ink.

Caution: This product requires careful handling of ink. If ink spills, wipe it off immediately with a damp towel to avoid permanent stains. If ink gets on your clothes or belongings, it may not come off.

Note:


- Epson cannot guarantee the quality or reliability of non-genuine ink.
- Use the ink bottles included with the printer to set up the product. Part of the ink will be used to charge the print head. These bottles will print fewer pages compared with subsequent ink bottles.



413689200


EPSON
EXCEED YOUR VISION

- 1 Open the ink tank cover and the cap for the black ink tank.

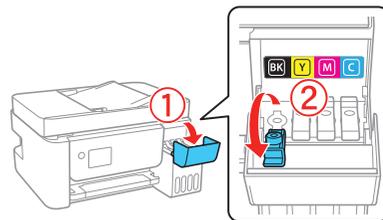


Note: Refer to the color-coded sticker on the ink tank unit to identify the color of each tank.

- 2 Unpack the black (BK) ink bottle. Hold the ink bottle upright and slowly turn the bottle cap to remove it.

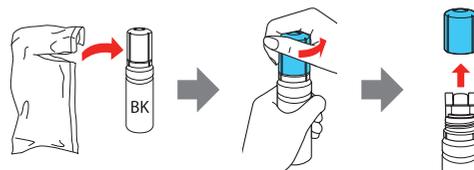


Caution: Do not shake or squeeze the ink bottles. Do not touch the top of the ink bottle after its cap is removed.

- 3 Place the top of the ink bottle on the filling port, then slowly stand the bottle upright to insert it, as shown.

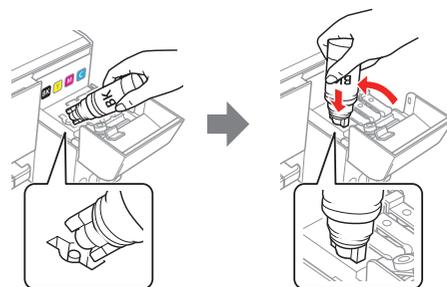

Note: Do not force the bottles into position; they are keyed for each color.


- 4 Wait for the ink to fill the tank. **Do not squeeze the bottle.**

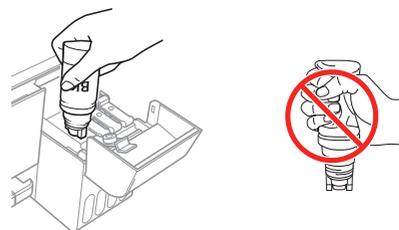

Note: Ink flows into the tank and stops automatically when the ink tank is filled to the upper line. If ink does not flow from the bottle, lift and reinsert the bottle.




- 5** When the ink tank is full, remove the ink bottle and securely close it with the bottle cap.

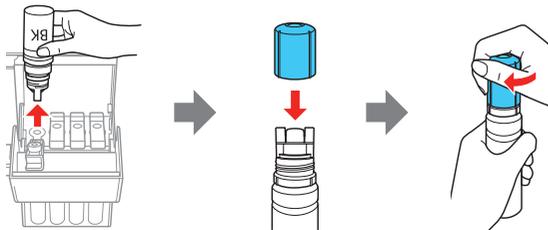


Note: Do not leave the ink bottle inserted; otherwise the bottle may be damaged or ink may leak. If any ink remains in the bottle, store the bottle upright and top off the ink tank after completing initial setup. See the online *User's Guide* for instructions.


- 6** Close the black ink tank cap.

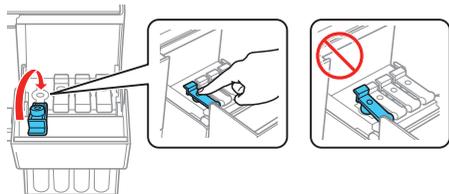


- 7** Repeat the previous steps for the other colors.

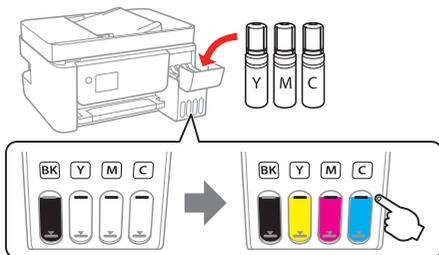

- 8** Close the ink tank cover.

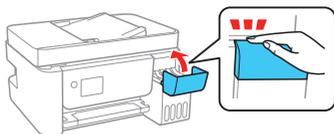


- 9** Connect the power cord to the back of the product and to an electrical outlet.

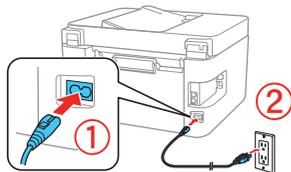

Caution: Do not connect to your computer yet.

- 10** Raise the control panel, then press the power button to turn on the product. The power light flashes.

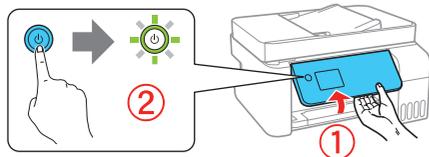

- 11** Select your language, country, date, and time.

Note: You can change these settings later using the product's control panel. For more information see the online *User's Guide*.

- 12** When instructed to see the *Start Here* sheet, press and hold the help button for **5 seconds**.




- 13** Press the start button to start ink charging.

Note: Ink charging takes about 10 minutes. When the power light stops flashing, ink charging is complete. Once initial setup of the printer is complete, you can top off the ink tanks with any remaining ink. See the online *User's Guide* for instructions.



Caution: Do not unplug or turn off the product, or open the inner cover while the product is charging or you'll waste ink.

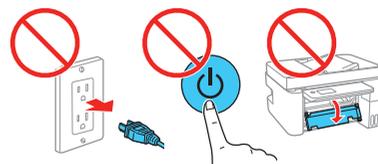


- 14** Press the OK button to proceed with initial setup.


3 Load paper

See the online *User's Guide* for information about loading capacity and available paper types and sizes.


- 1** Make sure the product is not charging ink. Then raise the paper support and tilt it backwards slightly.

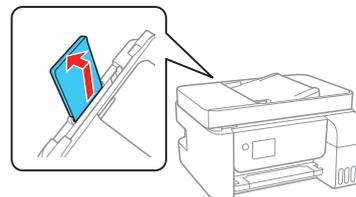

- 2** Slide the edge guides all the way out.

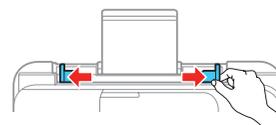


- 3** Load A4- or letter-size paper, glossy or printable side up and short edge first, in the middle of the rear paper feed slot.

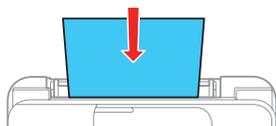


Note: Make sure the paper is under the  mark inside the edge guides.

- 4** Slide the edge guides against the paper, but not too tightly.

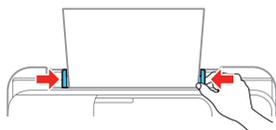

- 5** Pull out the output tray, then raise the paper stopper.

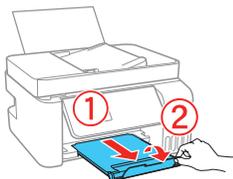


- 6** When prompted, use the arrow and **OK** buttons to select **Adjust** to adjust print quality now, or select **Adjust Later** to do so at another time.

For instructions on loading envelopes or legal-size paper, see the online *User's Guide*.

4 Connect the fax line

- 1** Connect the phone cord to a telephone wall jack and to the **LINE** port on your product. See the online *User's Guide* for more information.

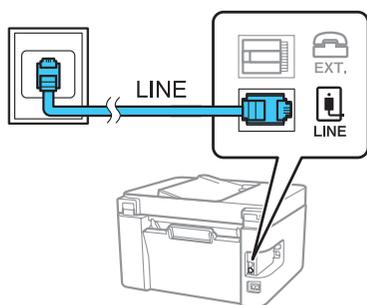

- 2** Press the **OK** button to set up the fax, or press the # pound button to set it up later.

5 Install software

Note: If you are using a Mac or your computer does not have a CD/DVD drive, an Internet connection is required to obtain the product software.

To print from a Chromebook™, go to www.epson.com.jm/support/gcp for instructions.

- 1** Make sure the product is **NOT CONNECTED** to your computer.



Windows®: If you see a Found New Hardware screen, click **Cancel** and disconnect the USB cable.

- 2** Insert the product CD (Windows only) or download and run your product's software package. For the latest software, visit www.epson.com.jm/support/L5190.
- 3** Follow the instructions on the computer screen to run the setup program.
- 4** When you see the Select Your Connection screen, select one of the following:

- **Wireless connection**

In most cases, the software installer automatically attempts to set up your wireless connection. If setup is unsuccessful, you may need to enter your network name (SSID) and password.

- **Direct USB connection**

Make sure you have the USB cable ready.

- **Wired network connection**

Make sure you have an Ethernet cable (not included).

Mobile printing

Connect wirelessly from your smartphone, tablet, or computer. Print documents and photos from across the room or around the world:

- Print directly from your iOS device. Simply connect your printer and device to the same network and tap the action icon to select the print option.
- Use Epson Print Enabler (free from Google Play™) with Android™ devices (v4.4 or later). Then connect your printer and device to the same network and tap the menu icon to select the print option.
- Print remotely with Epson Connect™ and Google Cloud Print™. See your online *User's Guide* for instructions or learn more at www.epson.com.jm/connect.

Any problems?

Network setup was unsuccessful

- Make sure you select the right network name (SSID).
- Restart your router (turn it off and then on), then try to connect to it again.
- The printer can only connect to a network that supports 2.4 GHz connections. If your router offers both 2.4 GHz and 5 GHz connections, make sure 2.4 GHz is enabled.
- If you see a firewall alert message, click **Unblock** or **Allow** to let setup continue.
- If your network has security enabled, make sure you enter your network password (WEP key or WPA passphrase) correctly. Be sure to enter your password in the correct case.

There are lines or incorrect colors in my printouts.


Run a nozzle check to see if there are any clogged nozzles. Then clean the print head, if necessary. See the online *User's Guide* for more information.

The product's screen is dark.

Make sure your product is turned on, and press any button to wake it from sleep mode.

Setup is unable to find my product after connecting it with a USB cable.

Make sure your product is on and securely connected as shown:

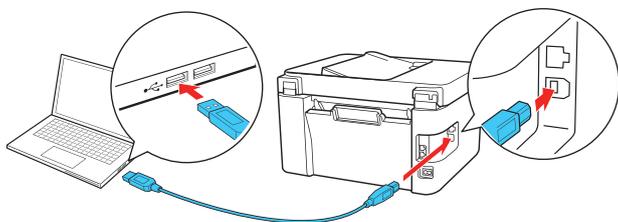

Any questions?

User's Guide

Windows: Click the icon on your desktop or Apps screen to access the online *User's Guide*.

Mac: Click the icon in Applications/Epson Software/Guide to access the online *User's Guide*.

If you don't have a User's Guide icon, go to the Epson website, as described in the next column.

Technical support

Visit www.epson.com.jm/support/L5190 to download drivers, view manuals, get FAQs, or contact Epson.

You can also speak to a service technician by calling one of these numbers:

Argentina	(54 11) 5167-0300 0800-288-37766	Guatemala*	1-800-835-0358
Bolivia*	800-100-116	Mexico	01-800-087-1080
Chile	(56 2) 2484-3400	Mexico City	(52 55) 1323-2052
Colombia	018000-915235	Nicaragua*	00-1-800-226-0368
Bogota	(57 1) 592-2200	Panama*	00-800-052-1376
Costa Rica	800-377-6627	Paraguay	009-800-521-0019
Dominican Republic*	1-888-760-0068	Peru	0800-10-126
Ecuador*	1-800-000-044	Lima	(51 1) 418-0210
El Salvador*	800-6570	Uruguay	00040-5210067
		Venezuela	(58 212) 240-1111

* Contact your local phone company to call this toll-free number from a mobile phone.

If your country does not appear on the list, contact your nearest Epson sales office. Toll or long distance charges may apply.

Need paper and ink?

Ensure brilliant results with Epson specialty papers, engineered specifically for Epson printers. You can purchase them from an Epson authorized reseller. To find the nearest one, visit www.epson.com.jm or contact Epson as described in "Any questions?" on this sheet.



DESIGNED *for* EXCELLENCE™

Epson printers, ink and specialty papers.

L5190 replacement inks

Color	Part number
Black	544
Cyan	544
Magenta	544
Yellow	544



EPSON is a registered trademark, EPSON Exceed Your Vision is a registered logomark, and Epson Connect is a trademark of Seiko Epson Corporation.

Designed for Excellence is a trademark of Epson America, Inc.

Mac is a trademark of Apple Inc., registered in the U.S. and other countries.

Windows is a registered trademark of Microsoft Corporation in the United States and/or other countries.

Android, Google Cloud Print, Chromebook, and Google Play are trademarks of Google LLC.

General Notice: Other product names used herein are for identification purposes only and may be trademarks of their respective owners. Epson disclaims any and all rights in those marks.

This information is subject to change without notice.

© 2018 Epson America, Inc., 10/18

CPD-56090