

IMPORTANT: Before using this product, make sure you read these instructions and the safety instructions in the online *User's Guide*.


Note: As part of the ReadyPrint™ program, Epson monitors ink usage remotely to provide you with additional ink before you run out of it. The product must be connected to the internet to function and monitor ink usage.

Important Safety Instructions: When using telephone equipment, you should always follow basic safety precautions to reduce the risk of fire, electric shock, and personal injury, including the following:

- Do not use the Epson® product near water.
- Always keep this guide handy.
- Avoid using a telephone during an electrical storm. There may be a remote risk of electric shock from lightning.
- Do not use a telephone to report a gas leak in the vicinity of the leak.


Caution: To reduce the risk of fire, use only a No. 26 AWG or larger telecommunication line cord.

1 Unpack

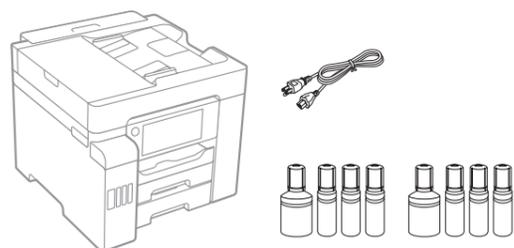


Note: Do not open the ink bottles until you are ready to fill the ink tanks. The ink bottles are vacuum packed to maintain reliability.

1 Remove all protective materials from the product.

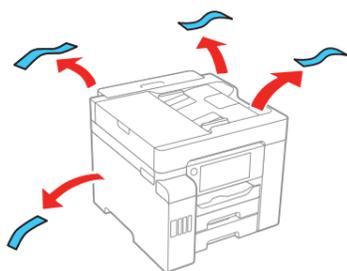

2 Lift up the scanner unit. Remove all protective materials from inside the product.

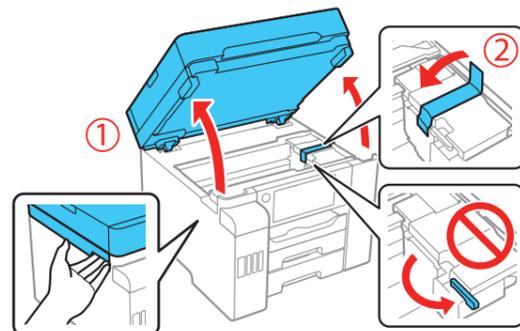

Caution: The printer ships with the transportation lock in the printing position. Do not move it from the printing position.

3 Lower the scanner unit.

2 Fill ink tanks


Warning: Keep the ink bottles out of the reach of children and do not drink the ink.

Caution: This product requires careful handling of ink. If ink spills, wipe it off immediately with a damp towel to avoid permanent stains. If ink gets on your clothes or belongings, it may not come off.


Note:

- Use only the Epson 582 ink provided to you under the ReadyPrint program. Use the ink bottles included with the printer to set up the product.
- The included ink bottles are designed for reliable printer setup and cannot be resold.

1 Open the ink tank cover, then open the cap for the black ink tank.

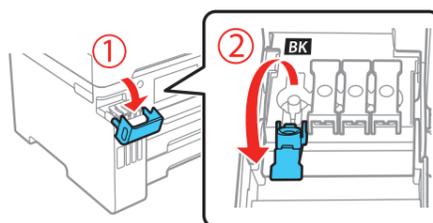

2 Unpack the black (BK) ink bottle. Hold the ink bottle upright and slowly turn the bottle cap to remove it.

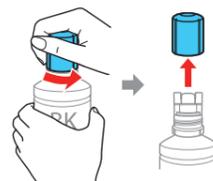


Caution: Do not shake or squeeze the ink bottles. Do not touch the top of the ink bottle after its cap is removed.

3 Insert the ink bottle into the filling port.

Note: Refer to the color-coded sticker on the ink tank unit to identify the color of each tank. Do not force the bottle into position; each bottle is keyed for each color.

4 Wait for the ink to fill the tank. Do not squeeze the bottle.

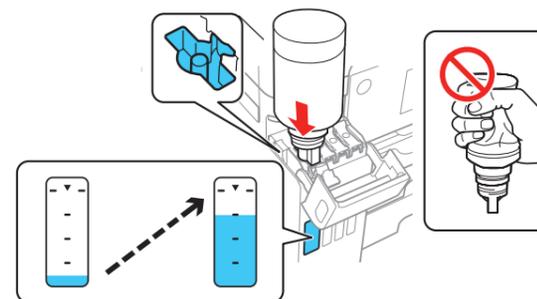

Note: If ink does not flow from the bottle, lift and reinsert the bottle.

5 When the ink bottle is empty, remove the ink bottle and replace the bottle cap.


Note: Do not leave the ink bottle inserted; otherwise the bottle may be damaged or ink may leak.



6 Close the black ink tank cap.




7 Repeat the previous steps for the other colors.

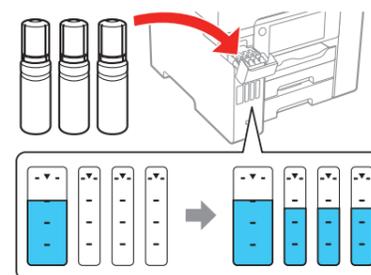


Caution: After setup, periodically inspect the ink level to ensure it is not below the lowest line on the tank. Prolonged use when ink is below the lowest line could damage the product. See the online *User's Guide* for refilling instructions.

8 Close the ink tank cover.

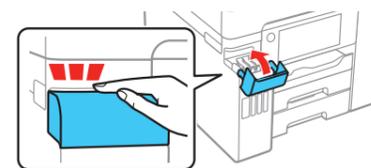


9 Connect the power cord to the back of the product and to an electrical outlet.

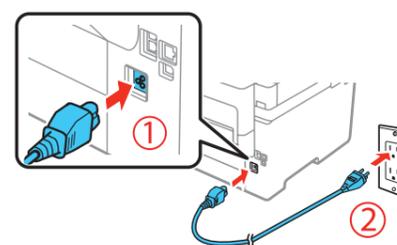

Caution: Do not connect to your computer yet.

10 Raise the control panel, then press the power button to turn on the product.

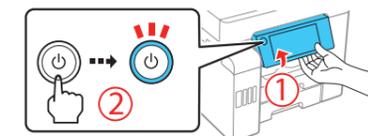

Note: If an error message appears, turn off the product and check that no protective material has been left inside the product and that the transportation lock is in the printing position.

11 Select your language, country, date, and time settings.

Note: You can change these settings later using the product's control panel. For more information, see the online *User's Guide*.


Follow steps 12 and 13 to continue ink charging.

12 When the message to see the *Start Here* sheet appears on the LCD screen, press and hold **OK** for 5 seconds.

13 When the ink confirmation message appears on the LCD screen, select **Proceed** for each color, then press **Start** to start charging the ink. Ink charging takes approximately 9 minutes. A message appears when ink charging is complete. Press **Close** to proceed with initial setup.

Note: Part of the ink from the included bottles is used for printer setup. You will notice ink levels in the tanks decrease during charging.

Caution: Do not unplug or turn off the product, raise the scanner unit, or load paper while the product is charging or you'll waste ink.

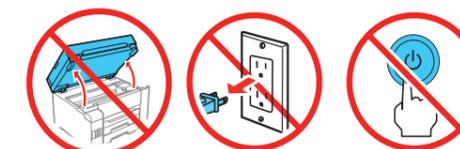

14 To finish filling the ink tanks, repeat steps 1 through 8 using the additional set of ink bottles included with the product. If any ink remains in the bottles, close the bottles and store them for later use.


Note: Replace the bottle cap before disposing of the bottles.

15 Select **Settings > Maintenance > Fill Ink** and follow the on-screen instructions to reset the ink levels.


3 Load paper

See the online *User's Guide* for information about loading capacity, available paper types and sizes, loading envelopes, and using the rear paper feed slot or ADF.


1 Make sure the product is not charging ink, then pull out the paper cassette.

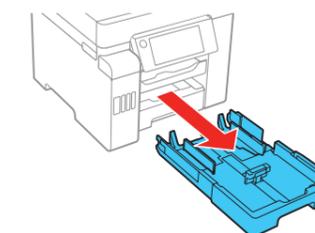

- 2 Slide the side edge guides all the way out.

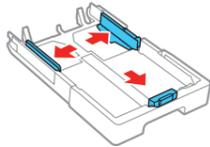


- 3 Insert paper with the glossy or printable side facedown.

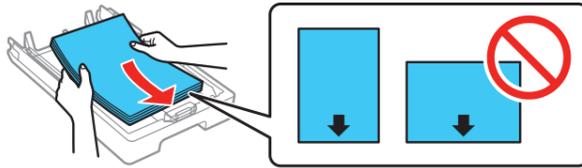


Note: Make sure the paper is loaded against the front edge guide and not sticking out from the end of the cassette.


- 4 Slide the side edge guides against the paper but not too tightly.

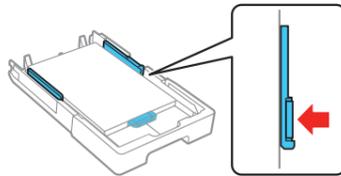

Note: Do not load paper above the arrow mark on the side edge guide.

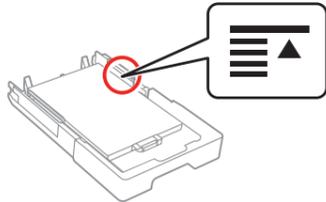

- 5 Keep the cassette flat as you insert it all the way.

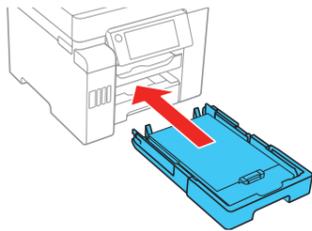

- 6 Select the paper settings on the product's control panel.

4 Connect the fax line

- 1 Connect a phone cord to a telephone wall jack and to the **LINE** port on your product. See the online *User's Guide* for more information.
- 2 Select **Proceed** on the LCD screen to set up the fax, or select **Close** to set it up later.

5 Install software

Note: An Internet connection is required to obtain the product software.

- 1 Make sure the product is **NOT CONNECTED** to your computer.

Windows: If you see a Found New Hardware screen, click **Cancel** and disconnect the USB cable.
- 2 Download and run your product's software package: www.epson.com/support/et5850u
- 3 Follow the instructions on the computer screen to run the setup program.
- 4 When you see the Select Your Connection screen, select one of the following:
 - **Wireless connection**
In most cases, the software installer automatically attempts to set up your wireless connection. If setup is unsuccessful, you may need to enter your network name (SSID) and password.
 - **Direct USB connection**
Make sure you have a USB cable (not included).
 - **Wired network connection**
Make sure you have an Ethernet cable (not included).

Mobile and voice-activated printing

- Print directly from your smartphone or tablet using iOS or Android™ with Epson iPrint™. Simply connect your printer and device to the same network and tap the action icon to select the print option.
- Print directly from your Android (v4.4 or later) device*. Simply connect your printer and device to the same network and tap the menu icon to select the print option.
- Print from wherever you are, next to your printer or remotely, with Epson Connect™. Learn more at www.epson.com/connect.
- Use voice-activated assistants to print a variety of creative and everyday items from your Epson® product. Simply add your product to an Epson Connect account, then link the account to a voice-activated assistant. See www.epson.com/voice for more information.

* May require the Epson Print Enabler or Mopria Print Service app from Google Play™.

Any problems?

Network setup was unsuccessful.

- Make sure you select the right network name (SSID).
- Restart your router (turn it off and then on), then try to connect to it again.
- If you see a firewall alert message, click **Unblock** or **Allow** to let setup continue.
- If your network has security enabled, make sure you enter your network password (WEP key or WPA passphrase) correctly. Be sure to enter your password in the correct case.
- Print a network connection report to identify network problems and solutions. See your online *User's Guide* for instructions.

There are lines or incorrect colors in my printouts.

Run a nozzle check to see if there are any gaps in the printout. Then clean the print head, if necessary. See the online *User's Guide* for more information.

The product's screen is dark.

Make sure your product is turned on and touch the LCD screen to wake it from sleep mode.

Any questions?

User's Guide

Windows: Click the icon on your desktop or Apps screen to access the online *User's Guide*.

Mac: Click the icon in Applications/Epson Software/Guide to access the online *User's Guide*.

If you don't have a User's Guide icon, go to the Epson website, as described below.

Videos

Visit www.epson.com/support/et5850videos to view support videos.

ReadyPrint subscription program technical support

Visit www.epson.com/support/et5850u to download drivers, view manuals, get FAQs, or contact Epson.

Call 800-879-3776, 6 AM to 8 PM Pacific Time, Monday through Friday, and 7 AM to 4 PM, Pacific Time, Saturday. Days and hours of support are subject to change without notice. Toll or long distance charges may apply.

Recycling

Epson offers a recycling program for end of life your ink bottles. Please go to www.epson.com/recycle for information on how to return your ink bottles for proper disposal.

Need paper?

Ensure brilliant results with Epson specialty and plain papers, engineered specifically for Epson printers. Find Epson papers and Epson Genuine Ink at www.epson.com and at Epson authorized resellers. Call 800-GO-EPSON (800-463-7766).



DESIGNED for EXCELLENCE™
Epson printers, ink and specialty papers.

Declaration of Conformity

According to 47CFR, Part 2 and 15 for Class B Personal Computers and Peripherals; and/or CPU Boards and Power Supplies used with Class B Personal Computers:

We: Epson America, Inc.
Located at: 3840 Kilroy Airport Way, MS 3-13,
Long Beach, CA 90806-2469
Telephone: (562) 981-3840

Declare under sole responsibility that the product identified herein, complies with 47CFR Part 2 and 15 of the FCC rules as a Class B digital device. Each product marketed, is identical to the representative unit tested and found to be compliant with the standards. Records maintained continue to reflect the equipment being produced can be expected to be within the variation accepted, due to quantity production and testing on a statistical basis as required by 47CFR §2.906. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Trade Name: Epson
Type of Product: Multifunction printer
Model: C761C
Marketing Name: ET-5850U



EPSON is a registered trademark, EPSON Exceed Your Vision is a registered logomark, and Epson Connect and Epson iPrint are trademarks of Seiko Epson Corporation.

ReadyPrint and Designed for Excellence are trademarks of Epson America, Inc.

Windows is a registered trademark of Microsoft Corporation in the United States and/or other countries.

Mac is a trademark of Apple Inc., registered in the U.S. and other countries.

Android and Google Play are trademarks of Google LLC.

General Notice: Other product names used herein are for identification purposes only and may be trademarks of their respective owners. Epson disclaims any and all rights in those marks.

This information is subject to change without notice.

© 2020 Epson America, Inc., 2/20

Printed in XXXXX

CPD-58687