


L1210/L3210 Start Here

IMPORTANT: Before using this product, make sure you read these instructions and the safety instructions in the online *User's Guide*.

The illustrations show the L3210, but the steps are the same for the L1210, unless otherwise specified.


Note: Not all products are available in all regions.

1 Unpack

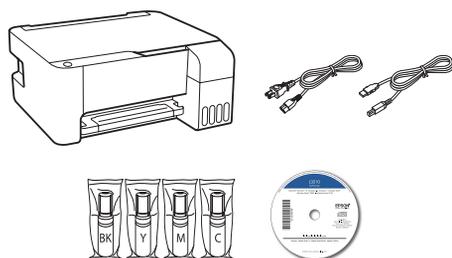


Note: Do not open the ink bottles until you are ready to fill the ink tanks. The ink bottles are vacuum packed to maintain reliability.

1 Remove all protective materials from the product.

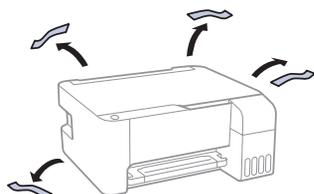

2 Connect the power cord to the back of the product and to an electrical outlet.

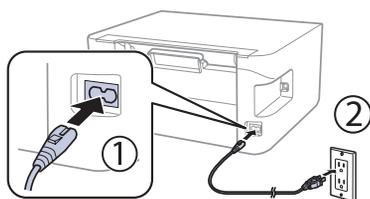

Caution: Do not connect to your computer yet.

2 Fill ink tanks


Warning: Keep the ink bottles out of the reach of children and do not drink the ink.

Caution: This product requires careful handling of ink. If ink spills, wipe it off immediately with a damp towel to avoid permanent stains. If ink gets on your clothes or belongings, it may not come off.

Note:


- Epson cannot guarantee the quality or reliability of third-party ink.
- Use the ink bottles included with the printer to set up the product. Part of the ink will be used to charge the print head. These bottles will print fewer pages compared with replacement ink bottles.
- Epson strongly recommends the use of genuine ink to ensure optimal print quality and performance.

1 Open the ink tank cover, then open the cap for the black (BK) ink tank.

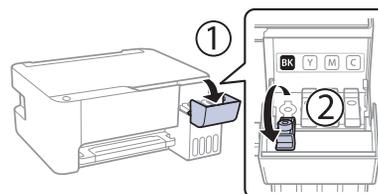


Note: Refer to the color-coded sticker on the ink tank unit to identify the color of each tank.

2 Unpack the black (BK) ink bottle. Hold the ink bottle upright and slowly turn the bottle cap to remove it.

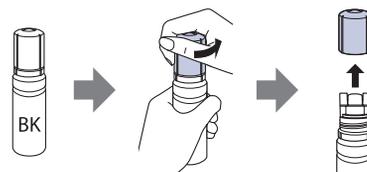


Caution: Do not shake or squeeze the ink bottle. Do not touch the top of the ink bottle after its cap is removed.

3 Insert the ink bottle into the filling port.

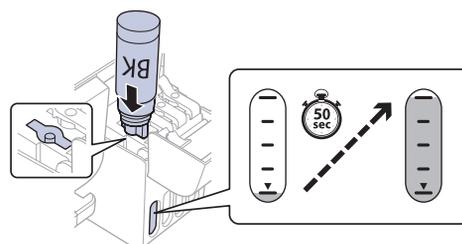

Note: Do not force the bottle into position; each bottle is keyed for each color.

4 Wait for the ink to fill the tank. Do not squeeze the bottle or allow it to contact any other surface.

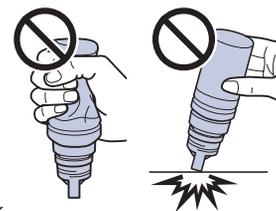


Note: Ink flows into the tank and stops automatically when the ink tank is filled to the upper line. If ink does not flow from the bottle, lift and reinsert the bottle.



413971100


EPSON
EXCEED YOUR VISION

- 5** When the ink tank is full, remove the ink bottle and securely close it with the bottle cap. If any ink remains in the bottle, store the bottle upright for later use.

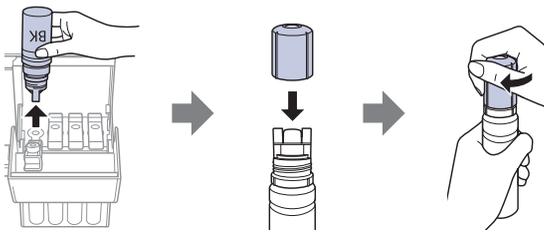


Note: Do not leave the ink bottle inserted; otherwise the bottle may be damaged or ink may leak.


- 6** Securely close the black ink tank cap.

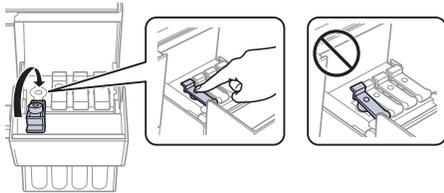


- 7** Repeat the previous steps for the other colors.

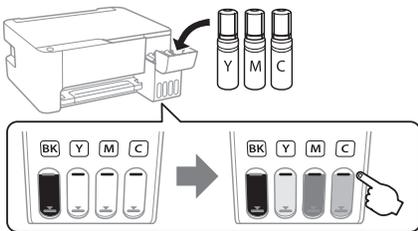

- 8** Close the ink tank cover.

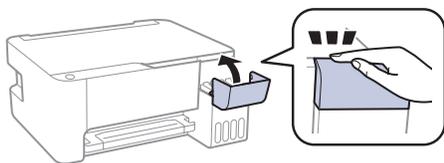


- 9** Press the power button to turn on the product, then wait for the power and ink lights to stay on.

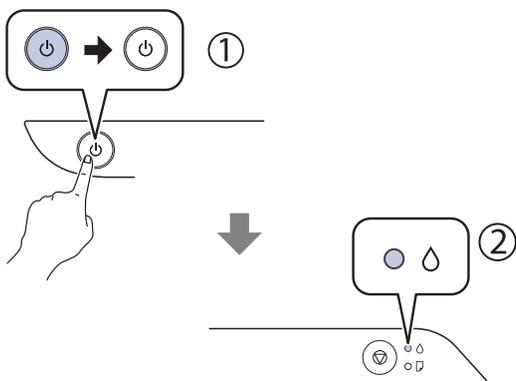


- 10** Press and hold the stop button for **5 seconds** until the power light starts to flash and ink charging begins. Ink charging takes about **11 minutes**.



Note: When the power light stops flashing, ink charging is complete. Once initial setup of the printer is complete, you can top off the ink tanks with any remaining ink. See the online *User's Guide* for instructions.

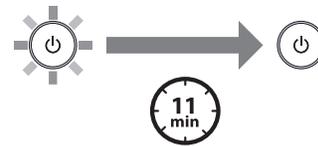

Caution: Do not unplug or turn off the product, or open the front cover while the product is charging or you'll waste ink.

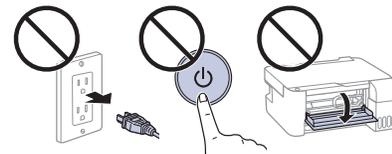


Note: After some ink is used for charging, the rest is available for printing.

Caution: After setup, periodically inspect the ink levels to ensure they do not fall below the lowest lines on the tanks. Prolonged use when any level is below the lowest line could damage the product. See the online *User's Guide* for refilling instructions.


3 Load paper

See the online *User's Guide* for information about loading capacity, available paper types and sizes, and loading envelopes.


- 1** Make sure the product is done charging the ink. Then flip the feeder guard forward (L3210), raise the paper support, and tilt it backwards slightly.

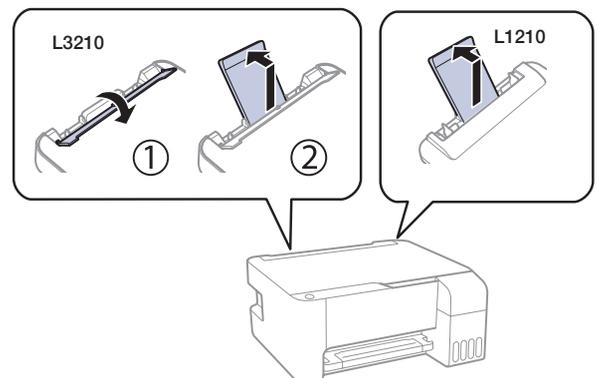


- 2** Slide the edge guides all the way out.

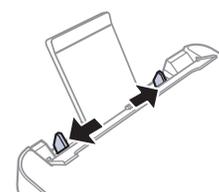


- 3** Load A4- or letter-size paper, glossy or printable side up and short edge first, in the middle of the rear paper feeder.

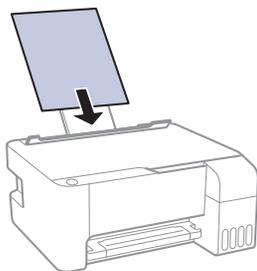

- 4** Slide the edge guides against the paper, but not too tightly. Flip the feeder guard back (L3210).

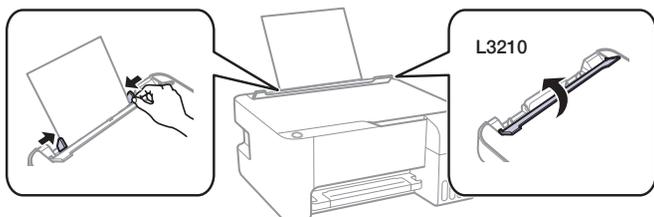

- 5** Pull out the output tray, then raise the paper stopper.

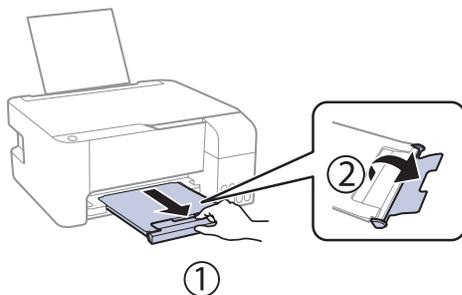

4 Install software

Note: If you are using a Mac or your computer does not have a CD/DVD drive, an Internet connection is required to obtain the product software.

- 1** Make sure the product is **NOT CONNECTED** to your computer.



Windows®: If you see a Found New Hardware screen, click **Cancel** and disconnect the USB cable.

- 2** Insert the product CD (Windows only) or download and run your product's software package. For the latest software, visit:

L1210
www.latin.epson.com/support/L1210

L3210
www.latin.epson.com/support/L3210

- 3** Follow the instructions on the computer screen to run the setup program.

Error indicators

If you see one of the error indicators below, follow the steps here to proceed:

 **Flashing**  **On**

	Initial ink charging may not be complete. Be sure to complete the steps in the "Fill ink tanks" section.
	Paper is out or multiple pages have fed into the paper support. Load paper correctly, then do the following: L1210: Press the  stop button. L3210: Press the  B&W copy or the  color copy button.
	Paper is jammed. Remove any jammed paper from inside the product or from the paper support, then do the following: L1210: Press the  stop button. L3210: Press the  B&W copy or the  color copy button. If the error indicator continues to flash, see the online <i>User's Guide</i> for additional information on clearing paper jams.
 	If the  power light is on or flashing: The printer was not turned off correctly. Clear the error, then cancel any pending print jobs. If the  power light is off: The printer is in recovery mode because a firmware update failed. See the online <i>User's Guide</i> for details on how to clear the error.
  	Printer error. Open the front cover and remove any paper from inside the product. Then turn the power off and on again. If the error persists, contact Epson for support.

If you see an error that is not listed here, see your online *User's Guide*.


Any problems?

There are lines or incorrect colors in my printouts.

Run a nozzle check to see if there are gaps in the printout. Then clean the print head, if necessary. See the online *User's Guide* for more information.

Setup is unable to find my product after connecting it with a USB cable.

Make sure your product is on and securely connected as shown:

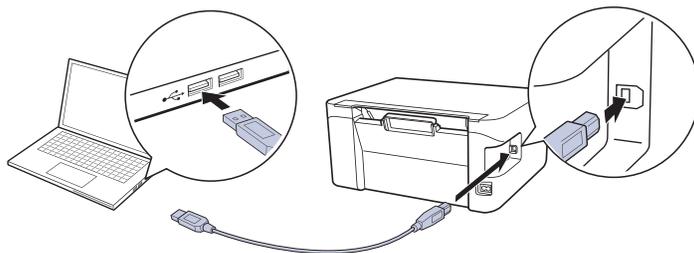

Any questions?

User's Guide

Windows: Click the icon on your desktop or Apps screen to access the online *User's Guide*.

Mac: Click the icon in Applications/Epson Software/Guide to access the online *User's Guide*.

If you don't have a User's Guide icon, go to the Epson website, as described in "Technical support."

Technical support

Visit www.latin.epson.com/support and search for your product to download drivers, view manuals, get FAQs, or contact Epson.

You can also speak to a service technician by calling one of these numbers:

Argentina	(54 11) 5167-0300 0800-288-37766	Guatemala*	1-800-835-0358
Bolivia*	800-100-116	Mexico	01-800-087-1080
Chile	(56 2) 2484-3400	Mexico City	(52 55) 1323-2052
Colombia	018000-915235	Nicaragua*	00-1-800-226-0368
Bogota	(57 1) 523-5000	Panama*	00-800-052-1376
Costa Rica	800-377-6627	Paraguay	009-800-521-0019
Dominican Republic*	1-888-760-0068	Peru	0800-10126
Ecuador*	1-800-000-044	Lima	(51 1) 418-0210
El Salvador*	800-6570	Uruguay	00040-5210067
		Venezuela	(58 212) 240-1111

* Contact your local phone company to call this toll-free number from a mobile phone.

If your country does not appear on the list, contact your nearest Epson sales office. Toll or long distance charges may apply.

Need paper and ink?

Ensure brilliant results with Epson® specialty and plain papers, engineered specifically for Epson printers. You can purchase them from an Epson authorized reseller. To find the nearest one, visit www.latin.epson.com or contact Epson as described in "Any questions?" on this sheet.



DESIGNED *for*
EXCELLENCE™

Epson printers, ink and specialty papers.

L1210/L3210 replacement inks

Color	Part number
Black	T544120-AL
Cyan	T544220-AL
Magenta	T544320-AL
Yellow	T544420-AL



EPSON is a registered trademark and EPSON Exceed Your Vision is a registered logomark of Seiko Epson Corporation.

Designed for Excellence is a trademark of Epson America, Inc.

Windows is a registered trademark of Microsoft Corporation in the United States and/or other countries.

Mac is a trademark of Apple Inc., registered in the U.S. and other countries.

General Notice: Other product names used herein are for identification purposes only and may be trademarks of their respective owners. Epson disclaims any and all rights in those marks.

This information is subject to change without notice.

© 2021 Epson America, Inc., 2/21