

Quick Setup


IMPORTANT: Before using this product, make sure you read these instructions and the safety instructions in the online *User's Guide*.

Note: *Product availability varies by country and region.*

Note: *These illustrations show the PowerLite W53+, but the instructions are the same for the PowerLite W55+ unless otherwise noted.*

Contents


Make sure your projector box includes all of these parts:

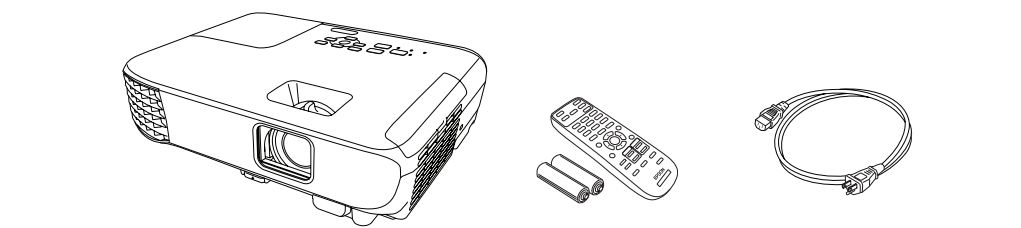

Connect the projector

Choose from the following connections. See the sections below or the online *User's Guide* for details.

Computer

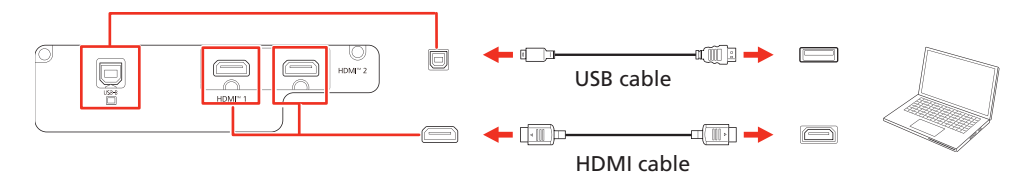

HDMI™ port

Connect one end of an HDMI cable to one of the projector's **HDMI** ports and the other end to an HDMI port on your computer.

USB port

 
Connect the square end of a USB cable to the projector's **USB-B** (square) port. Connect the flat end of the cable to any USB port on your computer.

Windows® 7 or later: After turning on the projector, follow the on-screen instructions to install the Epson® USB Display software (**EMP_UDSE.EXE**; only on first connection). If the software screen does not display automatically, open **My Computer**, **Computer**, or **This PC**, then double-click **EPSON_PJ_UD**.

OS X 10.8.x or higher: After turning on the projector, the setup folder for USB Display appears in the Finder. Double-click **USB Display Installer** and follow the on-screen instructions to install the Epson USB Display software (only on first connection). If the software screen does not display automatically, double-click **EPSON_PJ_UD**, then double-click **USB Display Installer**.

Video device


Connect one end of an HDMI cable to one of the projector's **HDMI** ports and the other to an HDMI port on your video device.



Note: *If you connected a streaming device to an HDMI port, you can also connect it to the projector's **USB-A** (flat) port for power (PowerLite W55+).*

USB device (PowerLite W55+)


Connect a supported digital camera, USB flash drive, or USB storage device to the projector's **USB-A** (flat) port.

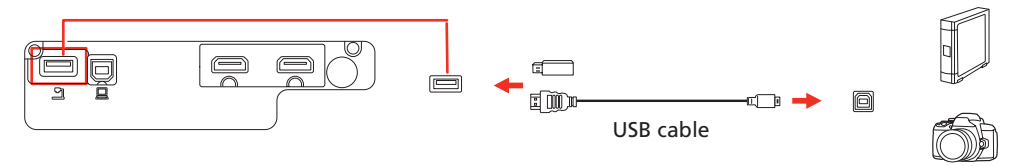

If you connect a digital camera, USB flash drive, or USB storage device, you can use the projector's PC Free feature. See the online *User's Guide* for details.

Using the remote control


Install the batteries as shown (two AA batteries).

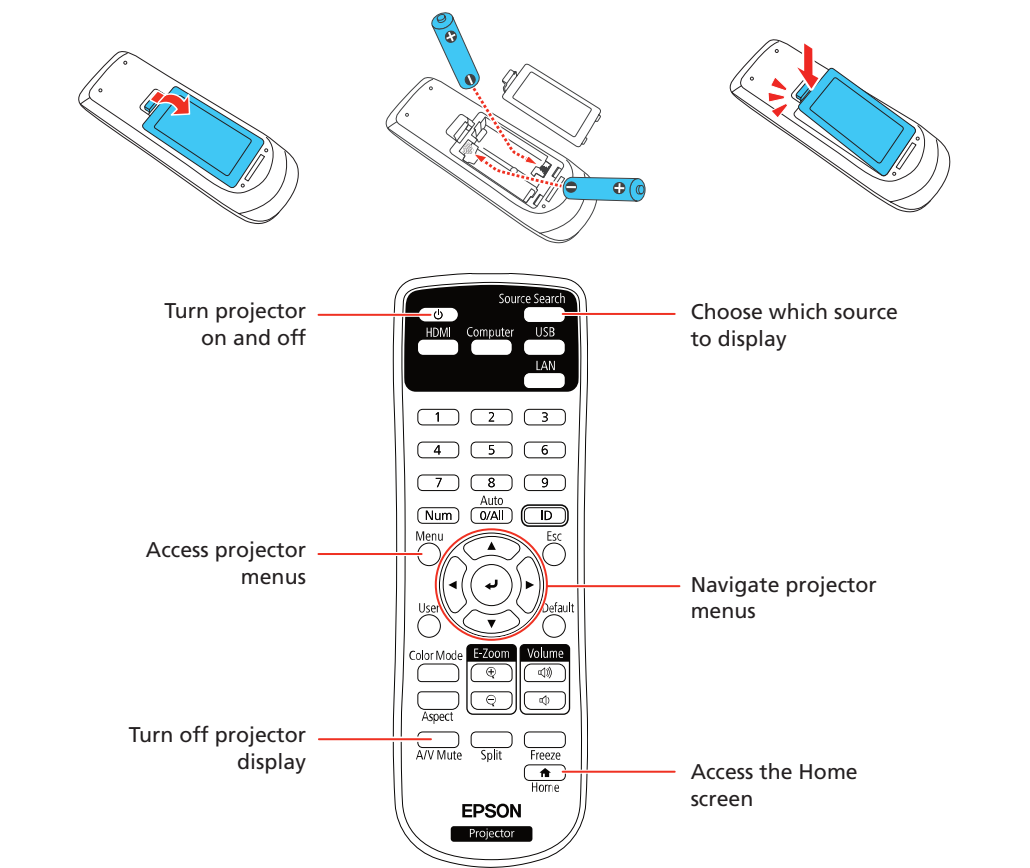


For more information on using the remote control, see the online *User's Guide*.

Turn on your equipment

- 1 Plug in the projector. The power light on the projector turns blue.

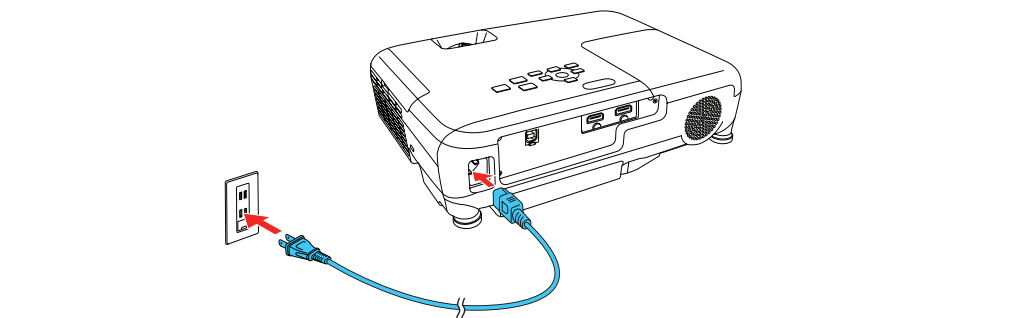

- 2 **PowerLite W55+:** Open the A/V Mute slide all the way.

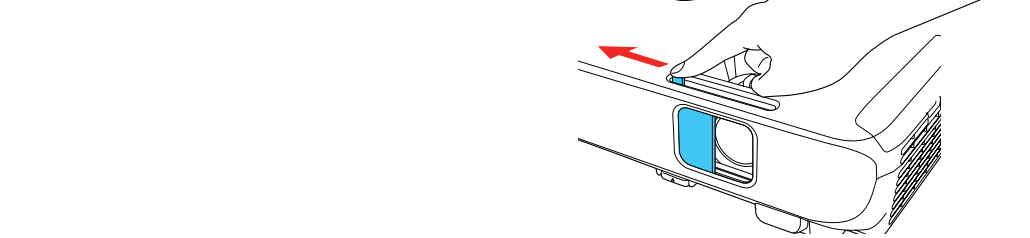


- 3 Press the power button on the projector or remote control.

- 4 **PowerLite W53+:** The Status light flashes blue, and then stays on.

PowerLite W55+: The projector beeps, the Status light flashes blue, and then stays on.

Note: *To shut down the projector, press the power button twice.*

- 5 When the Home screen appears, use the arrow and left buttons on the projector or remote control to switch between projection sources and quickly access various options.

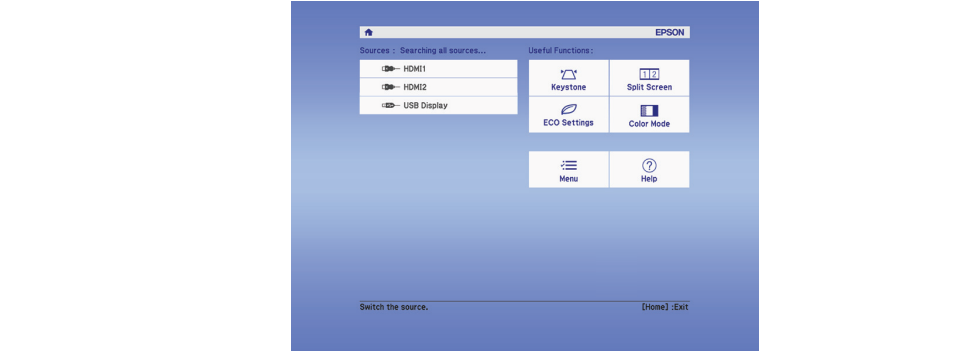

- 6 The default language of the menu system is English. To select another language, press the **Menu** button on the projector or remote control. Select **Extended**, select **Language**, then select your language. Press the **Menu** button to exit the menu system.


- 7 Turn on your computer or video source.

Adjust the image

- 1 If you don't see an image, press the **Source Search** button on the projector or remote control to select the image source.


Note: *If you still see a blank screen or have other display problems, see "Troubleshooting."*

- 2 To raise the image, press the foot release button and lift the front of the projector. Release the button to lock the foot in position.

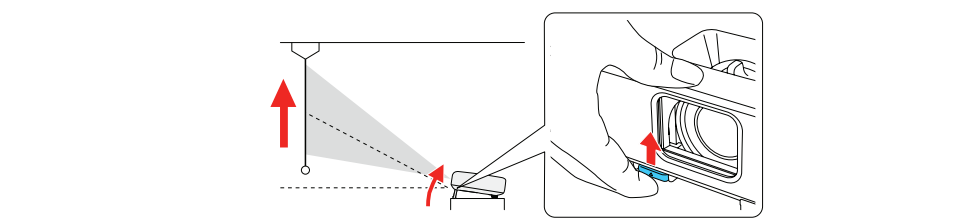


- 3 **PowerLite W53+:** To reduce or enlarge the image, press the **E-Zoom** buttons on the remote control.

PowerLite W55+: To reduce or enlarge the image, turn the zoom ring.

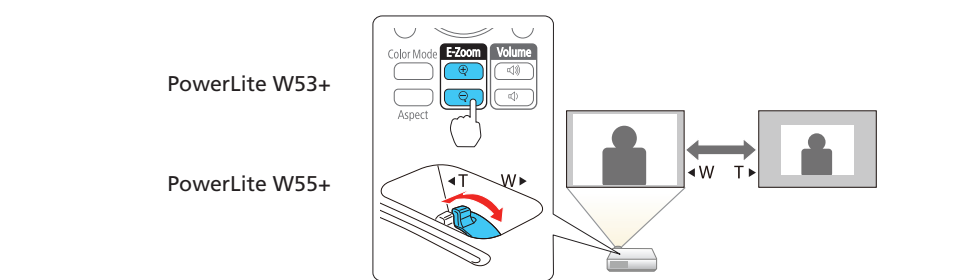


- 4 To sharpen the image, turn the focus ring.

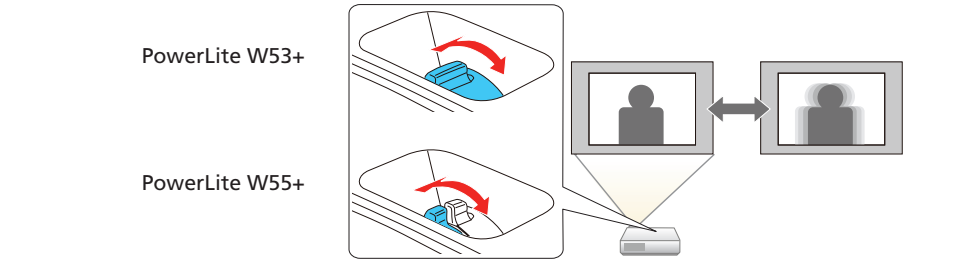

- 5 If your image looks like [skewed image] or [trapezoidal image], you may have placed the projector off to one side of the screen at an angle. Place the projector directly in front of the center of the screen, facing the screen squarely.

- 6 **PowerLite W53+:** If you can't move the projector, select the **Keystone** setting on the Home screen or in the Settings menu to correct the image shape.

PowerLite W55+: If you can't move the projector, use the horizontal keystone slider on the projector to correct the image shape.

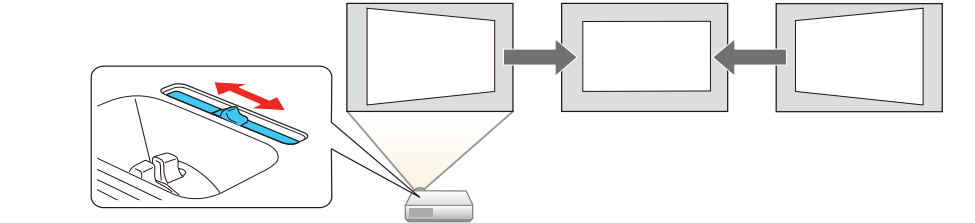

- 7 **PowerLite W53+:** If your image looks like [skewed image] or [trapezoidal image], press the [skewed image] or [trapezoidal image] button on the projector to correct it.


PowerLite W55+: Your projector automatically adjusts an image that looks like [skewed image] or [trapezoidal image], but if necessary you can press the [skewed image] or [trapezoidal image] button on the projector to correct it.

Setting up a wireless connection (PowerLite W55+)

Follow these steps to set up the projector for a wireless network connection.

- 1 Press the **Menu** button on the remote control.

- 2 Select the **Network** menu and press left.

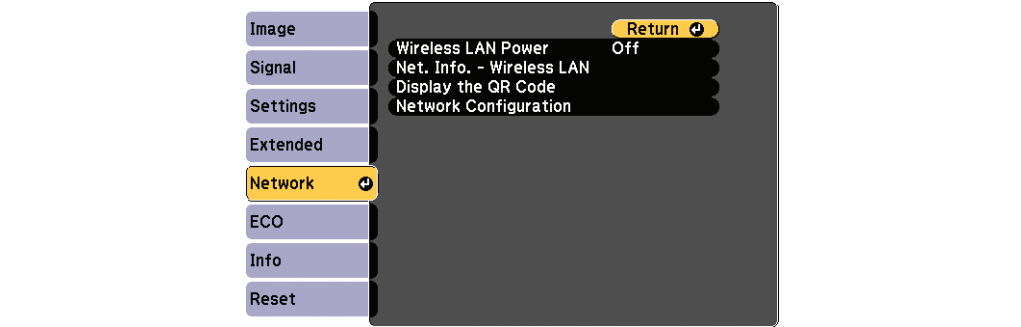

- 3 Select **On** as the Wireless LAN Power setting.

- 4 Select **Network Configuration** and press left.

- 5 Select the **Wireless LAN** menu and press left.

- 6 Select one of the following as the Connection Mode setting:

- **Quick** for a direct connection to a computer, tablet, or smartphone.
- **Advanced** to connect your projector to a router or access point.

- 7 Select any other settings on the Wireless LAN menu, as necessary. See the online *User's Guide* for details.

- 8 When you are finished, select **Complete** and follow the on-screen instructions to save your settings and exit the menus.

Note: *If you are prompted to enter a password for Epson Web Control, you can create a password or leave it blank. If you do not set a password, you cannot use Epson Web Control.*

Install the optional software

You can use Epson iProjection™ software to display wirelessly from a computer to your networked projector. Download the software and operation guide from your product's support page (see "Where to get help") and install the program on each computer that will project over the network.

To monitor and control your projector over the network, download and install the Epson Projector Management software (Windows only) and operation guide from your product's support page (see "Where to get help").

Using web control (PowerLite W55+)

You can use a standard web browser to control the projector through the network. A virtual remote control on your computer or mobile device screen lets you perform many of the same functions as you can with the physical remote control.

- 1 Open your web browser and enter the IP address of the projector you want to monitor in the browser's address bar. The Epson Web Control menu opens.


If you're not sure what the IP address of the projector is, turn the projector on and select **Net. Info. - Wireless LAN** from the Network menu to display the IP address of the projector. (Do not enter the leading zeroes.)



- 2

Select **Basic Control** or **Remote**. If you see a login screen, enter **EPSONWEB** as the user name. If a password was created, enter the password.
- 3

Use the on-screen buttons to operate the projector, as you would using the remote control. See the online *User's Guide* for details.

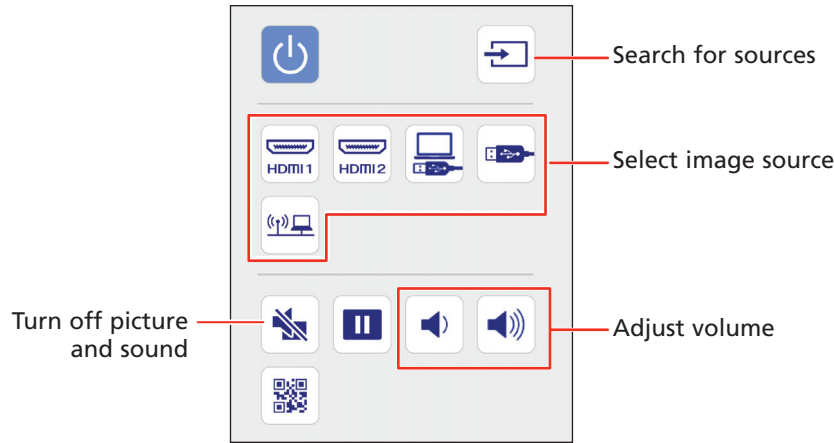

Using the Epson iProjection app (PowerLite W55+)

You can project wirelessly from a mobile device (iOS, Android™, or Chromebook™) using the Epson iProjection app and a QR code.

- 1

Scan the following QR code to download and install the Epson iProjection app.
- 2

If you connected the projector to a network wirelessly, make sure to connect your mobile device to the same network.
- 3

Press the **LAN** button on the remote control to display a QR code on the projector screen.
- 4

Start Epson iProjection on your mobile device.
- 5

Use the QR code reader feature to read the QR code displayed.



Your device and the projector are connected.

For more information on setting up and using this app, visit <http://latin.epson.com/ipprojection>.

Troubleshooting

- If you see a blank screen, check the following:
 - Make sure the A/V Mute slide is open (PowerLite W55+).
 - Make sure the Status light on the projector is blue and not flashing.
 - Press the  power button or the **A/V Mute** button on the remote control to wake the projector from standby or sleep mode, if necessary.
- If you see a blank screen when a computer is connected, check the following:
 - On Windows, hold down the Windows key and press **P** at the same time, then click **Duplicate**.
 - If you are using a Mac laptop with macOS 13 or newer, select **System Settings** > **Displays**. Select the projector, then choose the mirror option for your display from the Use as pop-up menu.

On macOS 12, select **System Preferences** > **Displays** > **Display Settings**. Select the projector, then choose the mirror option for your display from the drop-down menu.

On macOS 11 and older, open **System Preferences** and select **Displays**. Click the **Arrangement** tab and select the **Mirror Displays** checkbox.

- If the projector does not respond to remote control commands, make sure the batteries in the remote control are installed correctly. Replace the batteries if necessary.

Registration

Scan the QR code to register for product updates and exclusive offers.



Where to get help

Manuals

For more information about using the projector, you can view or download the manuals from the Epson website, as described below.

Internet support

Visit <http://latin.epson.com/support> and search for your product to download software and utilities, view manuals, get FAQs and troubleshooting advice, or contact Epson.

Telephone support

You can also speak to a service technician by calling one of these numbers:

Argentina	(54 11) 5167-0300 0800-288-37766	El Salvador*	800-6570
Bolivia*	800-100-116	Guatemala*	1-800-835-0358
Chile	(56 2) 2484-3400	Mexico	800-087-1080
Colombia	01-8000-915235	Mexico City	(52 55) 1323-2052
Bogotá	601 602-4751	Nicaragua*	00-1-800-226-0368
Costa Rica	800-377-6627	Panama*	00-800-052-1376
Dominican Republic*	1-888-760-0068	Paraguay	009-800-521-0019
Ecuador*	1-800-000-044	Peru	0800-10126
		Lima	(51 1) 418-0210
		Uruguay	00040-5210067

* Contact your local phone company to call this toll-free number from a mobile phone.

If your country does not appear on the list, contact your nearest Epson sales office. Toll or long distance charges may apply.

Optional accessories

For a list of optional accessories, see the online *User's Guide*.

You can purchase other accessories from an Epson authorized reseller. To find the nearest reseller, visit <http://latin.epson.com>.

EPSON®



EPSON is a registered trademark and iProjection and PowerLite are trademarks of Seiko Epson Corporation. Mac, macOS, and OS X are trademarks of Apple Inc., registered in the U.S. and other countries. Android and Chromebook are trademarks of Google LLC. Windows is a trademark of the Microsoft group of companies. General Notice: Other product names used herein are for identification purposes only and may be trademarks of their respective owners. Epson disclaims any and all rights in those marks. This information is subject to change without notice. © 2024 Epson America, Inc., 10/24 Printed in XXXXXXX