 


Projector interactivity


Use the interactive pen or your finger to turn almost any flat wall into an interactive area.

Interactive pen

Your projector came with one rechargeable pen.

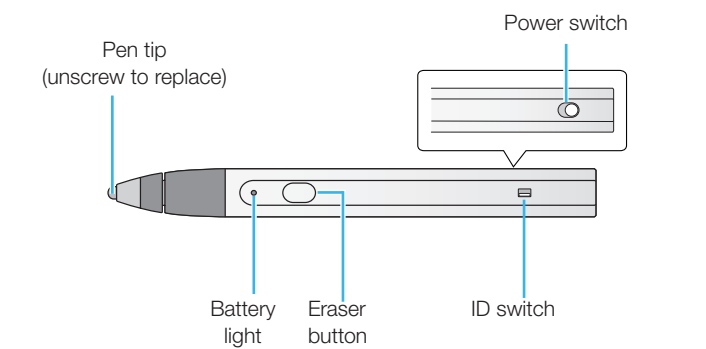

- To use the pen, remove it from the charger/holder and make sure the power switch is in the **ON** position.
- Press the eraser button to switch between pen and eraser modes.
- To check the battery, move away from the interactive area and press the eraser button. If the battery light turns blue, the pen has sufficient charge. If the battery light is orange even when you aren't pressing the button, the battery is low.
- Hold the pen perpendicular to the board when using it.

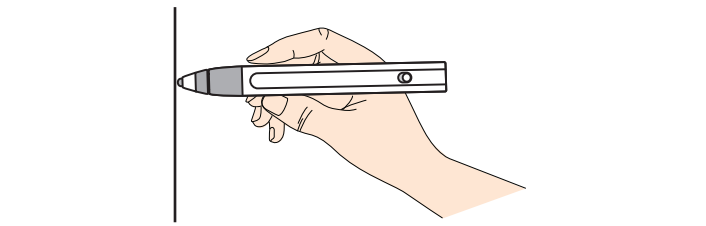

- When you are finished using the pen, put it back in the charger/holder.
- **Note:** If you do not plan to use the pen for an extended period, remove it from the charger/holder and store it in a different location.
- If the battery is drained, charge the pen for four minutes to get up to 50 minutes of battery life. The battery light flashes while the battery is charging and turns solid blue when charging is complete.
- One additional pen may be purchased. If you're using two pens, make sure their ID switches are set to different colors.

Finger touch

If you have a finger touch unit installed, you can use your finger to perform the same functions as the interactive pen. You can use either the pen or your finger, or use both at the same time.

When performing finger touch operations, you can use up to six fingers.

Note: The number of pen and finger touch inputs allowed depends on the projector mode, operating system, and connection type. See the online *User's Guide* for more information.

Need help?

Calibration

If the cursor does not match your pen or finger location, calibrate the pen or the finger touch unit. See the online *User's Guide* for instructions.

Computer doesn't project

If the image doesn't appear after connecting a computer, try one of the following:

- On Windows, hold down the Windows key and press **P** at the same time, then click **Duplicate**.
- If you are using a Mac laptop with macOS 13, select **System Settings > Displays**. Press the + pop-up menu button, then choose a display to mirror.
- On macOS 12, select **System Preferences > Displays**. Select the projector, then choose the mirror option for your display from the Use as pop-up menu.
- On macOS 11 and older, open **System Preferences** and select **Displays**. Click the **Arrangement** tab and select the **Mirror Displays** checkbox.
- See your computer's documentation or help topics for steps to extend or project your computer screen.
- Press the **Source Search** button on the remote control.
- Press the **Home** button on the remote control to verify the source input and settings.
- Make sure any video cables are securely connected.

Online support

To access the online manuals, videos, FAQs, and more, visit <https://support.epson.com/BLseries> and search for your product.

Telephone support

The Epson PrivateLine® service is for you! All you have to do is call (800) 637-7661 (U.S. and Canada). This service is available for the duration of your warranty period. You may also speak with a projector support specialist by dialing (562) 276-4394 (U.S.) or (905) 709-3839 (Canada).

Support hours are 7 a.m. to 4 p.m., Pacific Time, Monday through Friday. Days and hours of support are subject to change without notice. Toll or long distance charges may apply.

In Latin America, see the online *Notices* for technical support information.

Registration

Scan the QR code to register for product updates and exclusive offers.



<https://epson.com/regall>

EPSON is a registered trademark of Seiko Epson Corporation.

PrivateLine is a registered trademark of Epson America, Inc.

Apple, AirPlay, iPhone, iPad, iPadOS, Mac, and macOS are trademarks of Apple Inc., registered in the U.S. and other countries.

Windows is a trademark of the Microsoft group of companies.

Miracast is a trademark of Wi-Fi Alliance.

General Notice: Other product names used herein are for identification purposes only and may be trademarks of their respective owners. Epson disclaims any and all rights in those marks.

This information is subject to change without notice.

© 2026 Epson America, Inc., 4/26



414768900

EB-780Ei/EB-870Ei

Start Here

Your projector is a productivity tool that allows you to project and interact with content or create a digital whiteboard. This card will help you get started.

Note:

- Product availability varies by country and region.
- Depending on your projector model and region, the finger touch unit required for touch interaction with projected content may be sold separately. If you don't have a finger touch unit installed, follow the instructions for the interactive pen.
- Depending on your projector model and region, the projector control pad may be sold separately.

What can you do?

Start drawing

Draw on the projected screen with the interactive pen or your finger.

Interact with your computer

View your desktop and use the interactive pen or your finger as a mouse.

Use your wireless device

Connect your wireless device and display your content on the screen.

 
CPD-66432

EPSON®

Using the PC-free whiteboard


You can project a PC-free digital whiteboard to start a lesson or brainstorming session from scratch. You can display an all-white digital canvas or one of the built-in backgrounds, and then use the interactive pen or your finger to write or draw as you would on a dry erase board. You can add new blank pages to continue working and switch easily between pages.

- 1 Turn on the projector by pressing the  power button on the remote control.
- 2 The default language of the menu system is English. To select another language, press the **Menu** button on the remote control. Select **Management** and press . Select **Language** and press . Select your language and press . Press the **Esc** button to exit the menu system.

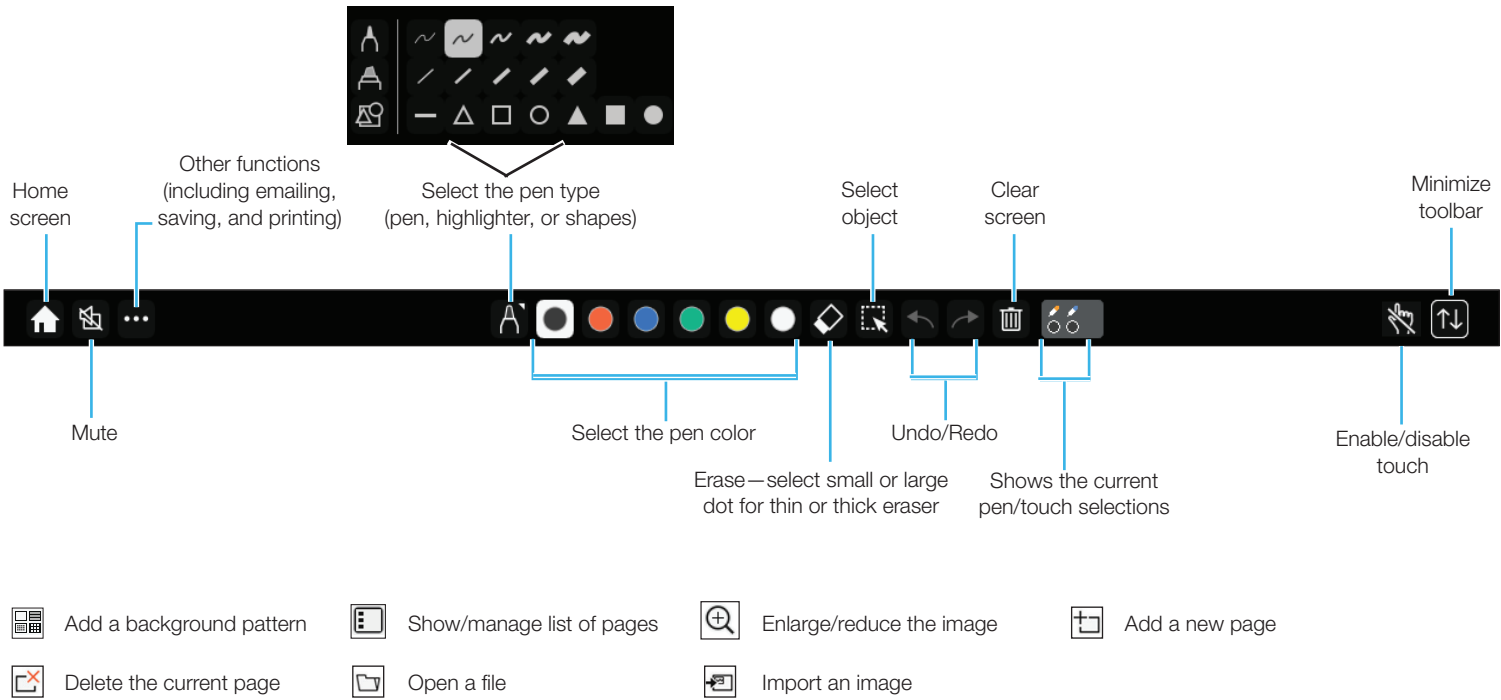

Note: Toolbar icons/features may vary depending on devices connected to the projector.

- 3 Press the  **Home** button on the remote control.

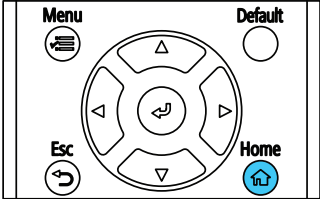


- 4 Select  **Whiteboard** from the screen. You see the whiteboard screen and toolbar.
- 5 Pick up the interactive pen or touch your finger to the screen and start writing.

Interacting with a wired computer

View your desktop and use the interactive pen or your finger as a mouse.

- 1 Turn on the projector by pressing the  power button on the remote control.
- 2 If you're using the projector control pad, connect the included USB-C cable from the control pad's **USB-C** port to your computer. Then skip to step 4.

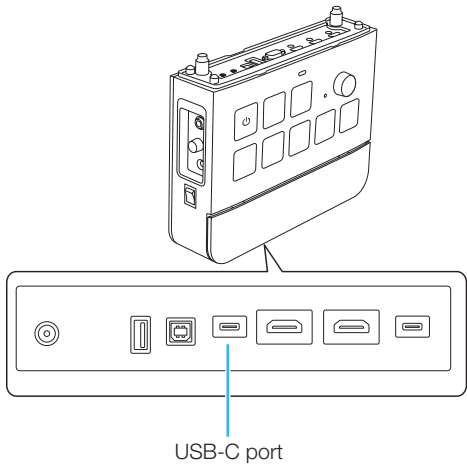

Note: The USB-C port also supplies power to your computer.

- 3 If you're not using the projector control pad, connect an HDMI™ cable from the projector's **HDMI1**, **HDMI2**, or **HDMI3** port to your computer.
- Then, connect the USB cable from the projector's **USB-B** port to any available USB port on your computer.

- 4 Make sure **PC Operation Mode** is enabled on the on-screen toolbar.



- 5 Display an image or open a web page from your computer.

If your computer screen is not projected, see “Need help?” on the back of this card.

Connecting a wireless device

Connect your laptop, smartphone, tablet, or other source to the same network as your projector, and then annotate the projected content with the projector's built-in toolbar. You can save, print, or email your work when you're done.

- 1 Turn on the projector by pressing the  power button on the remote control.
- 2 Connect your device to the projector using one of these methods:

- **Epson Classroom Connect**

With the Epson Classroom Connect software, you can project your device's screen to facilitate lessons and use the moderator feature to share students' screens. If you're using a Windows® or Mac computer, you can also control your device from the projector display. See the online *Epson Classroom Connect Operation Guide* for more information.

- **Miracast™**

If your mobile device (laptop, smartphone, or tablet) supports Miracast, you can project or mirror your device's screen wirelessly. If you're using a Windows computer, you can also control your device from the projector display. You do not need any additional software to use this feature.

Note: Some restrictions apply. See the projector's online *User's Guide* for more information.

- **Apple AirPlay**

With AirPlay, you can stream movies, music, games, and photos to your projector right from your iPhone, iPad, or Mac. See the projector's online *User's Guide* for more information.

Note:

- To use AirPlay with your projector, the latest version of iOS, iPadOS, or macOS is recommended.
- You cannot control your device from the projector display when using this method. To control a Mac computer with a wireless connection, use Epson Classroom Connect.



- 3 To connect with Epson Classroom Connect, download and launch the software on your device, press the  **Home** button on the projector's remote control, and enter the four or six digit connection code displayed at the top of the projector's home screen.

To download the software on your computer, visit <https://support.epson.com/BLseries> and search for your product.

To download the app on your smartphone or tablet, visit your device's app store.



- 4 If your content is not displayed, press the **Wireless** button on the remote control.

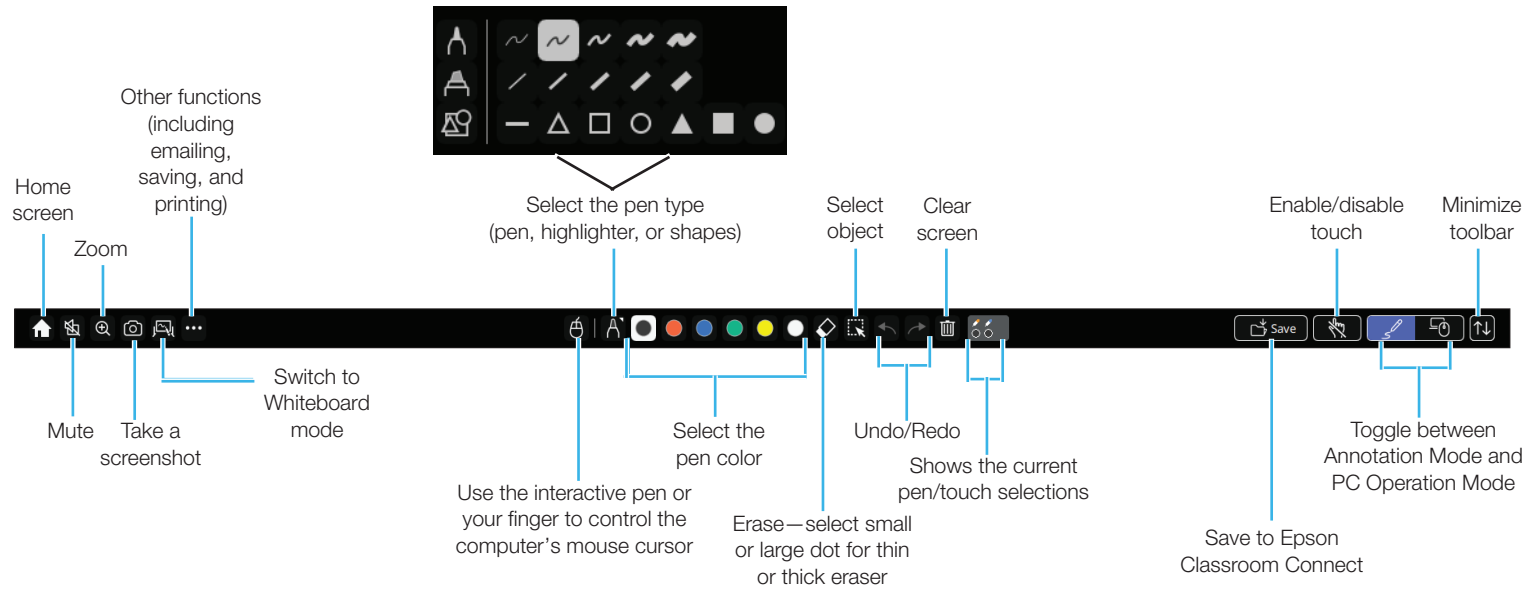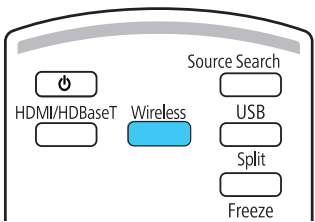

Note: Toolbar icons/features may vary depending on devices connected to the projector.