



BrightLink Interaction

Three interactive modes are available:

Whiteboard mode



Use one or two interactive pens to write on the projected “whiteboard.” You can insert images from a thumbdrive or scanner and save, print, or email your whiteboard “pages,” without connecting a computer.

Annotation mode



Easily switch between sources and add notes to your projected content. Capture your screens, then save, print, or email the images with annotations. You can even split the screen to annotate on two images at the same time.

Interactive computer mode



Use the interactive pen as a mouse to navigate, select, and scroll through content from your computer. Split the screen and interact with two projected images. You can do even more if you install Easy Interactive Tools on your computer.

Quick Reference

This card will help you get started using your BrightLink Pro interactive projector.

1 Turning on and Calibrating the Projector

- Using the Remote Control

2 Using the Pens and Control Pad

3 Using Whiteboard Mode

4 Connecting a Computer and Using Annotation Mode

5 Using Interactive Computer Mode

- Splitting the Screen

BrightLink Pro Features

- Project an image from a computer, DVD player, cable box, USB thumbdrive, or other device
- Split the screen and project two images at the same time
- Hold a video conference without a flat panel display
- Project wirelessly from a tablet or smartphone


See the online *User's Guide* for more information about these features.

1 Turning on and Calibrating the Projector

To turn on the projector, press the red or orange power button on the remote control, control pad, or on the projector itself.

Calibration coordinates the position of the pen with the location of your annotations. Your projector may already be calibrated. If not, follow the instructions below:


- 1 To calibrate automatically, press the **User** button on the remote control. You see the following:

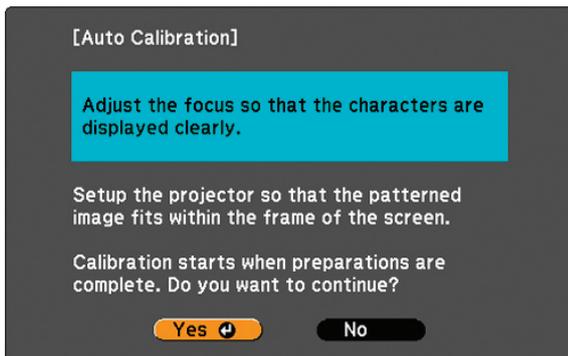

- 2 Press **Enter** to select **Yes**. A pattern appears.
- 3 Wait until calibration is complete.

If you see a message that calibration failed, or the pen position and cursor location don't match, you can calibrate manually. Press the **Menu** button on the remote control, then select **Extended menu > Easy Interactive Function > Manual Calibration** and press **Enter**. Follow the instructions on the screen to calibrate manually.


Using the Remote Control

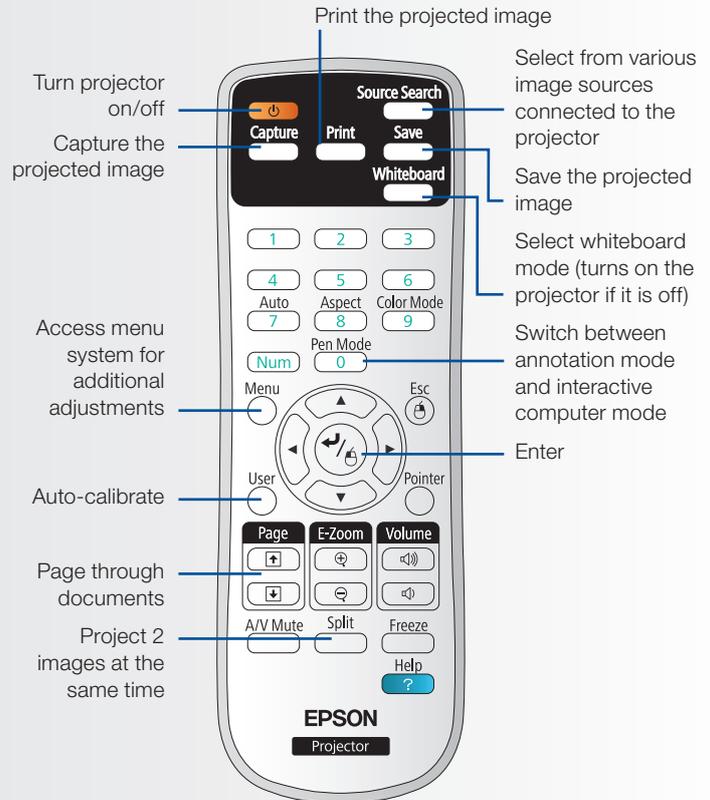


For more information on using the remote control, see the online *User's Guide*. You can install a link to the *User's Guide* by inserting the BrightLink Pro 1410Wi CD. Or go to epson.com/brightlinkdownloads (U.S.) or epson.ca/brightlinkdownloads (Canada).

② Using the Pens and the Control Pad


The projector came with 2 pens that have different colored ends, orange and blue. Make sure one AA battery is installed in each pen.

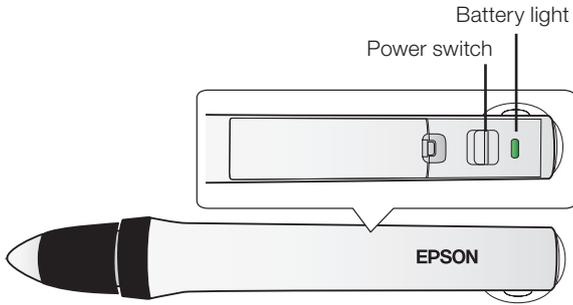

- To turn on the pen, slide the power switch. The green light comes on briefly. If the battery is low, the light flashes.
- Hold the pen perpendicular to the board, as shown below. Do not cover the black section of the pen.


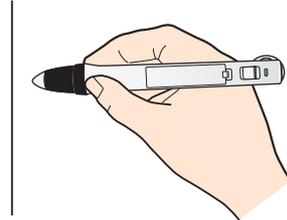


Note: The pens turn off automatically after about 20 minutes of inactivity. Slide the switch to turn the pen back on.

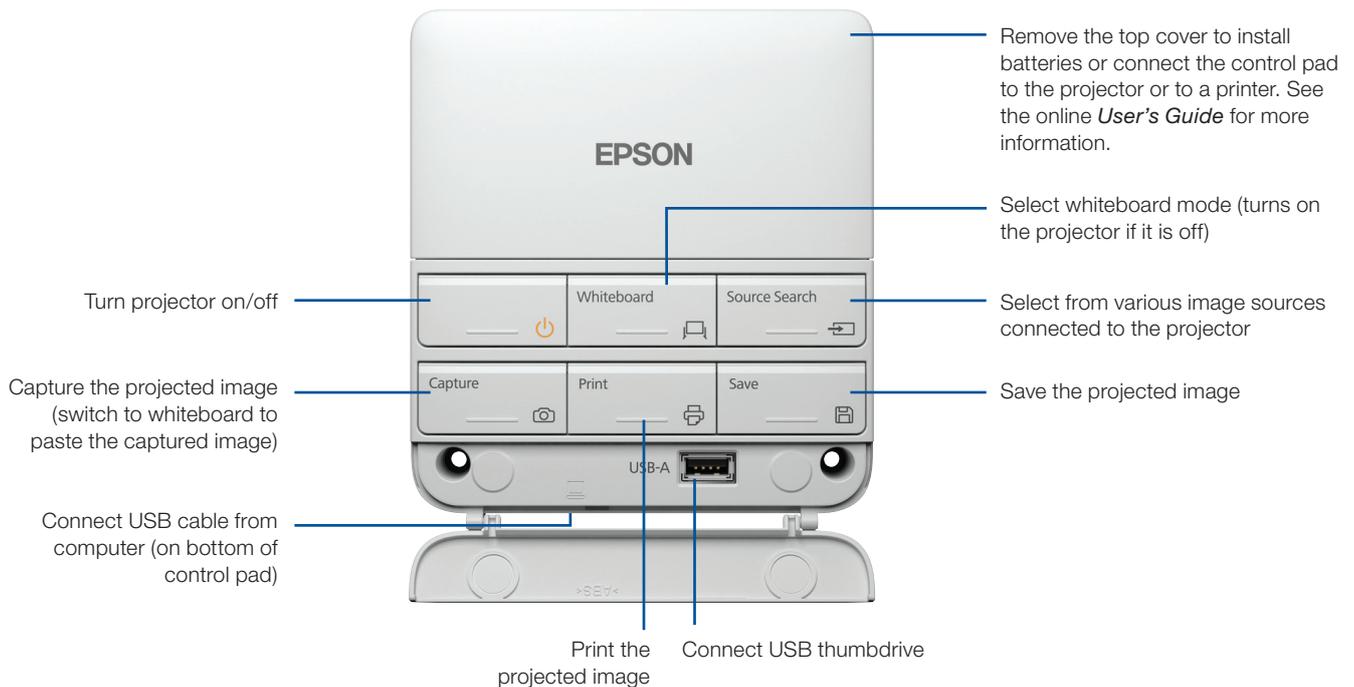

3 Using Whiteboard Mode

Press the **Whiteboard** button on the remote control or control pad. You see the following toolbars:

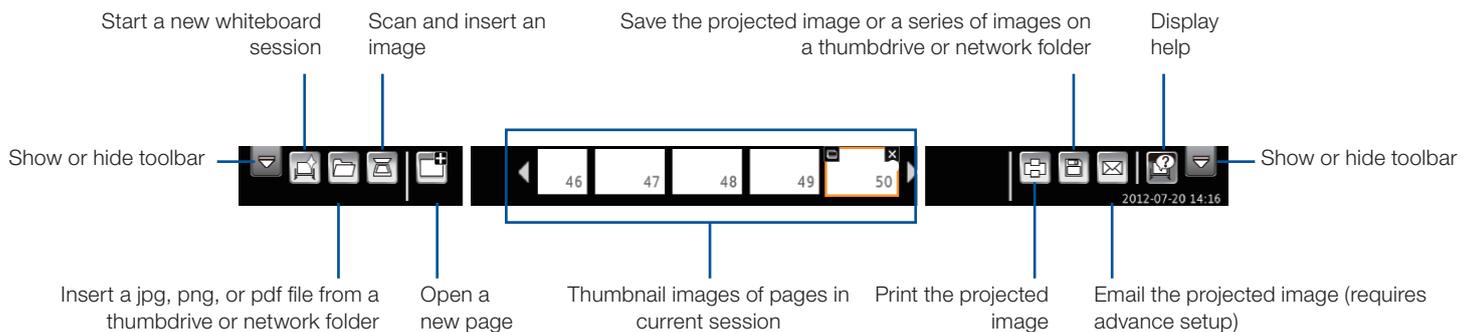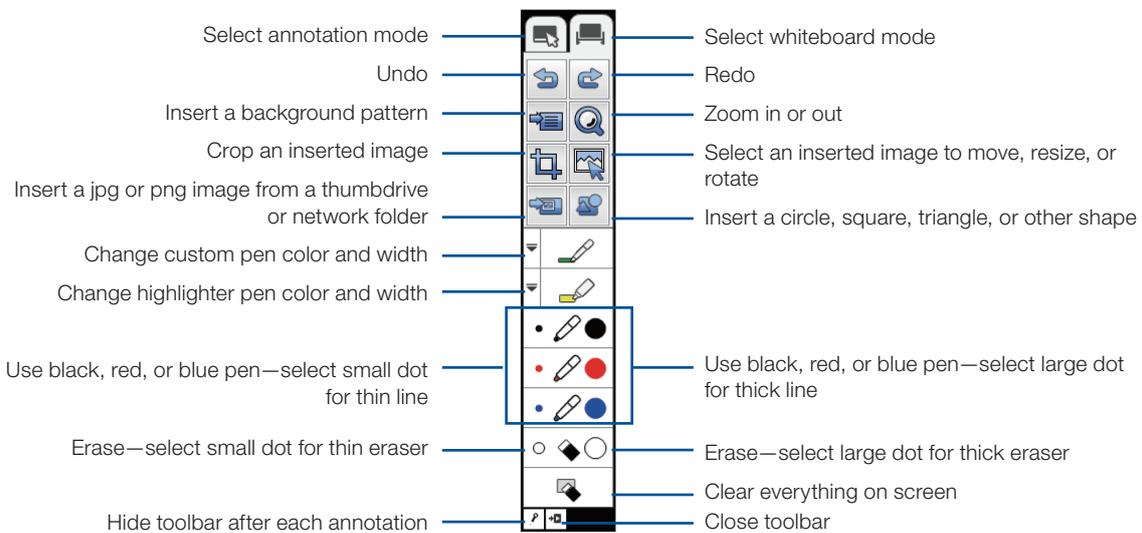

You can use the pens to draw or write on the projection surface.


- To scan a paper document and import it, select the **Scan** icon. Make sure a supported all-in-one device is connected to the control pad (or to your network), then place a document on the scanner glass or in the automatic document feeder.
- To display thumbnail images of the pages in the current session, select the page on the bottom toolbar. Use the arrows or drag the pen to scroll through the pages.

- To print an image or series of images, select the **Print** icon (or press the **Print** button on the remote control or control pad). Make sure a supported printer is connected to the control pad (or to your network).
- To email an image or series of images, select the **Email** icon. Before you can email, you need to set mail server options using the projector's Extended menu. See the online *User's Guide* for instructions.

4 Connecting a Computer and Using Annotation Mode

1 Connect the device you want to project from.



- Connect wirelessly to a notebook computer using the Windows® Connect to a Network Projector utility (without audio), or EasyMP Network Projection.
- Connect wirelessly to a tablet or smartphone using the EPSON iProjection app.
- Connect using a cable, as shown below.

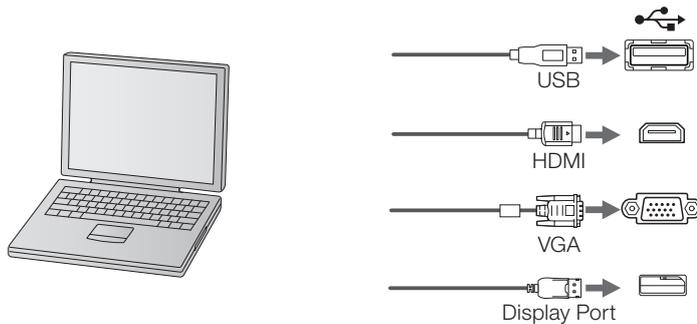

2 Display an image from your device. If an image does not appear, try one of the following:


- On some PC laptops, you may need to hold down the **Fn** key on the keyboard and press **F7** or the function key that lets you display on an external monitor. It may have an icon such as , or it may be labelled **CRT/LCD**.
- On a Mac, you may need to open System Preferences and select **Displays**. Select the **VGA/HDMI Display** or **Color LCD** option if necessary, then click the **Arrange** or Arrangement tab and select the **Mirror Displays** checkbox.
- Try pressing the **Source Search** button on the remote control or control pad.

3 Turn on one of the pens and hover near or tap the projected image. You see these toolbars on your projected image:

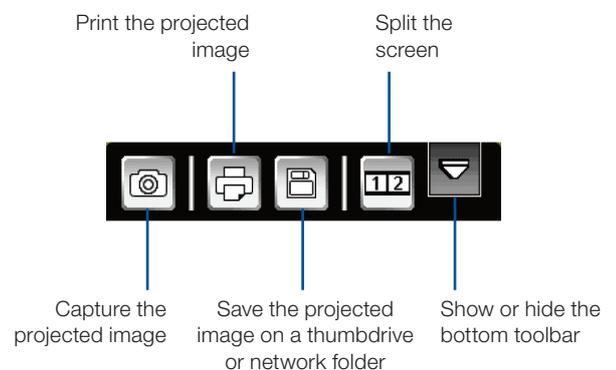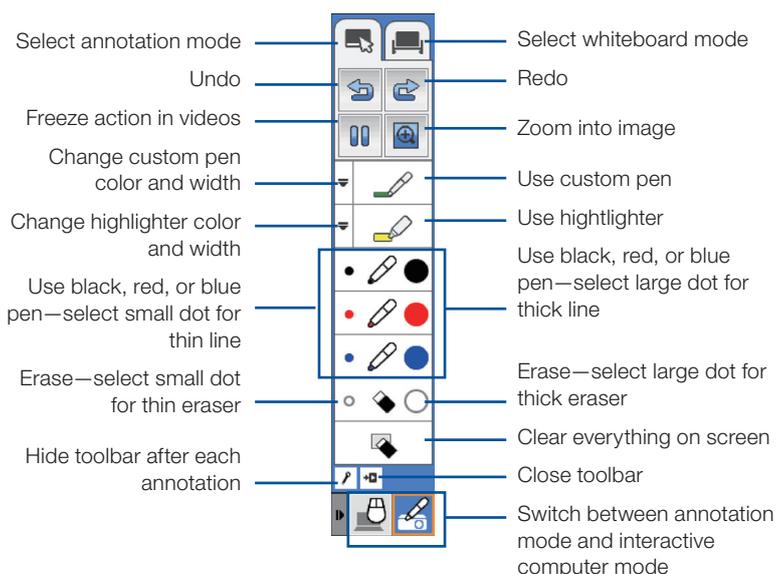

5 Using Interactive Computer Mode


- 1 Connect a USB cable from your computer to the USB-B port on the bottom of the control pad.

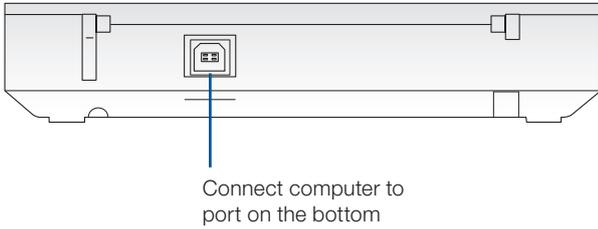

If your computer is connected to the projector wirelessly using EasyMP Network Projection version 2.81 or later, you don't need a USB cable.

If you are using Mac OS X, you need to install Easy Interactive Driver from the CD that came with the projector, labeled "EPSON Projector Software for Easy Interactive Function."

- 2 Press the **Pen Mode** button on the remote control or select the  **Pen Mode** icon on the screen, then select the  **Mouse** icon.

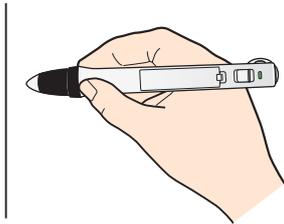

You can use the pen as a mouse to interact with the projected image.

- To left-click, tap on the board.
- To double-click, tap twice.
- To right-click, press the board with the pen for about 3 seconds.
- To click and drag, tap and drag with the pen.
- To move the cursor, hover over the board without touching it.
- When you are finished, slide the power switch to turn off the pen.


For more information on any Brightlink Pro features, see the online *User's Guide* at epson.com/brightlinkdownloads (U.S.) or epson.ca/brightlinkdownloads (Canada).




412409400

Splitting the Screen

- 1 Press the **Split** button on the remote control or select the  **Split** icon on the screen. The current projected image appears on the left.
- 2 Press the **Menu** button on the remote control. You see the Split Screen Setup menu:

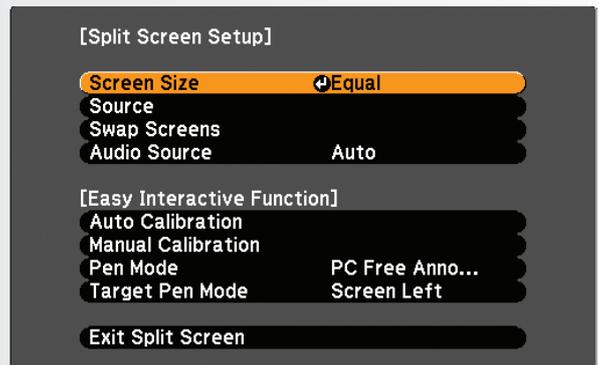

- 3 Select **Source** and press **Enter**.

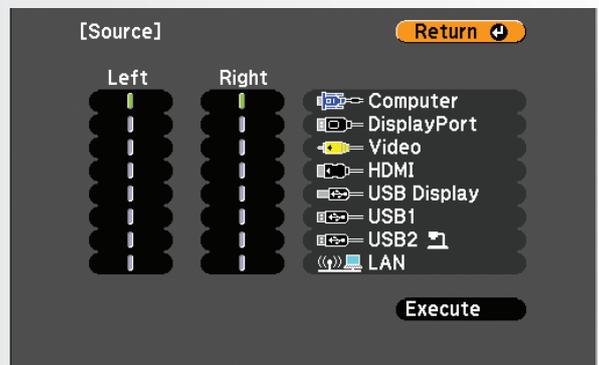

- 4 Select the source you want to use for the right half of the screen. If you want to write on a blank screen, select any unused source.
- 5 Select **Execute**, then press **Enter**.

EPSON is a registered trademark and EPSON Exceed Your Vision is a registered logomark of Seiko Epson Corporation.

BrightLink is a registered trademark of Epson America, Inc.

General Notice: Other product names used herein are for identification purposes only and may be trademarks of their respective owners. Epson disclaims any and all rights in those marks.

This information is subject to change without notice.

© 2012 Epson America, Inc. 10/12

Printed in XXX

CPD-38221