


## EPSON Stylus CX5200 Parts

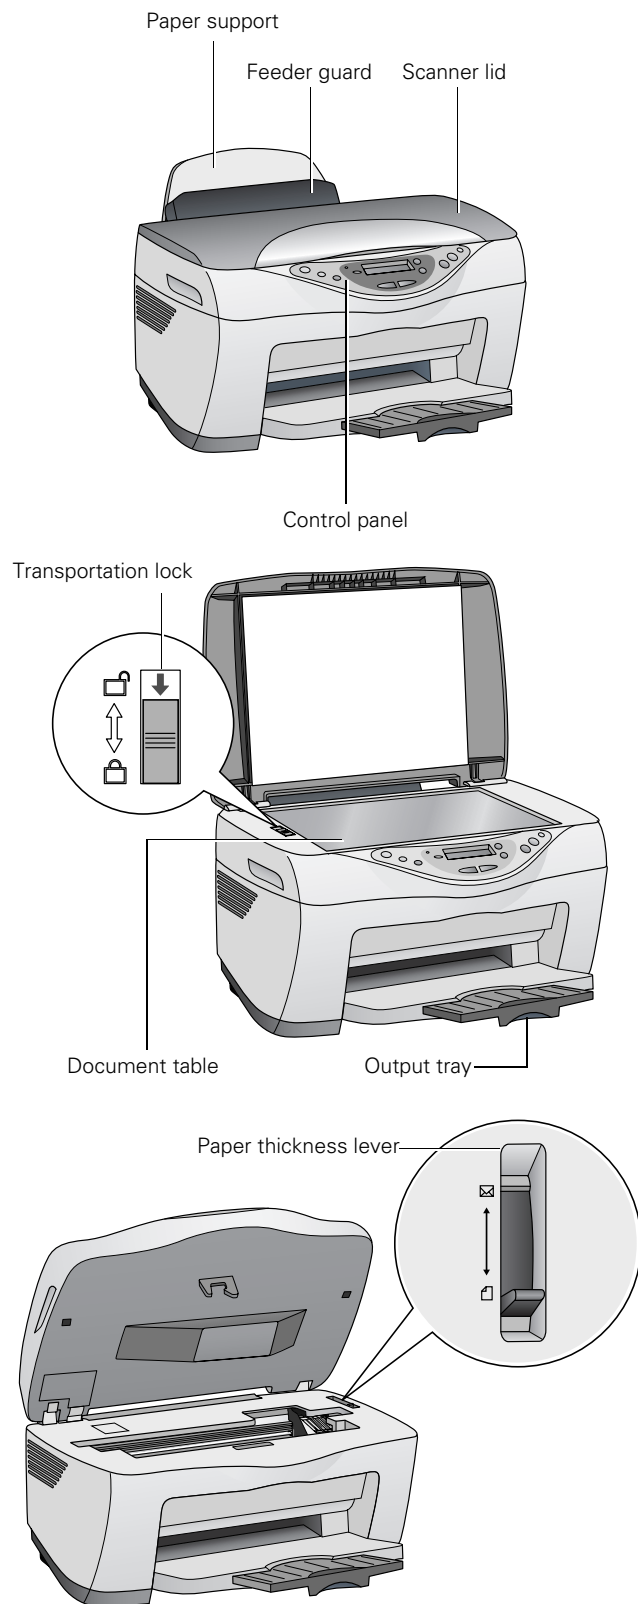

## Accessories

### Ink Cartridges

Cartridge	Part number
Black	T032120
Cyan	T042220
Magenta	T042320
Yellow	T042420

### Media

Paper name	Size	Part number	
EPSON Premium Bright White Ink Jet Paper	Letter	S041586	
EPSON Photo Quality Ink Jet Paper	Letter	S041062	
	A4 (8.3 x 11.7 inches)	S041061	
	Legal	S041067	
EPSON Photo Quality Ink Jet Cards	A6 (4.1 x 5.8 inches)	S041054	
EPSON Photo Paper or Glossy Photo Paper	4 x 6 inches, with perforated edges	S041134	
		S041671	
		Letter	S041141
		S041272	
	A4 (8.3 x 11.7 inches)	S041271	
		S041649	
A4 (8.3 x 11.7 inches)	S041140		
	Panoramic (8.3 x 23 inches)	S041145	
EPSON Matte Paper Heavyweight	Letter	S041257	
EPSON Archival™ Matte Paper	Letter	S041341	
EPSON All Purpose Glossy Paper	Letter	S041654	
EPSON Double-Sided Matte Paper	Letter	S041568	
EPSON Premium Semigloss Photo Paper	Letter	S041331	
EPSON Ink Jet Transparencies	Letter	S041064	
EPSON Iron-On Transfer Paper	Letter	S041153	
		S041155	
EPSON Glossy Photo Greeting Cards	Letter	S041606	

## Specifications

### Printing

Printing method On-demand ink jet

Nozzle configuration

Black 180 nozzles

Color 177 nozzles (59 nozzles per color × 3)

Print direction Bidirectional with logic seeking

Resolution Up to 5760 × 1440 on various papers using Photo RPM

## Paper

Paper type	Size	Paper types	Thickness	Weight
Single sheets	Letter (8.5 × 11 inches) Legal (8.5 × 14 inches) Half letter (statement, 5.5 × 8.5 inches) Executive (7.5 × 10 inches) A4 (210 × 297 mm) A5 (148 × 210 mm) B5 (182 × 257 mm)	Plain bond paper, special papers distributed by EPSON	0.003 to 0.004 inch (0.08 to 0.11 mm) for plain bond paper	17 to 24 lb (64 to 90 g/m <sup>2</sup> )
Envelopes	No. 10, 9.5 × 4.1 inches (240 × 104 mm) DL, 8.7 × 4.3 inches (220 × 110 mm) C6, 4.4 × 6.4 inches (114 × 162 mm) 132 × 220 mm	Plain bond paper or air mail paper	0.006 to 0.02 inch (0.16 to 0.52 mm)	12 to 20 lb (45 to 75 g/m <sup>2</sup> )
Ink jet cards	A6 (105 × 148 mm)	Special papers distributed by EPSON	—	—
Photo paper and glossy photo paper	Letter (8.5 × 11 inches) A4 (210 × 297 mm) 4 × 6 inches (102 × 152 mm) Panoramic (210 × 594 mm)	Special papers distributed by EPSON	—	—
Iron-on transfer paper, transparencies, premium glossy photo paper, premium semigloss photo paper, matte paper heavyweight, double-sided matte, and archival matte paper	Letter (8.5 × 11 inches)	Special papers distributed by EPSON	—	—

### Note:

Since the quality of any particular brand or type of paper may be changed by the manufacturer at any time, EPSON cannot attest to the quality of any non-EPSON brand or type of paper. Always test samples of paper stock before purchasing large quantities or printing large jobs.

Poor quality paper may reduce print quality and cause paper jams and other problems. If you encounter problems, switch to a higher grade of paper.



Do not load curled or folded paper.

Use paper under normal conditions:

Temperature: 59 to 77 °F (15 to 25 °C)

Humidity: 40 to 60% RH

## Printable Area

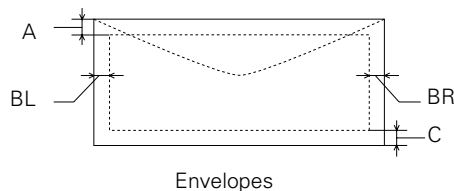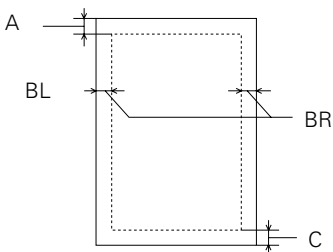

Single sheets (including panoramic size) and index cards

A The minimum top margin is 0.12 inch (3.0 mm).

BL The minimum left margin is 0.12 inch (3.0 mm).

BR The minimum right margin is 0.12 inch (3.0 mm).

C The minimum bottom margin is 0.55 inch (14.0 mm).

You can extend the minimum bottom margin to 0.12 inch (3.0 mm), however print quality may decline in the expanded area. Before printing large jobs using an extended margin setting, print a single sheet to confirm printout quality.

**Note:** Always load paper into the sheet feeder short edge first. Load envelopes flap edge left with the flap side down.

## Ink Cartridges

Specification	Black ink cartridge (T0321)	Color ink cartridges (T0422, T0423, T0424)
Color(s)	Black	Cyan, Magenta, Yellow
Print capacity*	1240 pages (A4, ISO/IEC 10561 Letter Pattern at 360 dpi, 3.5% duty); 870 pages (A4, 360 dpi, 5% duty)	420 pages (A4, 360 dpi, 5% duty each color)
Cartridge life	2 years from production date (if unopened) within 6 months after opening package, at 77 °F (25 °C)	
Storage temperature	-4 to 104 °F (-20 to 40 °C) 1 month at 104 °F (40 °C)	
Transit temperature	-22 to 140 °F (-30 to 60 °C) 1 month at 104 °F (40 °C) 120 hours at 140 °F (60 °C)	
Freezing temperature**	3.2 °F (-16 °C)	-0.4 °F (-18 °C)
Dimensions	0.8 × 2.8 × 2.6 inches (W × D × H) 22 × 71.2 × 66.5 mm (W × D × H)	0.5 × 2.8 × 2.6 inches (W × D × H) 12.7 × 71.2 × 66.5 mm (W × D × H)

\* The figure given is based on continuous printing after ink replacement. The actual print capacity may vary. The ink charging process reduces the print capacity of the initial cartridge, even though it contains the standard amount of ink.

\*\* Ink thaws and is usable after approximately 3 hours at 77 °F (25 °C).

### Caution:

To ensure good results, use genuine EPSON cartridges and do not refill them. Other products may cause damage to your printer not covered by EPSON's warranties.

Don't use an ink cartridge if the date on the package has expired.

Do not refill the ink cartridges. This product calculates the amount of ink remaining using an IC chip on the ink cartridge. Even if the cartridge is refilled, the amount of ink remaining will not be recalculated by the IC chip and the amount of ink available for use will not change.

## Scanning

Scanner type	Flatbed color image scanner
Photoelectric device	Color CCD line sensor
Effective pixels	10,200 × 14,040 pixels at 1200 dpi, 100%
Document size	8.5 × 11.7 inches (216 × 297 mm), Letter or A4 size (area selectable with software)
Scanning resolution	1200 dpi (main), 2400 dpi (sub)
Output resolution	50 to 4800 dpi (adjustable in one-dpi increments), 7200 dpi, and 9600 dpi
Color separation	RGB color filters on CCD
Image data	16 bits per pixel per color internal 8 bits per pixel per color external
Gamma correction	User defined 1 level

Light source	White cold cathode fluorescent lamp
Reliability	30,000 cycles of carriage movement (main unit MCBF)
Lamp	10,000-hour life

## Mechanical

Paper feed method	Friction
Paper path	Sheet feeder, top entry
Sheet feeder capacity	About 100 sheets at 17 lb (64 g/m <sup>2</sup> )
Dimensions	17.8 × 17.1 × 10 inches (W × D × H) 453 × 434 × 254 mm (W × D × H)
Weight	16.5 lb (7.5 kg) without ink cartridges

## Electrical

Input voltage range*	99 to 132V
Rated frequency range	50 to 60 Hz
Input frequency range	49.5 to 60 Hz
Rated current	0.5A
Power consumption	Approx. 22W (ISO 10560 Letter Pattern) Approx. 6.5W in sleep mode Approx. 0.3W in power-off mode

\* Check the label on the back of this product for voltage information

## Environmental

Temperature	
Operation	50 to 95 °F (10 to 35 °C)
Storage*	-4 to 140 °F (-20 to 60 °C) 1 month at 104 °F (40 °C)
Transit*	-4 to 140 °F (-20 to 60 °C) 120 hours at 140 °F (60 °C)

Humidity (without condensation)	
Operation	20 to 80% RH
Storage*	5 to 85% RH

\*Stored in shipping container

## Safety Approvals


Safety standards	UL 1950, CSA C22.2 No. 950
EMC	FCC part 15 subpart B class B CSA C108.8 Class B

## Loading Paper

### Single Sheets

1. Open the output tray and its extension.
2. Flip the feeder guard forward.
3. Insert your paper against the right edge of the sheet feeder.
4. Slide the left edge guide against the paper (but not too tightly).
5. Flip the feeder guard back over the paper.

**Note:** Make sure you didn't insert the paper in front of the feeder guard.

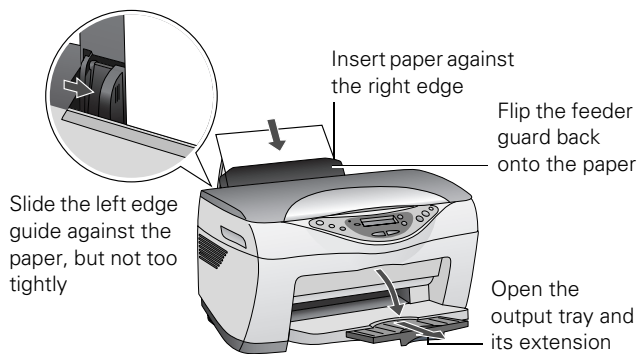


Also be sure to:


- Load the printable side face-up. It's often whiter or brighter than the other side.
- Load letterhead or preprinted paper into the Stylus CX5200 top edge first.
- Don't load paper above the arrow on the left edge guide.
- Load up to approximately 100 sheets of plain paper at a time.

## Envelopes

1. Load up to 10 envelopes at a time, flap edge left, and printable side up, against the right edge of the sheet feeder.
2. Slide the left edge guide against the envelopes (but not too tightly).

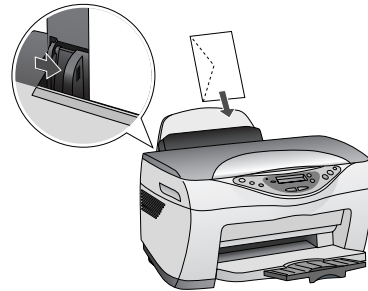

3. Lift up the entire scanner unit and set the paper thickness lever to the  position (remember to set it back to the  position when you're done).

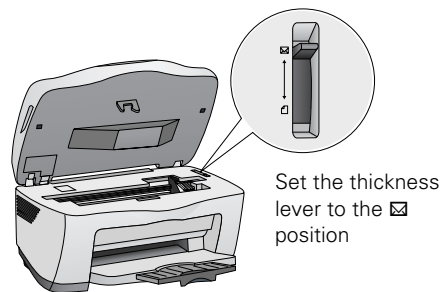

**Note:** For best results, press each envelope flat before loading, or load one envelope at a time.

4. Lower the scanner until it clicks into place.
5. Select the following settings:
  - Plain paper as the Type (Windows®) or Media Type (Macintosh®) setting
  - The correct envelope size as the Size (Windows) or Paper Size (Macintosh) setting
  - Landscape as the Orientation setting


## Selecting the Correct Media Type

Select the Type (Windows) or Media Type (Macintosh) setting according to these guidelines:

For this paper	Select this Type or Media Type setting
Plain paper sheets or envelopes	Plain paper
EPSON Premium Bright White Paper	Bright White Paper
EPSON Photo Quality Ink Jet Paper EPSON Photo Quality Ink Jet Cards	Photo Quality Ink Jet Paper
EPSON Matte Paper Heavyweight	Matte Paper - Heavyweight
EPSON Double-Sided Matte Paper	Double-Sided Matte Paper
EPSON Archival Matte Paper	Enhanced Matte Paper
EPSON Photo Paper EPSON Glossy Photo Paper EPSON All Purpose Glossy Paper EPSON Photo Quality Glossy Paper EPSON Glossy Photo Greeting Cards	Glossy Photo Paper
EPSON Premium Semigloss Photo Paper	Premium Semigloss Photo Paper
EPSON Iron-On Transfer Paper	Photo Quality Glossy Film
EPSON Ink Jet Transparencies	Ink Jet Transparencies

## Placing Your Original Document

1. Open the scanner lid.
2. Place your document face-down on the glass, in the corner shown below. Move your document about 0.1 inch from the top and side edge so your entire document is scanned.

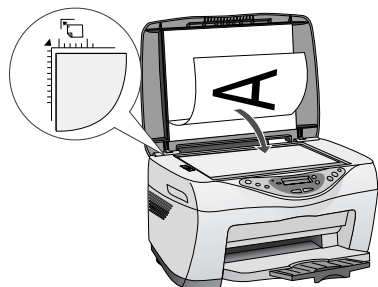

3. Close the scanner lid.

**Note:**

If you place your document against the guides, the edges next to the guides won't be scanned.

If you need to scan a thick document, such as a book, you can remove the scanner lid to scan. Gently press down the original to keep it flat on the document table. Be sure to replace the scanner lid when you're finished.

## Stand-Alone Copying


### Basic Copying

1. Place your document face-down on the glass, as shown in the previous section.
2. The default copy settings are displayed on the control panel. Change any necessary copy settings, as described in "Changing Copy Settings" below.
3. Press the Color Copy button (for color copies) or B&W Copy button (for black and white copies). Your document is scanned then printed. If you're using the 2-up or 4-up Copy Mode setting (see "Type of Copies" on page 6), repeat these steps for your second page.

**Note:** Your copied image size may not be the exact same size as your original.

### Changing Copy Settings

The current copy settings are shown on the LCD screen. You can change copy settings using the control panel, as described below.

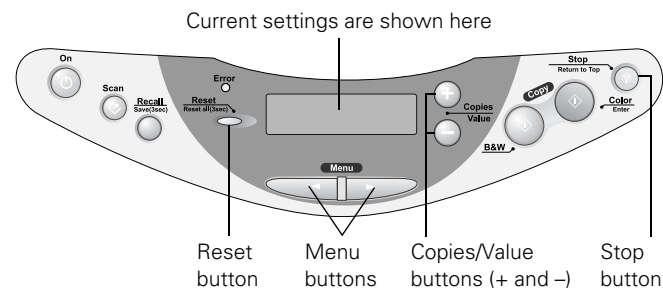

When you finished changing a setting, press the Stop button.

**Note:**

To clear a setting, press the Reset button. To clear all the setting changes you've made, press and hold the Reset button for at least 3 seconds.

If you'll be changing the Copy mode setting (as described in "Type of Copies" on page 6), select your Copy mode before selecting any other copy settings.

**Number of Copies**

Press the + or – Copies buttons. If you’re using the 2-up or 4-up Copy mode setting (see “Type of Copies”), you can’t select the number of copies.

**Paper Size**

Press a Menu button until you see Paper size on the LCD screen. Then press the + or – Value buttons to select the size of the paper you loaded, either Letter, 4 x6, 5 x7, or A4 (8.3 x 11.7 inches).

**Lighten or Darken**

Press a Menu button until you see Lighter/Darker on the LCD screen. Then press the + or – Value buttons to lighten or darken your copies.

**Type of Copies**

**Note:** The Copy mode settings determine the options available with other settings on the control panel. Not all of the other options described here are available with every Copy mode setting.

Press a Menu button until you see Copy mode on the LCD screen. Then press the + or – Value buttons to select one of these copy modes:

Copy mode	Results
<p><b>Standard Margins</b></p> <p>Copies your original with a 0.55-inch margin at the bottom of the page</p>	
<p><b>Minimize Margins</b></p> <p>Copies your original with only a 0.1-inch border around the edges*</p>	
<p><b>Repeat</b></p> <p>Copies an image multiple times on one sheet</p> <p>Works best with originals that are business-card-size or smaller)</p>	
<p><b>2-up</b></p> <p>Copies two originals onto one sheet</p>	
<p><b>4-up</b></p> <p>Copies four originals onto one sheet</p>	

\* If you notice reduced print quality at the bottom of your copy, try using the Standard Margins setting.

**Copy Quality**

Press a Menu button until you see Quality&Paper on the LCD screen. Then press the + or – Value buttons to select a print quality appropriate for your document and the paper you loaded.

Quality&Paper setting	Use when you’ve loaded
Plain Paper–Econ	Plain paper or Premium Bright White Paper for quick copying with draft print quality
Plain Paper–Norm	Plain paper or Premium Bright White Paper for text copying with normal print quality
Plain Paper–Fine	Plain paper or Premium Bright White Paper for text and graphics copying with high print quality
PQIJ Paper–Fine	Photo Quality Ink Jet Paper, or Cards for copying with high print quality (also for Plain paper or Premium Bright White Paper for improved image quality)
PQIJ Paper–Photo	Photo Quality Ink Jet Paper, or Cards for copying with photo print quality (also for Plain paper or Premium Bright White Paper for improved image quality)
Matte Paper HW	Matte Paper Heavyweight, Double-Sided Matte Paper, or Archival Matte Paper
Photo Paper	Photo Paper, Glossy Photo Paper, Photo Quality Glossy Paper, All Purpose Glossy Paper, or Glossy Photo Greeting Cards
PSGP Glossy	Premium Semigloss Photo Paper

**Note:** Not all of these settings may be available, depending on the current Copy mode setting.

**Reduce or Enlarge**

Press a Menu button until you see Reduce/Enlarge on the LCD screen. Then press the + or – Value buttons to enlarge or reduce your document to fit on the paper you loaded. Or select Auto Fit Page to have the EPSON Stylus CX5200 automatically determine the necessary reduction or enlargement.


To reduce or enlarge by a precise percentage, press a Menu button until you see Zoom In/Out on the LCD screen. Then press the + or – Value buttons to select a percentage of the scanned image for the resulting print.




**Note:** If you select Auto Fit Page as the Reduce/Enlarge setting to copy a document with white or very light colored edges, the original size may not be recognized correctly, creating an incorrect size copy. If this occurs, select 100% as the Reduce/Enlarge setting and use the Zoom In/Out setting to adjust the size of your copy.

## Using EPSON Smart Panel

Smart Panel is an easy, step-by-step interface for scanning, copying, printing, and more. You can use it to launch a variety of programs on your computer, as described below, or use it with the EPSON Stylus CX5200 Scan button for automatic scanning and copying.

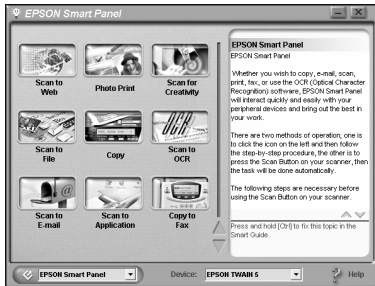
**Note:** For details on using all the Smart Panel features, click the ? button in Smart Panel or see the on-screen Smart Panel User Guide.



Smart Panel options	Description
 Scan to E-mail	Scans an image or document and attaches it to an e-mail so you can send it right away.
 Scan to Application	Scans and image or document and lets you choose which program it launches for handling the scanned file.
 Copy to Fax	When you install your own fax software, scans your image or document and faxes it to your chosen destination.

## Using EPSON Scan to File in Mac OS X







EPSON Scan to File launches EPSON TWAIN and saves the scanned images to files automatically. It generates sequential file names so you can quickly scan an image with different TWAIN settings and select the one you like the most.

1. Place the document face-down on the glass, in the top left corner as described in “Placing Your Original Document” on page 5.
2. Open your OS X Applications folder, then open the EPSON Scan to File folder.
3. Double-click the  EPSON Scan to File icon. You see the File Save Settings screen:




4. The images you scan are saved to the folder listed in the Location box. To change the folder, click the Choose button and select the folder you want.
5. The files are named with the prefix img. To change the prefix, enter a different three-character name in the Prefix box.
6. The files are saved in the TIFF (\*.tif) file format. You can select the JPEG, Multi-TIFF, or PICT format from the Type drop-down menu instead.


**Note:** For details on the available settings, click the Help button.

Smart Panel options	Description
 Scan to Web	Scans an image and uploads it to EPSON's photo-sharing web site.
 Photo Print	Scans and prints photos in various sizes and layouts.
 Scan for Creativity	Scans a photo into ArcSoft™ PhotoImpression™ where you can edit, retouch, enhance, and print it with templates, frames, and borders.
 Scan to File	Scans an image or document directly to a file on your hard drive.
 Copy	Scans and prints an image or document with the power and flexibility of a conventional photocopier.
 Scan to OCR	Scans text documents and converts them into editable text files on your computer with great accuracy.

- Open the **File** menu and click **Select Scanner**. You see this window:

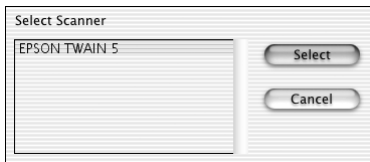

- Select **EPSON TWAIN 5** and click **Select**. (You need to perform steps 6 and 7 only the first time you run EPSON Scan to File.)
- Click **Next** on the File Save Settings screen. After a moment, you see this screen:

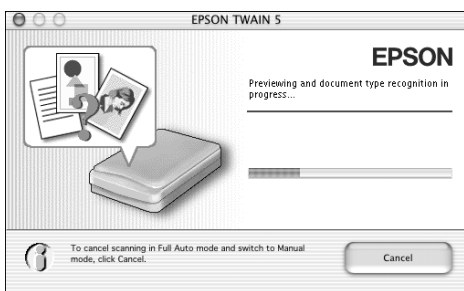

- EPSON TWAIN begins scanning your image in Full Auto Mode. Wait for scanning to finish.

To stop the scan and select settings in manual mode, click **Cancel**. Then click the **Manual mode** button on the next screen. You see the EPSON TWAIN settings dialog box.

**Note:** For detailed information on EPSON TWAIN settings, click the **Help** button.

- When scanning finishes, EPSON Scan to File saves your file to the location you selected. It's ready to open in a compatible image editing program, print, e-mail, or use as you like.

## Cleaning the Print Head

If your printouts are unexpectedly light, or dots or lines are missing, you may need to clean the print head. This unclogs the nozzles so they can deliver ink properly. Print head cleaning uses ink, so clean it only if quality declines.

**Note:** You can also use a printer software utility to clean the print head right from your computer. Select the **?** or **Help** button on your printer settings window for instructions on running the print head cleaning utility.

- Make sure the EPSON Stylus CX5200 is turned on but not printing, and the **Error** light is off. (If the **Error** light is flashing or on, you may need to replace an ink cartridge; see page 8)
- Press a **Menu** button until you see **Head Cleaning** on the LCD screen.
- Press the **Color Copy** button.


Cleaning takes about 30 seconds, during which the EPSON Stylus CX5200 makes some noise and the **On** light flashes briefly.

**Caution:** Never turn off the EPSON Stylus CX5200 while the **On** light is flashing, unless the Stylus CX5200 hasn't moved or made noise for more than 5 minutes.

- When the **On** light stops flashing, run a nozzle check to confirm the print head nozzles are clean.

Make sure plain paper is loaded, press a **Menu** button until you see **Nozzle Check** on the LCD screen, and press the **Color Copy** button. The nozzle check pattern prints.

- Examine the nozzle check pattern you print. It should look something like this:

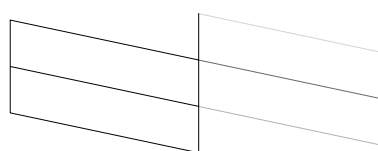

- If your printout looks okay, you're done.
- If any dots or lines are missing, clean the print head again; see the previous section for instructions.

If you don't see any improvement after cleaning three or four times, see the "Problems and Solutions" section of your on-screen *User's Guide*. You can also turn the EPSON Stylus CX5200 off and wait overnight—this allows any dried ink to soften—and then try cleaning the print head again.

**Caution:** When you don't turn on your EPSON Stylus CX5200 for a long time, the print quality can decline. It's a good idea to turn on your EPSON Stylus CX5200 at least once a month to maintain good print quality.



## Replacing an Ink Cartridge

If the Error light on the EPSON Stylus CX5200 is flashing and you see an ink low or ink out message on the LCD screen and your computer monitor, you need to replace one of the cartridges. When a cartridge is more than six months old, you may need to replace it if printouts don't look their best. If the quality doesn't improve after cleaning and aligning the print head, you can replace the cartridge.

Use these ink cartridges within six months of installing them and before the expiration date on the package:

- ❑ Black ink cartridge: T0321
- ❑ Cyan ink cartridge: T0422
- ❑ Magenta ink cartridge: T0423
- ❑ Yellow ink cartridge: T0424

**Caution:** To ensure good results, use genuine EPSON ink cartridges and do not refill them. Other products may cause damage to your EPSON Stylus CX5200 not covered by EPSON's warranty.

When you need new ink cartridges, contact your dealer, or call the EPSON Store at (800) 873-7766 or visit [www.epsonstore.com](http://www.epsonstore.com) (U.S. sales only). In Canada, please call (800) 463-7766 for dealer referral.

**Warning:**

Keep ink cartridges out of the reach of children and do not drink the ink.

If ink gets on your hands, wash them thoroughly with soap and water. If ink gets in your eyes, flush them thoroughly with water.

**Caution:**

To avoid damaging the EPSON Stylus CX5200, never move the print head by hand.


You cannot print if either ink cartridge is empty. Leave the empty cartridge installed in the EPSON Stylus CX5200 until you have obtained a replacement. Otherwise the ink remaining in the print head nozzles may dry out.

## Removing and Installing Ink Cartridges


Be sure you have a new ink cartridge before you begin. Once you start the ink cartridge replacement procedure, you must complete all the steps in one session.

1. Make sure the EPSON Stylus CX5200 is turned on and not printing. The control panel tells you which ink cartridge is low or empty.
2. Press a Menu button until you see Change Cartridge, then press the Color Copy button. The ink cartridges move to the replacement position.

3. Lift up the entire scanner unit.

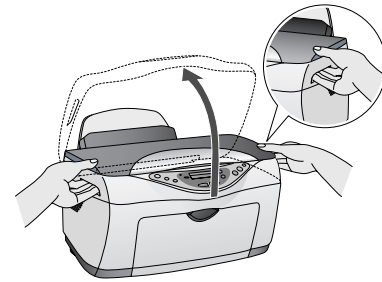


4. Pinch the tabs on the front and back of the cartridge, lift it out of the printer, and dispose of it carefully.

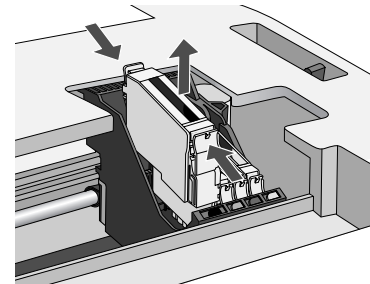


5. Shake the package of ink four or five times. Then remove the cartridge from the package.

**Caution:** Don't touch the green circuit board on the back of the cartridge; you may inhibit normal operation and printing.

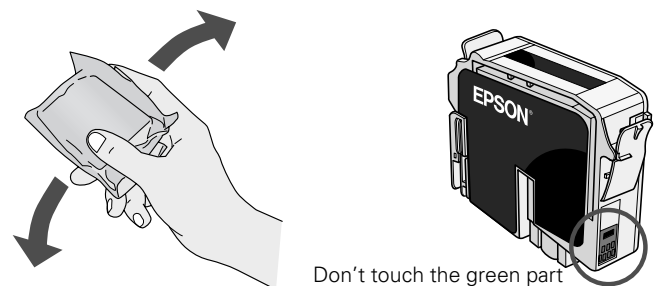


6. Lower the cartridge into its holder, then press down on the top of the cartridge until it clicks in place.

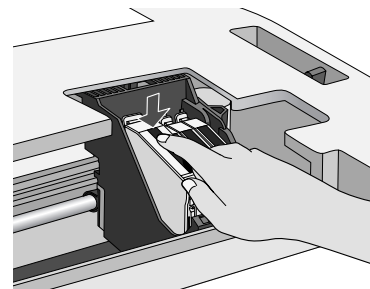

If you need to replace other ink cartridges, repeat steps 4 through 6 before continuing with step 7.

- Carefully lower the scanner unit and press it down until it clicks into place.

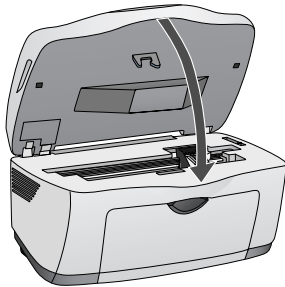

The EPSON Stylus CX5200 begins charging the ink delivery system.

Charging takes about 30 seconds. The **On** light flashes and the EPSON Stylus CX5200 makes noise. When it's finished, the **On** light stops flashing and stays on.

**Caution:** Never turn off the EPSON Stylus CX5200 while the **On** light is flashing, unless the Stylus CX5200 hasn't moved or made noise for more than 5 minutes.


## Aligning the Print Head

If your printouts contain misaligned vertical lines, you may need to align the print head.

**Note:** You can also use a printer software utility to align the print head right from your computer. Select the **?** or **Help** button on your printer settings window for instructions running the print head alignment utility.

- Make sure the EPSON Stylus CX5200 is turned on and not printing, and the **Error** light is off.
- Load a stack of plain, letter-size paper in the sheet feeder.
- Press a **Menu** button until you see **Head Alignment**, then press the **Color Copy** button to print the first alignment page.

- On the test page, select the pattern with the two vertical lines most precisely printed on top of each other. You may need to use a magnifying glass or loupe.

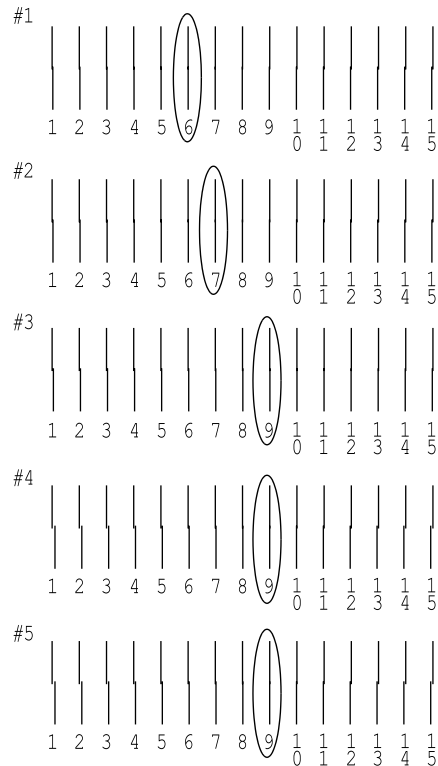


Select one pattern each for rows 1, 2, 3, 4, and 5. (In this example, the best pattern in each row has been circled.)

- Press the **+** or **- Value** buttons to select the number of the best pattern for the first row, then press the **Color Copy** button. Repeat this step for the second, third, fourth, and fifth rows.

**Note:** If you select a pattern other than 8 in any row, that pattern becomes pattern #8 next time you align the print head.

- When you're finished, press the **Color Copy** button to print the second alignment sheet.

- On the test page, select the pair of horizontal bars with the least noticeable light or dark band between them. You may need to use a magnifying glass or loupe.

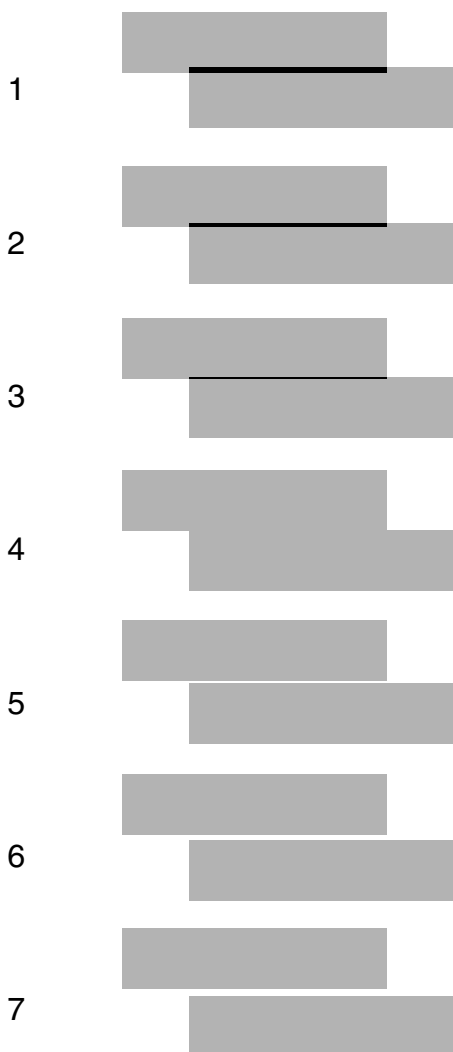

- Press the + or - Value buttons to select the number of the best pattern, then press the **Color Copy** button. (In this example, the best pattern is #4.)
- When you're finished, press the **Color Copy** button to print the third alignment sheet.
- Repeat steps 7 through 8 to complete the alignment process.

## Control Panel Error Messages

To diagnose some problems, check the printer's control panel, as described below.

Error Message	Solution
No XXX ink cartridge --- > Press the Color copy button to install new ink cartridge.	The indicated ink cartridge is not installed. Install the cartridge as described on page 8.
XXX ink out --- > Press the Color copy button to begin replacing the ink cartridge.	The indicated ink cartridge is out of ink. Replace the cartridge as described on page 8.
Ink cartridge error --- > Press the Color copy button to begin replacing the ink cartridge.	There is something wrong with the ink cartridge. Replace the cartridge as described on page 8.
Paper jam or misfeed --- > Press the color copy button and clear the paper jam by hand if necessary.	Paper is jammed. Press the <b>Color Copy</b> button to clear the jam. If it is still jammed see your on-screen <i>User's Guide</i> .
Paper out --- > Load paper in the Paper tray and press the Color copy button.	Load paper in the sheet feeder, then press the <b>Color Copy</b> button to continue printing.
Scanner unit open --- > Close the scanner unit	Carefully close the scanner and press it down until it clicks securely into place.
Scanner error --- > See your documentation and call service if necessary.	Press the <b>On</b> button to turn off the EPSON Stylus CX5200. Unlock the transportation lock if necessary. Turn on your EPSON Stylus CX5200 again. If the error message still appears, contact your dealer or EPSON as described in your on-screen <i>User's Guide</i> .
Printer error --- > See your documentation and call service if necessary.	Press the <b>On</b> button to turn off the EPSON Stylus CX5200, then press it to turn it back on. If the error message still appears, contact your dealer or EPSON as described in your on-screen <i>User's Guide</i> .

## Related Documentation

CPD-15142	EPSON Stylus CX5200 <i>Start Here</i>
CPD-15144	EPSON Stylus CX5200 <i>Macintosh Software Installation and Requirements and Notices</i> .
CPD-15143	EPSON Stylus CX5200 CD-ROM with Print Show movies and <i>User's Guide</i>
PL-CX5200	EPSON Stylus CX5200 Parts Price List