

EPSON[®] STYLUS[®] CX6300



Quick Reference Guide

*Copying, Printing and Scanning Without a Computer,
Maintaining Your CX6300, Solving Problems and Warranty*

Guia de referência rápida

*Cópia, impressão e escaneamento sem computador,
manutenção da CX6300, solução de problemas e garantia*

CPD-17036R1
4049268-00
XXX

Copyright Notice

All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, without the prior written permission of SEIKO EPSON CORPORATION. The information contained herein is designed only for use with this EPSON product. EPSON is not responsible for any use of this information as applied to other equipment.

Neither SEIKO EPSON CORPORATION nor its affiliates shall be liable to the purchaser of this product or third parties for damages, losses, costs, or expenses incurred by purchaser or third parties as a result of: accident, misuse, or abuse of this product or unauthorized modifications, repairs, or alterations to this product, or (excluding the U.S.) failure to strictly comply with SEIKO EPSON CORPORATION's operating and maintenance instructions.

SEIKO EPSON CORPORATION shall not be liable for any damages or problems arising from the use of any options or any consumable products other than those designated as Original EPSON Products or EPSON Approved Products by SEIKO EPSON CORPORATION.

Responsible Use of Copyrighted Materials

Digital cameras, scanners, and ink jet printers, like conventional photocopiers and cameras, can be misused by improper copying or printing of copyrighted material. While some countries' laws permit limited copying of copyrighted material in certain circumstances, those circumstances may not be as broad as some people assume. EPSON encourages each user to be responsible and respectful of the copyright laws when using digital cameras, scanners, and ink jet printers.

Trademarks

EPSON and EPSON Stylus are registered trademarks and EPSON Smart Panel is a trademark of SEIKO EPSON CORPORATION.

BorderFree and DURABrite are registered trademarks of Epson America, Inc.

General Notice: Other product names used herein are for identification purposes only and may be trademarks of their respective owners. EPSON disclaims any and all rights in those marks.

Contents

Using Your Stylus CX6300	5
EPSON Stylus CX6300 Parts	6
Using the Security Lock	7
Loading Paper	10
Loading Single Sheets	10
Using Special Papers	11
Copying	13
Copying Without a Computer	13
Changing Copy Settings	14
Using Memory Cards	19
Compatible Memory Cards	19
Inserting a Card	20
Using Your CX6300 as a Card Reader	21
Printing from a Card	24
Printing an Index Form	24
Selecting Photos to Print	25
Printing with DPOF	27
Choosing Print Settings	28
Scanning to a Card	30
Placing Your Original Document	30
Scanning to a Card	31

Maintenance	33
Cleaning the Print Head	33
Replacing Ink Cartridges	35
Solving Problems	39
Problems and Solutions	39
Where To Get Help	41
Notices	43
Important Safety Instructions	43
FCC Compliance Statement	45
Declaration of Conformity	45
ENERGY STAR Compliance	46
Limited Warranty	46

Using Your Stylus CX6300

You can use your EPSON Stylus® CX6300 to make color or black-and-white copies without turning on your computer. All you have to do is place your original on the glass and press the button.



You can also print photos directly from your digital camera's memory card—just insert the card, select the settings you want to use, and print. You don't have to be connected to a computer. Your CX6300 lets you share images in other ways, too—by scanning to a card, or by copying images to and from your computer.

To set up your CX6300 and install its software, see the *Start Here* sheet.

For instructions on printing and scanning from your computer, see your online *Reference Guide*. An icon for the *CX6300 Reference Guide* is automatically placed on your desktop when you install the software.

Please follow these guidelines throughout:

Warning:

Warnings must be followed carefully to avoid bodily injury.

Caution:

Cautions must be observed to avoid damage to your equipment.




Note:

Notes contain important information about your CX6300.

Tip:

Tips contain hints for better copying, scanning, and printing.

EPSON Stylus CX6300 Parts

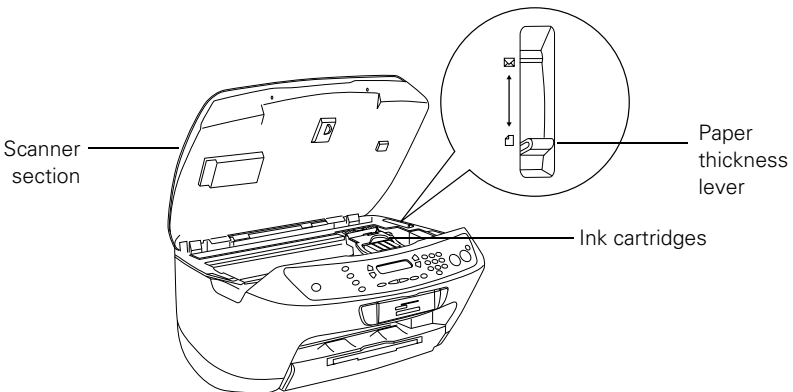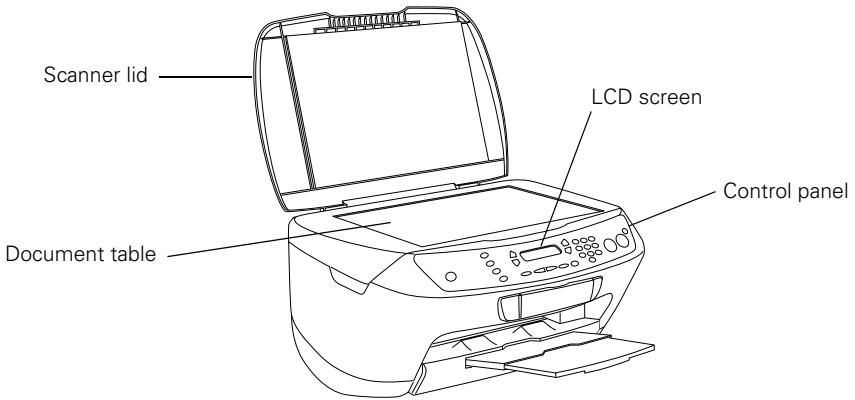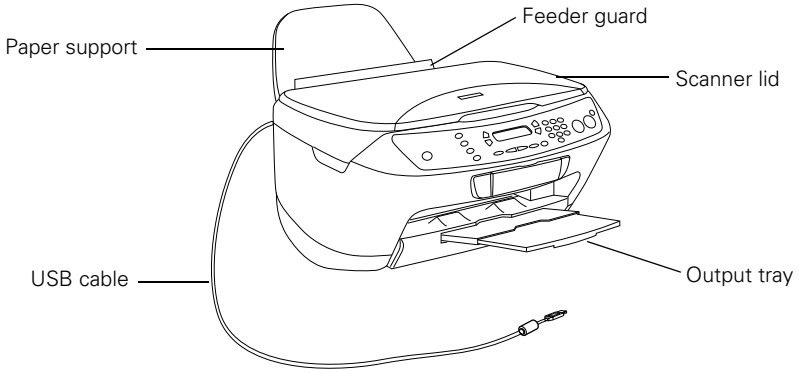


Using the Security Lock

If you want to prevent unauthorized use of your CX6300, you can activate its security lock feature. The security lock requires you to enter a PIN (Personal Identification Number) whenever you turn on the CX6300. If you forget your PIN code, you can still regain access to your CX6300 (see page 9).

To enable the security lock, you must first run the Security Lock program on a computer connected to the CX6300.

Follow these steps to activate the security lock:

1. Press the **On** button until the green lights flash to turn on your CX6300.

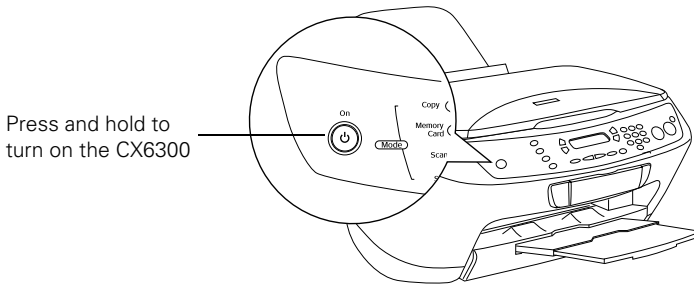

2. Insert your English software CD-ROM.
3. **Windows:** If you see the Software Installation screen, click **Exit**. Open the **SecurityLockTool** folder on your CD-ROM, then double-click the program file located in that folder.

Macintosh: The EPSON folder automatically opens (if it doesn't, double-click the EPSON CD-ROM icon). Then double-click the **EPSON Security Lock** icon.


You see this screen:



Note:

You can also copy the program to your system by dragging its icon from the CD-ROM onto your hard drive.

4. Make sure **Security Lock On** is selected and click **OK**.
5. At the confirmation screen, click **OK** again and close the program. You have now enabled the Security Lock menu on the CX6300.
6. On the control panel, press the **Setup** button, then use the **Select** buttons to display **Security Lock** on the LCD screen.

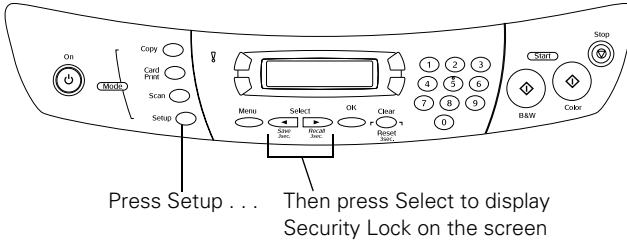


7. Press the **Color** button.
8. Press the button next to **On** (shown on the LCD screen).
9. Enter your 4-digit PIN code. Be sure to write down the number so you don't forget it.
10. Press the button next to **OK**.
11. Turn off your CX6300. It is now locked.

When you turn it back on, it prompts you to enter your PIN code. You cannot use it without entering the PIN code.

Turning Off the Security Lock

If you want to turn the security lock off (so that the CX6300 doesn't prompt you to enter your PIN code each time you turn it on), follow these steps:

1. On the control panel, press the **Setup** button, then use the **Select** buttons to display **Security Lock** on the LCD screen.

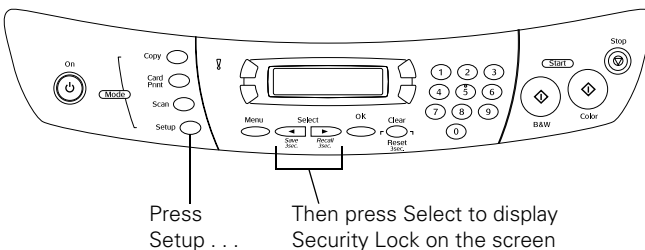


2. Press the **Color** button.
3. Press the button next to **Off** (shown on the LCD screen).
4. Enter your 4-digit PIN code. The security feature is now turned off.

If you forget your PIN code, you can regain access to the CX6300 by running the security lock program from your computer:

1. Insert your Stylus CX6300 software CD-ROM.
2. **Windows:** If you see the Software Installation screen, click **Exit**. Open the **SecurityLock Tool** folder on your CD-ROM, then double-click the program file located in that folder.

Macintosh: The EPSON folder automatically opens (if it doesn't, double-click the EPSON CD-ROM icon). Then double-click the EPSON Security Lock icon.

You see this screen:

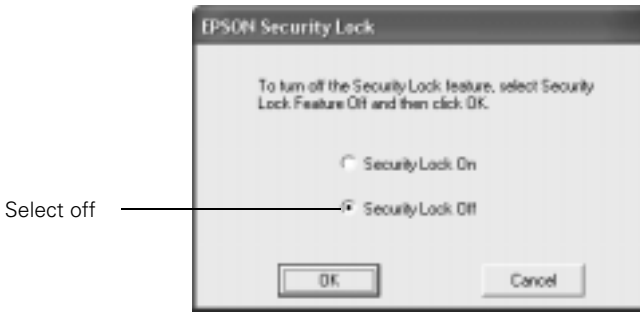

3. Select **Security Lock Off** and click **OK**.
4. At the confirmation screen, click **OK** again and close the program. This deactivates the security lock feature so that the Security Lock menu on the CX6300 no longer appears. You now have full access to the CX6300.

Loading Paper

Follow the guidelines in this chapter to load paper in your CX6300 and select compatible EPSON® papers for high-quality results.

See these sections:


- “Loading Single Sheets” (below)
- “Using Special Papers” on page 11

Loading Single Sheets

1. Extend the output tray.
2. Insert your paper against the right edge of the sheet feeder.
3. Slide the left edge guide against the paper (but not too tightly).

Note:

Do not place the paper in front of the feeder guard.

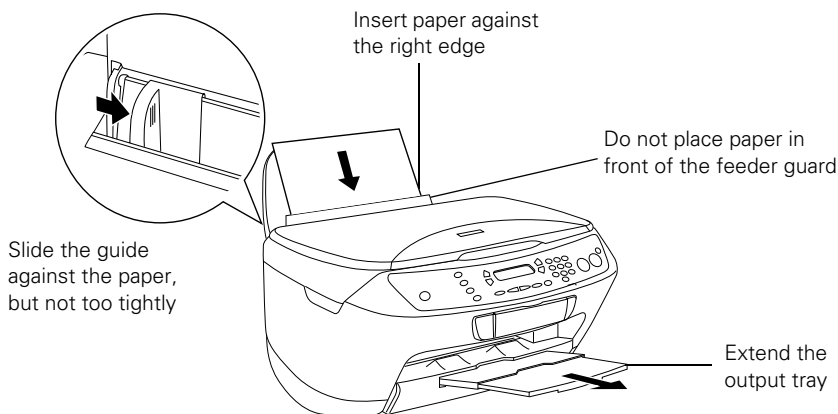

Also be sure to:

- Load the printable side face-up. It's often whiter or brighter than the other side.

- Load letterhead or preprinted paper top edge first.
- If the paper has a cut corner, position it in the upper right corner as you load it in the sheet feeder.
- Load paper short-edge first, even for landscape-oriented documents and photos.
- Check the paper package for additional instructions on using special papers.
- Load paper no higher than the arrow on the left edge guide, up to approximately 125 sheets of plain paper at a time.

If you're loading special paper, see the next section.

Using Special Papers

EPSON offers the following special ink jet papers for the Stylus CX6300.

Note:

Some of these papers can be used only when printing from your computer.

Paper name*	Size	Part number
EPSON Premium Bright White Paper	Letter (8.5 × 11 inches [216 × 279 mm])	S041586
EPSON Photo Paper or EPSON Glossy Photo Paper	4 × 6 inches (102 × 152 mm)	S041134/S041671
	Letter (8.5 × 11 inches [216 × 279 mm])	S041141-ML/ S041649
	A4 (8.3 × 11.7 inches [211 × 279 mm])	S041140
EPSON Matte Paper Heavyweight	Letter (8.5 × 11 inches [216 × 279 mm])	S041257-ML
	8 × 10 inches (203 × 254 mm)	S041467
EPSON Double-Sided Matte Paper	Letter (8.5 × 11 inches [216 × 279 mm])	S041568

Paper name*	Size	Part number
EPSON Premium Semigloss Photo Paper	Letter (8.5 × 11 inches [216 × 279 mm])	S041331-ML
EPSON DURABrite® Ink Glossy Photo Paper	Letter (8.5 × 11 inches [216 × 279 mm])	S041731
	4 × 6 inches (102 × 152 mm)	S041734

* The availability of paper types varies by location.

To purchase EPSON ink cartridges, paper, and other printing media, contact your dealer or call EPSON. See “Where To Get Help” on page 41 for contact information.

To load EPSON special ink jet papers, follow these guidelines:

Paper type	Loading capacity
Premium Bright White Paper	125 Sheets
Glossy Photo Paper or Photo Paper	20 sheets
Matte Paper Heavyweight	20 sheets with a support sheet beneath the stack
Double-Sided Matte Paper	1 sheet
Premium Semigloss Photo Paper	1 sheet
Ink Jet Transparencies	30 sheets with a sheet of plain paper beneath the stack
DURABrite Ink Glossy Photo Paper	20 sheets


Copying

Follow the instructions in this chapter to use your CX6300 as a stand-alone copy machine. See these sections:

- “Copying Without a Computer” (below)
- “Changing Copy Settings” on page 14

Copying Without a Computer

1. Open the scanner lid.
2. Place your document face-down on the glass, in the upper left corner. Move your document about 3 mm ($\frac{1}{8}$ inch) from the top and side edge so your entire document is scanned.

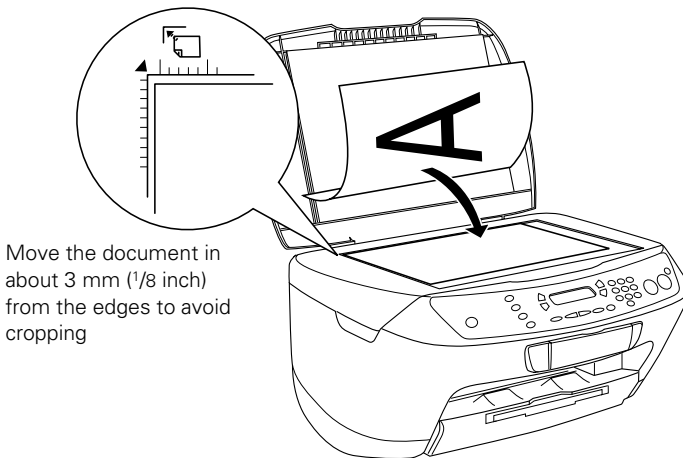

Note:

If you place your document against the guides, the edges next to the guides won't be copied.

If you need to copy a thick document, such as a book, you can remove the scanner lid to scan. Gently press down the original to keep it flat on the document table. Be sure to replace the scanner lid when you're finished.


3. Close the scanner lid.
4. Press the **Copy** button to enter Copy Mode.
5. The default copy settings are displayed on the LCD screen. Change any necessary copy settings, as described in “Changing Copy Settings” (below).
6. Press the **Color** button (to make color copies) or **B&W** button (to make black-and-white copies). Your document is scanned and then printed. If you're using the **2-up** or **4-up** Copy Layout setting (see “Copy Layout” on page 17), follow the instructions on the LCD screen to scan additional sheets.

Caution:

Never open the scanner section while scanning or copying, or you could damage the CX6300.

Changing Copy Settings

The current copy settings are shown on the LCD screen. You can change the settings as described below.

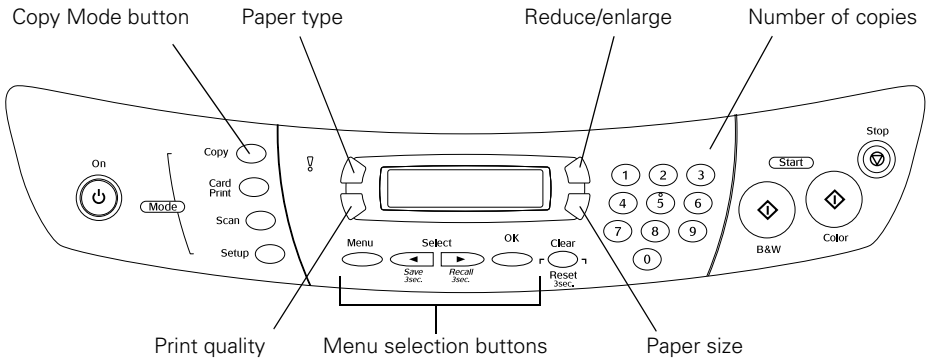

Note:

You can save the current copy settings (except for the number of copies) by pressing the **Save** button for 3 seconds until you see the message “Stored” on the screen. To recall these settings, press and hold the **Recall** button for 3 seconds.


To clear your settings and return the CX6300 to its default settings, press and hold the **Reset** button for 3 seconds.

Number of Copies

Use the number keypad to select the number of copies you want to print (up to 99). If you're using the 2-up or 4-up Copy mode setting (see "Copy Layout" on page 17), you can't select more than one copy.

Paper Type

If you have loaded special paper, use this button to select one of the paper type settings listed below:

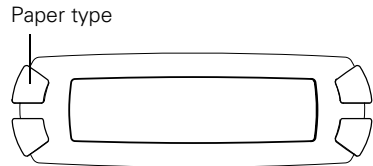

If you have loaded this kind of paper...	Select this setting...
Plain paper EPSON Premium Bright White Paper	Plain
EPSON Matte Paper Heavyweight	Matte
EPSON Photo Paper EPSON Glossy Photo Paper EPSON Premium Semigloss Photo Paper	Glossy
EPSON DURABrite Ink Glossy Photo Paper	DB Photo


Note:

Always select the paper type first, because it determines the available print quality and paper size settings.

Print Quality


Use this button to select one of these print quality settings:

- **Draft** for making copies quickly when image quality is not important
- **Text** for copying text and line art
- **Image** for copies that include color or black-and-white images
- **Best** for the highest-quality copies

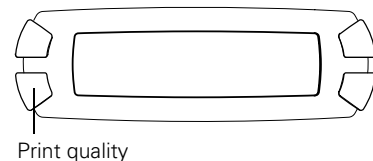

Paper Size

Use this button to select the size of paper you've loaded. Choose one of these sizes: **A4**, **LTR (letter)**, **4 × 6 (102 × 152 mm)**, **5 × 7 (127 × 178 mm)**, or **8 × 10 (203 × 254 mm)**.

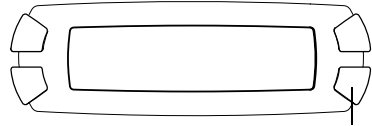


Paper size

Note:

The 4 × 6 (102 × 152 mm) paper size option is not compatible with Glossy Photo Paper, 4" × 6", with micro perforated edges (S041134).

Reduce or Enlarge

Use this button to reduce or enlarge the size of your copied image. You can select from these settings:

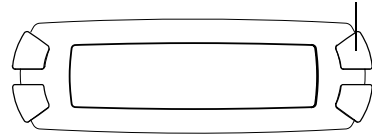

Reduce/enlarge

Setting	Result
Actual	Prints the image at its original size
Auto Fit Page	Reduces or enlarges the image, as needed, to fit the selected paper size
Letter → 4 × 6 (102 × 152 mm) 4 × 6 (102 × 152 mm) → Letter Letter → 5 × 7 (127 × 178 mm) 5 × 7 (127 × 178 mm) → Letter A4 → Letter Letter → A4	Converts the original document size to the finished copy size

To reduce or enlarge by a specific percentage, see “Manual Zoom” on page 18.

Note:

If you select **Auto Fit Page** to copy a document with white or very light colored edges, the original size may not be recognized correctly, creating an incorrect size copy. If this occurs, use the manual zoom to adjust the size of your copy (see page 18).


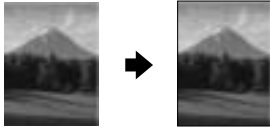
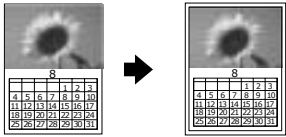
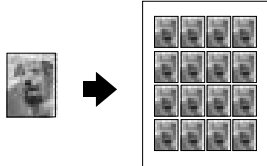
Copy Layout




If you want to make copies with a special layout (for example, borderless copies or several copies on one sheet), use the Copy Layout menu.

To select a special layout:

1. Press the **Menu** button.
2. Press the green button next to the LCD screen until you see **Copy Layout** displayed, then press **OK**.
3. Continue pressing the green button until you see the desired layout setting, then press **OK**.

Here are the layout settings you can choose from:

Copy Layout	Results
<p>Standard</p> <p>Copies your original with a normal margin (0.12 inch or 3 mm)</p>	
<p>BorderFree™</p> <p>Sizes your original as necessary to fit to the edges of 4 × 6 (102 × 152 mm) or 5 × 7 (127 × 178 mm) paper*</p>	
<p>Min Margins</p> <p>Copies your original with a 0.06-inch (1.5 mm) border around the edges*</p>	
<p>Repeat 4, 9, or 16</p> <p>Prints an image multiple times on one sheet; select 4, 9, or 16 images per sheet, or Auto to print your image as many times as it will fit (prints full-size; works best with small images)</p>	

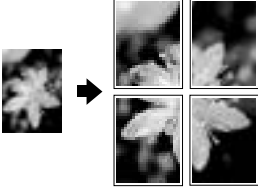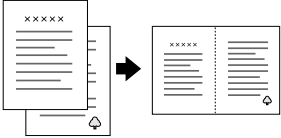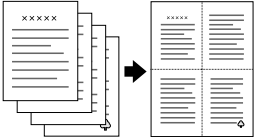Copy Layout	Results
<p>Poster</p> <p>Prints the original image on separate sheets (4, 9, or 16) that you can paste together to make a large poster</p>	
<p>2-up</p> <p>Copies two originals onto one sheet</p>	
<p>4-up</p> <p>Copies four originals onto one sheet</p>	

* If print quality declines at the bottom of the page, use the Standard layout setting.

Copy Density

To make your copies lighter or darker, use the Copy Density menu:

1. Press the **Menu** button.
2. Press the green button next to the LCD screen until you see **Copy Density** displayed, then press **OK**.
3. Press the green buttons (next to - and +) to lighten or darken your copies, then press **OK**.

Manual Zoom

You can manually adjust the size of your copies from 25% to 400%:

1. Press the **Menu** button.
2. Press the green button next to the LCD screen until you see **Optional Zoom** displayed, then press **OK**.
3. Use the number keypad to enter the size percentage, then press **OK**.

Using Memory Cards

This chapter tells you what kinds of memory cards to use with your CX6300, and how to insert them. See these sections:


- “Compatible Memory Cards” (below)
- “Inserting a Card” on page 20
- “Using Your CX6300 as a Card Reader” on page 21

See also “Printing from a Card” on page 24 and “Scanning to a Card” on page 31.

Compatible Memory Cards

You can use the following types of cards with your CX6300:

Slot	Type of card
A	Memory Stick MagicGate Memory Stick Memory Stick PRO SD Card MultiMediaCard Memory Stick Duo (adapter required) miniSD Card (adapter required)
B	SmartMedia™ xD-Picture Card
C	CompactFlash™ Microdrive

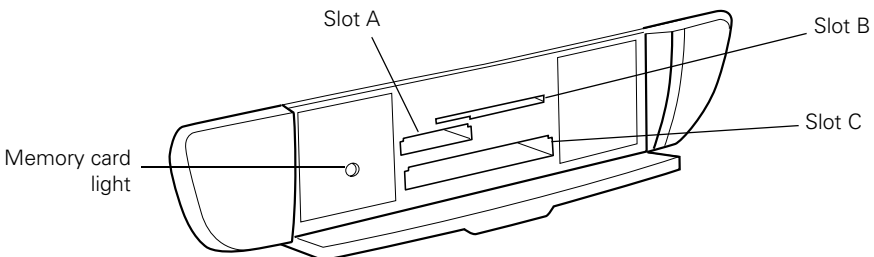


Inserting a Card

1. Make sure the CX6300 is turned on.
2. If you will be printing from or scanning to the card, make sure your CX6300 is not connected to your computer (or your computer is turned off).

If you want to copy images between the card and your computer, leave the computer connected. Any images stored on the card will be automatically copied to your computer once you insert the card (see page 21).


3. Open the memory card cover.

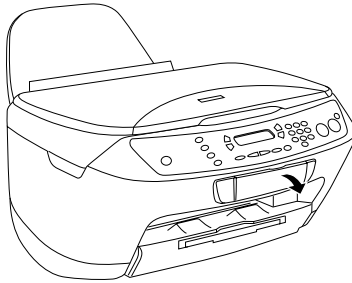


4. Make sure the memory card light (next to the memory card slots) is off and that no cards are in any of the slots. Then insert a card into the correct slot, as shown on page 19.

Note:

Do not insert more than one card at a time, or you may not be able to tell which card your images are being read from.

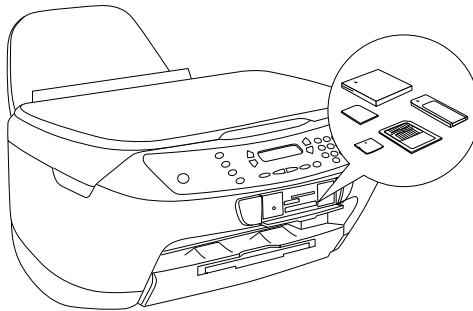

After the CX6300 reads the card, if it finds any images saved in a compatible format (see note below), you see the following screen:

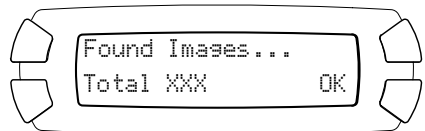

5. Press the button next to **OK** (shown on the screen).

To remove the card, pull it straight out of its slot. On a Macintosh, drag the card icon on your desktop to the Trash before removing the card.

Caution:

Do not remove the card or turn off the CX6300 while the memory card light is flashing, or you may lose data on the card.

Note:

Your image files must meet these requirements:

File format	JPEG or TIF format image files (supports Exif version 2.1/2.2)
Media format	DCF (Design rule for Camera File system) version 1.0
Image size	Vertical 120 to 4600 pixels, horizontal 120 to 4600 pixels

Using Your CX6300 as a Card Reader

You can use your CX6300 as an external card reader, letting you copy images from a card to your computer, or vice versa. To use this feature with Windows® 98 or Me, make sure you've already installed your CX6300 software as described on the *Start Here* sheet (this automatically installs the necessary USB storage driver).

1. Make sure your CX6300 is turned on and connected to your computer.
2. Insert a memory card as described in the previous section. (If you'll be copying images to the card, make sure the card's write-protect tab, if it has one, is set to allow writing on the card.)

Note:

If this is your first time inserting a card, see "Using EPSON CardMonitor" on page 22 to set up EPSON CardMonitor.

3. Once the card is inserted, it appears as a removable drive icon on your computer. Copy images to or from the card, as needed.

Note:

If you copy images to the card, the number of images shown on the LCD screen does not automatically change. You must remove and reinsert the card to make the CX6300 recognize the new images.

Using EPSON CardMonitor

You can use EPSON CardMonitor to copy images automatically to your computer whenever you insert a card. You can also pick an application that opens to help you edit your pictures.

Follow the instructions below for your operating system.

Windows

1. If your computer (Windows XP or 2000) asks you what you want to do when you insert a card, select **Startup CardMonitor**, click the checkbox for **Always do the selected action**, and click **OK**.
2. If this is your first time inserting a card, you see this screen:



Click **Next**.


3. The EPSON PhotoStarter setup assistant opens. Follow the instructions on the screen to set up EPSON CardMonitor.

Macintosh

1. Open the **Applications** folder on your hard drive, then double-click **Image Capture**. You see this screen:



2. From the Image Capture menu, select **Preferences**. You see this screen:

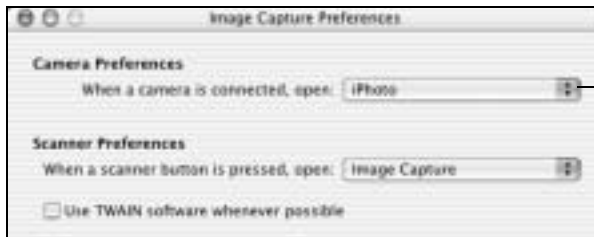

Select **Other**

3. From the Camera Preferences drop-down list, select **Other**. A new Applications folder opens.
4. Open the EPSON CardMonitor folder, then click the EPSON CardMonitor icon.
5. Click the **Open** button.
6. Close the Image Capture utility.
7. CardMonitor will now open automatically when you insert a card. Follow the instructions on the screen to set up CardMonitor to copy images to your computer when you insert a card and open an image-editing application, if desired.

Note:

If CardMonitor doesn't open automatically, browse to the new drive icon on your desktop to view your images.

Printing from a Card

The Stylus CX6300 lets you print photos directly from your digital camera's memory card—you don't even have to connect the CX6300 to a computer.

If your memory card contains photos taken with a camera that supports DPOF (Digital Print Order Format), you can pre-select the photos you want to print while the card is still in the camera.

See these sections:

- “Printing an Index Form” (below)
- “Selecting Photos to Print” on page 25
- “Printing with DPOF” on page 27
- “Choosing Print Settings” on page 28

Printing an Index Form


In most cases, you'll want to print an “index form” before printing any photos from your memory card. An index form lets you see small “thumbnail” images of the pictures on your card and select just the ones you want to print.

1. Make sure your CX6300 is not connected to your computer (or your computer is turned off), then insert a memory card (see “Inserting a Card” on page 20).

Once the card is inserted, the CX6300 reads and displays the number of printable images on the card (only images in a compatible JPEG or TIF file format are detected).

2. Press the **CardPrint** button to enter Card Print mode.
3. Press the green button next to the LCD screen until **Print Index** appears, then press **OK**.

Print Index

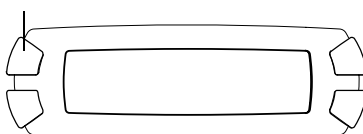

4. Load several sheets of plain, letter-size paper. (If there are more than 36 images on the card, you will need multiple sheets to print the index.)
5. Press the **Color** button to print the index. After the index form prints, **Scan Index** appears on the LCD screen. Leave your memory card in the printer and see the instructions below for printing your photos.

Selecting Photos to Print

You can select the photos you want to print either by filling in the ovals on the index form and scanning the form (below), or by selecting a photo or range of photos from the control panel (page 26).

Selecting Photos on the Index Form

1. Once you have printed the index form, fill in the oval beneath each photo you want to print with a dark pen or pencil.

OK:



No good:



2. Near the bottom of the form, select the type and size of paper you want to use. You can select from these options:

Option	Available paper types
Glossy - 4 × 6 Glossy - 5 × 7 Glossy - Letter	EPSON Photo Paper EPSON Glossy Photo Paper EPSON Premium Semigloss Photo Paper
DB Photo - 4 × 6 DB Photo - Letter	EPSON DURABrite Ink Glossy Photo Paper
Matte - Letter	EPSON Matte Paper Heavyweight


3. Load the type of paper you've chosen to print on (see "Loading Paper" on page 10).

4. Make sure **Scan Index** appears on the control panel, then press **OK**. (If it doesn't appear, press the **Card Print** button, then press the green button next to the LCD screen until you see **Scan Index**, then press **OK**.)
5. Place the index form face-down on the scanner, so that the top of the form is aligned against the left edge of the glass (see page 30).
6. Press the **Color** button. The form is scanned and your photos are automatically printed.

Selecting Photos from the Control Panel

1. Once you have printed the index form, identify a photo or range of consecutive photos you want to print.
2. Make sure you're in Card Print mode (if necessary, press the **Card Print** button).
3. Press the green button next to the LCD screen to select **One image**, **Range of images**, or **All images**, then press **OK**.
4. If you want to print one image or a range of images, follow the instructions on the screen and use the number keypad to select the images you want to print, then press **OK**.
5. Enter the number of copies of each photo you want to print (up to 99), then press **OK**.

Select images

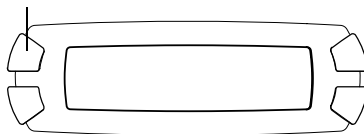

- Note:**
The number of copies is how many times each photo prints, not the number of pages. For example, if you're using a layout that fits 8 photos and you select 3 copies, you will get one sheet with 3 photos printed on it.
6. Change any print settings, as needed (see page 28). You can select the paper type, paper size (unless you're using plain paper), and layout.

Note:

The number of pages cannot be selected; it is determined automatically by your chosen layout and number of copies.

7. Press the **Color** button. Your photos are printed.

Printing with DPOF

Follow these steps if you've already selected the photos you want to print using your camera's DPOF feature.

1. Insert a memory card containing DPOF image files (see "Inserting a Card" on page 20).
2. Load the type of paper you want to print on.
3. Press the **Card Print** button to enter Card Print mode.
4. Using the number keypad, enter the number of copies of each photo you want to print (up to 99), then press **OK**.

Note:

The number of copies is how many times each photo prints, not the number of pages. For example, if you're using a layout that fits 8 photos and you select 3 copies, you will get one sheet with 3 photos printed on it. Select 8 copies to put all 8 photos on one sheet.

5. Change any print settings, as needed. You can select the paper type, paper size (unless you're using plain paper), and layout. See "Choosing Print Settings" on page 28 for details.

Note:

The number of pages cannot be selected; it is determined automatically by your chosen layout and number of copies.

6. Press the **Color** button. Your photos are printed.


Choosing Print Settings

Before printing your selected photos, you may need to adjust some of these settings.

Paper Type

If you have loaded special paper, use this button to select one of the paper type settings listed below:

Paper type

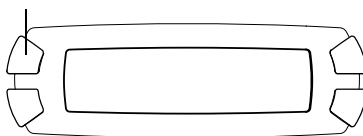


If you have loaded this kind of paper...	Select this setting...
Plain paper EPSON Bright White Photo Paper	Plain
EPSON Matte Paper Heavyweight	Matte
EPSON Photo Paper EPSON Glossy Photo Paper EPSON Premium Semigloss Photo Paper	Glossy
EPSON DURABrite Ink Glossy Photo Paper	DB Photo

Paper Size

Use this button to select the size of paper you've loaded. Choose one of these sizes: LTR (letter), 4 × 6 (102 × 152 mm), 5 × 7 (127 × 178 mm), or 8 × 10 (203 × 254 mm). (Some sizes are not available, depending on the selected paper type.)

Paper size

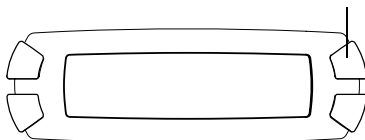


Note:

The paper size setting must match the size of the paper you've loaded, otherwise you will get different results.

The 4 × 6 (102 × 152 mm) paper size option is not compatible with Glossy Photo Paper, 4" × 6", with micro perforated edges (S041134).

Layout

Use this button to select one of these layout settings:

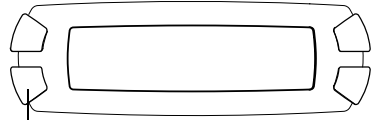

Layout

Setting	Results
B-Free	Prints without margins so that the image covers the whole page.
1-up 2-up 4-up 8-up 20-up 80-up	<p>Prints one or more photos per page. For example, 8-up prints up to 8 photos per page.</p> <p>If you selected one photo to print, the actual number of photos on your page depends on the number of copies you selected. For example, if you selected 8-up for your layout and 5 copies, 5 photos will print on your page.</p> <p>If you selected a range of photos to print, the number of photos on your page depends on the range and layout you selected. For example, if you selected 8-up for your layout and selected a range of 6 photos, 6 different photos will print on your page. More than one sheet may be needed to print your range of photos.</p> <p>The size of each photo is adjusted automatically for the layout and paper size.</p>
Upper1/2	Prints only on the upper half of each page


Scanning to a Card

Follow the instructions in this chapter to scan your photos and other documents directly to a memory card. See these sections:

- “Placing Your Original Document” (below)
- “Scanning to a Card” on page 31

Placing Your Original Document

1. Open the scanner lid.
2. Place your document face-down on the glass, in the upper left corner. Move your document about 3 mm ($\frac{1}{8}$ inch) from the top and side edge so your entire document is scanned.

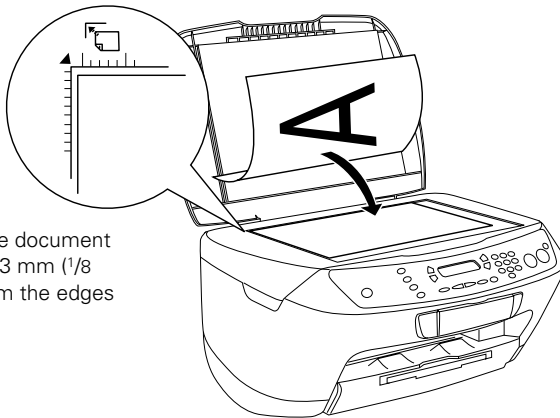

Move the document in about 3 mm ($\frac{1}{8}$ inch) from the edges

3. Close the scanner lid.

Note:

If you place your document against the guides, the edges next to the guides won't be scanned.

If you need to scan a thick document, such as a book, you can remove the scanner lid to scan. Gently press down the original to keep it flat on the document table. Be sure to replace the scanner lid when you're finished.

Scanning to a Card

Follow these steps to scan an image to a memory card and save it in JPEG format:

1. Make sure your CX6300 is not connected to your computer (or your computer is turned off), then insert a memory card (see page 20).

Note:


If the card is not properly formatted, you see a message on the LCD screen. Press the button indicated on the screen to format the card. Any data stored on the card will be erased.

2. Press the **Scan** button to enter Scan Mode.
3. Press the green button next to the LCD screen until **To Photo Card** appears, then press **OK**.

Note:

You can also scan to your computer or create an e-mail with the scanned image attached. Select either **To PC** or **To E-mail**, then see your online *Reference Guide* for details.

4. Select the document type (**Text** or **Graphic**).
5. Select **Auto** as the scan area. (If the edges of your document are light in color, the CX6300 may not be able to detect them and part of your image may be cut off; in that case, select **Max.** to scan the entire area.)
6. For ordinary documents, select **Normal** as the quality of the scanned image. For higher quality, select either **Fine** (for text) or **Graphic** (for photos).

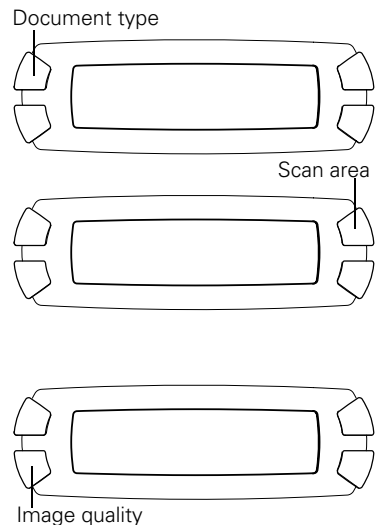

Note:

Higher-quality images take up more memory card space.

7. Press the button next to **OK** (shown on the LCD screen).
8. Make sure your original document is placed on the scanner, then press the **Color** button to start scanning. Your image is saved to the "epscan" folder on the memory card.

Caution:

Never open the scanner section while scanning or copying, or you could damage the CX6300.

9. Wait for scanning to finish, then remove the card.

Maintenance

If you notice a decline in print quality, follow the instructions in this chapter to check and clean the print head. You'll also find instructions on checking ink levels and replacing the ink cartridges.

See these sections:

- “Cleaning the Print Head” (below)
- “Replacing Ink Cartridges” on page 35

Cleaning the Print Head

If your printouts are unexpectedly light or faint, or you notice light or dark bands across your printout, you may need to clean the print head. This unclogs the nozzles so they can deliver ink properly.

Note:


Print head cleaning uses ink, so clean it only if quality declines.

If you notice that text or straight vertical lines appear jagged, you may need to align the print head. See your online *Reference Guide* for details.


Running a Nozzle Check

1. Make sure the CX6300 is turned on, paper is loaded, and the red **!** error light is off. (If the **!** error light is on, check the LCD screen to see if you have to replace an ink cartridge.)
2. Press the **Setup** button to enter Setup Mode.
3. Press the green button next to the LCD screen until you see **Nozzle check** displayed, then press the **Color** button to print the nozzle check.

4. After the nozzle check finishes printing, make sure each line is complete, without any gaps or missing dots:

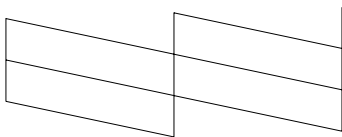

If any dots are missing, as shown below, clean the print head as described in the next section.

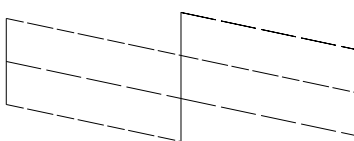

Running the Head Cleaning Utility

If you need to clean the print head, follow these steps:

1. Press the **Setup** button to enter Setup Mode.
2. Press the green button next to the LCD screen until you see **Head Cleaning** displayed, then press the **COLOR** button to print the nozzle check.

The CX6300 runs a head cleaning cycle, and you see the message “Head cleaning . . .” on the LCD screen.

Caution:

Never turn off the CX6300 while head cleaning is in progress, or you may damage it.

3. When the message “Head cleaning . . .” disappears, repeat the nozzle check to verify that the print head is clean.

If you don't see any improvement after cleaning three or four times, turn off the CX6300 and wait overnight. This lets any dried ink soften. Then try cleaning the print head again.

Replacing Ink Cartridges


To check ink levels, follow these steps:

1. Press the **Setup** button to enter Setup Mode.
2. Press the green button next to the LCD screen until **Ink Levels** is displayed, then press the **Color** button.

You see the amount of ink available in each cartridge: **C** (Cyan), **M** (Magenta), **Y** (Yellow), **K** (Black).

Tip:

To view all the ink levels, wait for them to start scrolling across the screen.

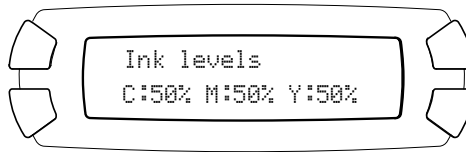

3. When done, press the **OK** button.

When your ink starts getting low, make sure you have replacement cartridges available. You cannot print if an ink cartridge is empty.

Installing New Cartridges

Make sure you have a new ink cartridge before you begin. Use these cartridges:

Color	Part number
Black	T046120
Cyan	T047220
Magenta	T047320
Yellow	T047420

Follow these steps to replace a cartridge:

Caution:

Leave the empty cartridge installed until you have obtained a replacement, or the ink remaining in the print head nozzles may dry out. To ensure good results, use genuine EPSON ink cartridges and do not refill them. Other products may cause damage to your CX6300 not covered by EPSON's warranty.


1. **If an ink cartridge is empty:**

Look at the LCD screen to see which cartridge is empty, then press the **Color** button.


If an ink cartridge is low:

Press the **Setup** button to enter Setup Mode, then press the green button next to the control panel until **Replace Ink** is displayed. Then press the **Color** button.


2. Lift up the scanner section.

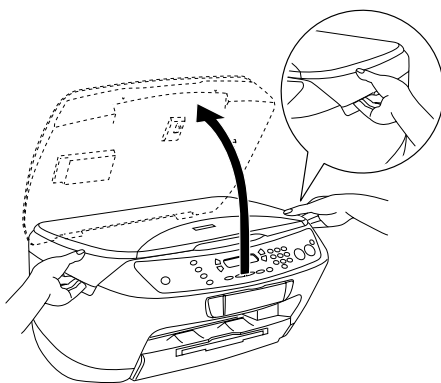

3. Wait for the ink cartridge holder to move over as shown, then open its cover.

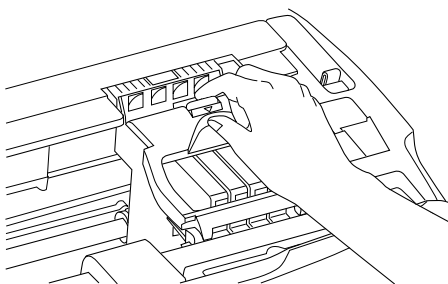

4. Identify the cartridge you need to replace. Release the tab at the back of the cartridge and lift it straight out. Dispose of it carefully.

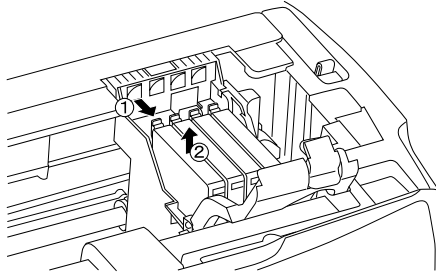


Warning:


If ink gets on your hands, wash them thoroughly with soap and water. If ink gets in your eyes, flush them thoroughly with water.

Keep cartridges out of the reach of children.


5. Before unwrapping the new cartridge, shake it gently four or five times. Then remove it from its wrapper.

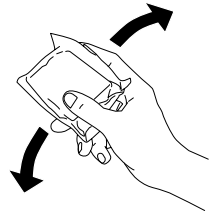

6. Insert the new cartridge into the holder. Press down firmly until it clicks into place.

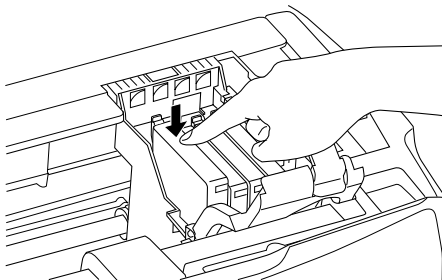

7. Close the ink cartridge cover, then lower the scanner section.

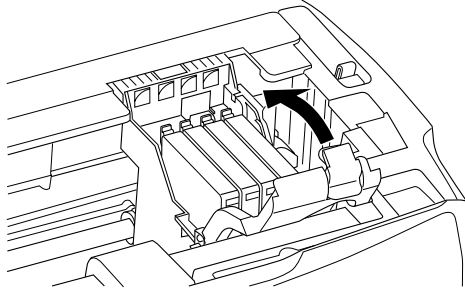

The CX6300 begins charging the ink delivery system and “Charging . . .” appears on the LCD screen. Wait for charging to finish before using your CX6300.

Solving Problems

If you have a problem with your Stylus CX6300, check the messages on the LCD screen, run a nozzle check (see page 33), or see “Problems and Solutions” below. For problems with scanning or printing from your computer, double-click the *CX6300 Reference Guide* icon on your computer desktop.

See these sections:

- “Problems and Solutions” (below)
- “Where To Get Help” on page 41

Problems and Solutions

Check the solutions below if you’re having trouble using your CX6300 in stand-alone mode.

Copying Problems

- Make sure your paper is positioned on the right side of the sheet feeder with the left edge guide lightly against its left side. Don’t load paper above the arrow on the left edge guide.
- Make sure your paper is loaded short edge first.
- Make sure your original is positioned in the top left corner of the glass, with the short edge at the left. Place it approximately 3 mm (1/8 inch) from the edge of the glass to avoid cropping.
- Make sure you select the copy layout you want. See page 14 for instructions.
- If you select **Auto Fit Page** to copy a document with white or very light edges, the original size may not be recognized correctly. Select **Actual** as the Reduce/Enlarge setting and use the Optional Zoom setting to adjust the size of your copy.

Paper Feeding Problems

- If paper doesn't feed, remove it from the sheet feeder. Fan the paper, load it against the right side, and slide the left edge guide against the paper (but not too tightly).
- If paper jams, follow these steps:
 1. Press the **On** button to turn off the CX6300.
 2. Lift up the scanner section and remove any paper that's inside, including any small pieces that may have torn off.

Caution:

Clear paper jams by pulling the paper out towards the front of the CX6300. Never pull the paper out in the direction of the sheet feeder.

3. Turn the CX6300 back on and press the **Color** button.
4. Reload the paper. Make sure the edges are not creased or folded.

Copy Quality Problems

If you have any problems with the quality of your copies, try these solutions:

- Make sure the document is placed flat against the document table glass. If only part of the image is blurred, your document may be wrinkled or warped.
- Make sure the CX6300 is not tilted or placed on an uneven surface.
- Clean the print head; see page 33 for instructions.
- If a dotted line appears in the image, clean the scanner glass with a soft, dry, lint-free cloth (paper towels are not recommended). If the glass is still not clean, use a small amount of glass cleaner on a soft cloth. Make sure you wipe off any remaining liquid. Don't spray glass cleaner directly on the glass.
- Make sure your paper isn't damp, curled, or loaded face down (the printable side should be face up). Load new paper face up. Use EPSON papers for proper saturation and absorption of genuine EPSON inks.
- Use a support sheet with special paper or load your paper one sheet at a time.
- If you notice jagged vertical lines, you may need to align the print head. See your online *CX6300 Reference Guide* for instructions.
- The ink cartridges may be old or low on ink; see page 35 for instructions on replacing an ink cartridge.

Where To Get Help

If you need help with your EPSON Stylus CX6300 or EPSON Scan software, see “EPSON Support” below.

If you need help with any other software that came with your CX6300, see “Other Software Technical Support” on page 42.

EPSON Support

EPSON provides technical assistance 24 hours a day through the electronic support services and telephone services listed in the following table:

Service	Access
World Wide Web	From the Internet, you can reach EPSON at http://www.latin.epson.com . At this site, you can download drivers and other files, look at product documentation, access troubleshooting information, and receive technical advice through e-mail.

Country	Telephone number
Argentina	(54-11) 4346-0300
Colombia	(57-1) 523-5000
Costa Rica	(506) 210-9555 (1-800) 377-6627
Chile	(56-2) 236-6717
Mexico Mexico City Other cities	(52-55) 532-84-008 (1-800) 506-07-00
Peru	(51-1) 224-2336
Venezuela	(58-212) 240-1111

Note:

If your country does not appear in the list above, contact the sales office in the nearest country. Toll or long distance charges may apply.

Before you call, please have the following information ready:

- Product name (EPSON Stylus CX6300)
- Product serial number (located on the back)
- Proof of purchase (such as a store receipt) and date of purchase
- Computer configuration
- Description of the problem

You can purchase ink cartridges, paper, manuals, and accessories from your nearest distributor or from EPSON.

Other Software Technical Support

Software	Telephone	Fax	Online and E-mail
EPSON Smart Panel™	(510) 445-8616	(510) 445-8601	www.newsoftinc.com tech@newsoftinc.com
ArcSoft PhotoImpression™	(510) 440-9901 8:30 AM–5:30 PM, Pacific Time, Monday through Friday	(510) 440-1270	www.arcsoft.com/ techmain support@arcsoft.com
ABBYY® FineReader® Sprint	(510) 226-6719	(510) 226-6069	www.abbyyusa.com support@abbyyusa.com

Notices

Important Safety Instructions

Before using your EPSON Stylus CX6300, read and follow these safety instructions:

- Be sure to follow all warnings and instructions marked on the Stylus CX6300.
- Use only the type of power source indicated on the Stylus CX6300 label.
- Connect all equipment to properly grounded power outlets. Avoid using outlets on the same circuit as air control systems or other high-load devices that regularly switch on and off.
- Place the Stylus CX6300 near a wall outlet where the plug can be easily unplugged.
- Do not let the power cord become damaged or frayed.
- If you use an extension cord with the Stylus CX6300, make sure the total ampere rating of the devices plugged into the extension cord does not exceed the cord's ampere rating. Also, make sure the total ampere rating of all devices plugged into the wall outlet does not exceed the wall outlet's ampere rating.
- Avoid electrical outlets controlled by wall switches or automatic timers.
- Keep your Stylus CX6300 and computer system away from potential sources of electromagnetic interference, such as loudspeakers or cordless telephone base units.
- Avoid locations that are subject to rapid changes in heat or humidity, shocks or vibrations, or dust.
- Leave enough room around the Stylus CX6300 for sufficient ventilation.
- Do not place the Stylus CX6300 near a radiator or heating vent or in direct sunlight.
- Place the Stylus CX6300 on a flat, stable surface that extends beyond its base in all directions. It will not operate properly if it is tilted or at an angle. Leave enough space in front of the Stylus CX6300 (at least 23 cm [9 inches]) so it doesn't tip forward and fall off of the work surface.
- Turn off and unplug the Stylus CX6300 before cleaning. Clean with a damp cloth only. Do not spill liquid on it.
- Always turn the Stylus CX6300 off using the **On** button. Don't turn off the power using a switch on a power strip or unplug the Stylus CX6300 until the **On** light is off.
- Do not block or cover openings in the Stylus CX6300 case or insert objects through the slots.
- Except as specifically explained in your documentation, do not attempt to service the Stylus CX6300 yourself.
- Unplug the Stylus CX6300 and refer servicing to qualified service personnel under the following conditions: if the power cord or plug is damaged; if liquid has entered the product; if the product has been dropped or the case damaged; if the product does not operate normally or exhibits a distinct change in performance. Adjust only those controls that are covered by the operating instructions.

- Before transporting the Stylus CX6300, make sure the print head is capped in the far right position and the ink cartridges are in place.
- This product includes a lamp component that contains mercury (Hg). Please consult your state and local regulations regarding disposal or recycling. Do not put in the trash.

Ink Cartridge Safety Instructions

- Leave the ink cartridges installed. Removing the cartridges can dehydrate the print head and may prevent the Stylus CX6300 from printing.
- Keep ink cartridges out of the reach of children and do not drink the ink.
- Be careful when you handle used ink cartridges; there may be ink remaining around the ink supply port. If ink gets on your skin, wash it off with soap and water. If it gets in your eyes, flush them immediately with water.
- Do not put your hand inside the Stylus CX6300 or touch the cartridge during printing.
- Do not move the print head by hand; otherwise you may damage the Stylus CX6300.
- Install the ink cartridge immediately after you remove it from its package. Leaving the cartridge unpacked for a long time before use may result in reduced print quality.
- Do not use an ink cartridge beyond the date printed on the cartridge package. For best results, use up the ink cartridges within six months of first installing them.
- Store ink cartridges in a cool, dark place. Store each ink cartridge so that the bottom of its package faces down.
- After bringing an ink cartridge inside from a cold storage site, allow it to warm up at room temperature for at least three hours before using it.
- Do not remove or tear the label on an ink cartridge; this can cause leakage.
- Do not dismantle the ink cartridges or try to refill them. This could result in damage to the print head.
- Do not touch the green IC chip on the side of the cartridge. This may affect normal operation and printing.
- If you remove an ink cartridge for later use, protect the ink supply area from dirt and dust and store it in the same environment as the Stylus CX6300. Note that there is a valve in the ink supply port, making covers or plugs unnecessary, but care is needed to prevent the ink from staining items that the cartridge touches. Do not touch the ink cartridge ink supply port or surrounding area.

LCD Panel Safety Instructions

- Use only a dry soft cloth to clean the LCD display. Don't use liquid or chemical cleaners.
- If the LCD display is damaged, contact your dealer.
- If LCD solution gets on your skin, wash it off thoroughly with soap and water. If it gets in your eyes, flush them immediately with water.

FCC Compliance Statement

For United States Users

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio or television reception. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference to radio and television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING

The connection of a non-shielded equipment interface cable to this equipment will invalidate the FCC Certification of this device and may cause interference levels which exceed the limits established by the FCC for this equipment. It is the responsibility of the user to obtain and use a shielded equipment interface cable with this device. If this equipment has more than one interface connector, do not leave cables connected to unused interfaces. Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

Declaration of Conformity

According to 47CFR, Part 2 and 15 for: Class B Personal Computers and Peripherals; and/or CPU Boards and Power Supplies used with Class B Personal Computers:

We: EPSON AMERICA, INC.
Located at: MS 3-13
3840 Kilroy Airport Way
Long Beach, CA 90806
Telephone: (562) 290-5254

Declare under sole responsibility that the product identified herein, complies with 47CFR Part 2 and 15 of the FCC rules as a Class B digital device. Each product marketed is identical to the representative unit tested and found to be compliant with the standards. Records maintained continue to reflect the equipment being produced can be expected to be within the variation accepted, due to quantity production and testing on a statistical basis as required by 47CFR §2.909. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Trade Name: EPSON
Type of Product: Multifunction printer
Model: C161A

ENERGY STAR Compliance

As an ENERGY STAR Partner, EPSON has determined that this product meets the ENERGY STAR guidelines for energy efficiency. The EPA ENERGY STAR office equipment program is a voluntary partnership with the computer and office equipment industry to promote the introduction of energy-efficient personal computers, monitors, printers, fax machines, and copiers in an effort to reduce air pollution caused by power generation.



Limited Warranty

1. Limited warranty for EPSON products

EPSON products are covered by warranty against defects in workmanship and materials when operated under normal use and handling conditions, as indicated in the product documentation, for the period specified in section “Limited Warranty Coverage”. Coverage begins as of the date of delivery to the purchaser by EPSON or by an authorized EPSON dealer (see “EPSON subsidiaries and offices in Latin America”), in the country of purchase.

EPSON also guarantees that the consumables (ink cartridges, toner, batteries) included with the product, will perform according to the usage specifications as long as they are used prior to the expiration of their warranty period.

2. Scope of the warranty

Should EPSON receive notice of a defect during the warranty period, it may, at its discretion, repair or replace the defective product at no cost to the purchaser. In the event of a replacement, the replaced equipment will become property of EPSON. The replaced item may be new or previously repaired to the EPSON standard of quality, and will assume the remaining warranty period of the product that was originally purchased.

This warranty does not include any compensation or damages whatsoever, resulting from the operating failures of the EPSON product. In any event, EPSON’s maximum liability toward the purchaser will be limited to the purchase price paid to EPSON or to the authorized dealer.

EPSON’s warranty does not cover any software not manufactured by EPSON, even when delivered with an EPSON product. The software may have a warranty provided by the manufacturer, as indicated in the documentation attached thereto.

3. Limitations and exclusions

The warranty will be invalid in the following cases:

- 3.1 When the product’s serial number has been removed or altered.
- 3.2 When the product has been misused, has undergone unauthorized modifications, has been used or stored in ways that are not in compliance with the environmental specifications of the product.
- 3.3 When the damage resulted from the use of refilled supplies or consumables, or when damages are the result of use of media that does not meet the product’s specifications.
- 3.4 When damages resulted from the inappropriate transport of the equipment (packaging, installation, maintenance, transportation).
- 3.5 When damages were caused by natural or intentional disasters (fire, floods, lightning, earthquakes, etc.), power surges, or interaction with other brand products.
- 3.6 When the product has been totally or partially disassembled, or has been repaired other than by an EPSON Authorized Service Center.
- 3.7 When substances have been spilled on the product.

3.8 When the external plastic case has been scratched or abused.

3.9 When damages resulted from inappropriate tests, installation, maintenance or adjustments.

The warranty does not extend to accessories (lids, covers, trays) or replenishing supplies and consumables (ink cartridges, toner, ink ribbons, batteries, photosensitive units, knobs, print heads, lamps), which, due to their nature, must be regularly purchased through authorized dealers.

4. How to obtain warranty service

Please refer to the user documentation to ensure that the product settings have been properly set and to perform the diagnostic tests indicated therein. Furthermore, in order for the unit to operate optimally, always use original EPSON supplies and consumables.

To obtain warranty service, the purchaser may take the product to any Authorized EPSON Service Center, along with proof of purchase, or call any of the EPSON Technical Assistance Centers (see country list starting on page 49).

Upon calling an Authorized EPSON Service Center, the purchaser will be asked to provide the product model and serial numbers, and may be asked to provide information on the location and the date of purchase (the warranty is only valid in the country of purchase).

If the product warranty includes on-site service assistance, it will be provided on the next working day in the cities where this service is offered by EPSON.

If there are no Authorized Service Centers in your area, call the Technical Assistance Center for service referral.

4.1 Courier service (available in some countries where EPSON has subsidiaries).

If the purchaser prefers to use a courier to send the equipment for warranty service, he should call the Technical Assistance Centers of the subsidiary to receive instructions on how to send the equipment and to obtain a service order code number. The client will be responsible for the transportation, insurance and packaging costs.

This service is only offered where the product was purchased.

5. Responsibilities of purchaser

The purchaser is responsible for the safety of all confidential and proprietary information stored on the product, as well as for recovery backup files in case of damage. Any activity related with the re-installation or resetting of the software that was delivered with the equipment, will be billed to the purchaser at the rates in effect at the EPSON Service Center. This also applies if the failure was the result of a defect in the purchaser's proprietary software or of a computer "virus".

In order to obtain on-site service, the latter will be required to provide: access to the product; an appropriate working area; access to electrical facilities; access to the resources that may be necessary for the installation, repair or maintenance of the unit; a safety environment for EPSON staff and their work tools.

6. Limited warranty coverage

Model	Coverage	Conditions
EPSON Stylus CX multifunction printer	One year	Service center

Technical Support Service

EPSON offers technical assistance through electronic and telephone services. Before calling EPSON, refer to the documentation included with your product. If you do not find the solution to your problem, visit EPSON's website at: <http://www.latin.epson.com> or call the local EPSON office or an authorized dealer.

Service centers

Country	Telephone number	Website
Argentina	(54-11) 4346-0300	www.epson.com.ar
Chile	(56-2) 230-9500	www.epson.cl
Colombia	(57-1) 523-5000	www.epson.com.co
Costa Rica	(50-6) 210-9555	www.epsoncr.com
Mexico	(52-55) 5328-4008	www.epson.com.mx
Peru	(51-1) 224-2336	www.epson.com
Venezuela	(58 212) 240-1111	www.epson.com.ve

If your country does not appear on the preceding list, please contact the dealer where you purchased the product.

You may receive help or consult information online for all EPSON products. Register your EPSON equipment on our website, at <http://www.latin.epson.com/promos/registration.html>

Extended warranty support and service

In some countries, EPSON offers warranty extension services. You may purchase this service by calling the Technical Service Center.

EPSON subsidiaries and offices in Latin America

Epson Argentina S.A.

Avenida Belgrano 964/970
(1092), Buenos Aires
Tel: (54 11) 4346-0300
Fax: (54 11) 4346-0333

Epson do Brasil, Ltda.

Av. Tucunará, 720
Tamboré Barueri,
São Paulo, SP 06460-020
Tel: (55 11) 4196-6350
Fax: (55 11) 4195-5624

Epson Chile, S.A.

La Concepción 322
Providencia, Santiago
Tel: (56 2) 230-9500
Fax: (56 2) 236-6524

Epson Colombia, LTDA.

Diagonal 109, No. 15-49
Bogotá, Colombia
Tel: (57 1) 523-5000
Fax: (57 1) 523-4180

Epson Costa Rica, S.A

Embajada Americana,
200 Sur y 300 Oeste
San José, Costa Rica
Tel: (50 6) 210-9555
Fax: (50 6) 296-6046

Epson México, S.A. de C.V.

Av. Sonora #150
México, 06100, DF
Tel: (52 55) 5211-1736
Fax: (52 55) 5553-1177

Epson Perú, S.A.

Av. Del Parque Sur #400
San Isidro, Lima, Perú
Tel: (51 1) 224-2336
Fax: (51 1) 476-4049

Epson Venezuela, S.A.

Calle 4 con Calle 11-1
La Urbina Sur
Caracas, Venezuela
Tel: (58 212) 240-1111
Fax: (58 212) 240-1025