
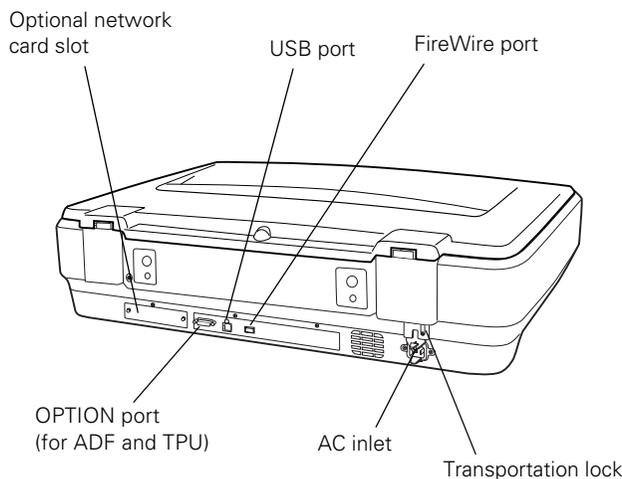
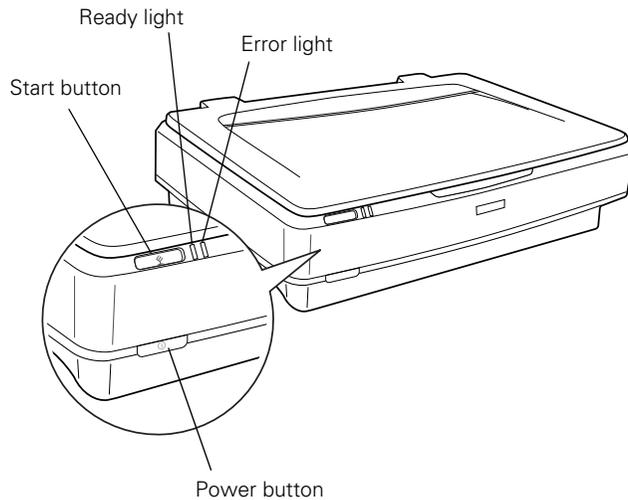


Scanner Parts

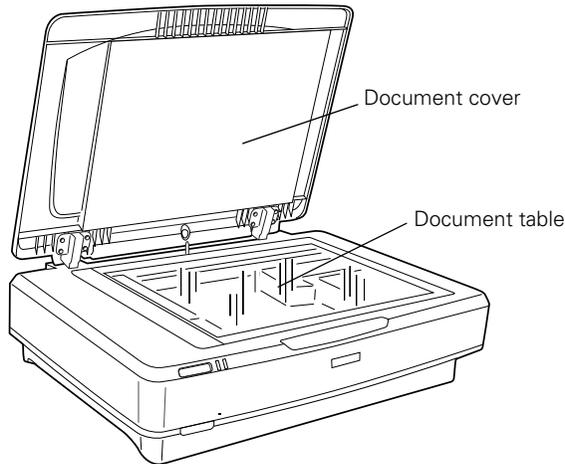

Software and Accessories

The scanner is sold in two versions: GA (Graphic Arts) and Photo. The Photo version includes the transparency unit (TPU) and LaserSoft Imaging™ SilverFast®.

Included Software

The following software is included with the scanner:

- EPSON Scan
- ABBYY® FineReader® Sprint
- Adobe® Photoshop® Elements 2.0
- Monaco Systems® MonacoEZColor®
- LaserSoft Imaging SilverFast (Photo version of scanner only)

Optional Accessories

These optional accessories are available:

- Transparency unit (B12B813362)
- Automatic document feeder (B813212)
- Network Image Express interface card (B12B808393)

You can purchase supplies and accessories from the Epson Store™ by calling (800) 873-7766 or online at www.epsonstore.com (U.S. sales only). In Canada, please call (800) 463-7766 for dealer referral.

Specifications

General

Scanner type	Flatbed, color
Photoelectric device	Color CCD line sensor
Effective pixels	29280 × 41280 pixels (at 2400 dpi)
Color depth	48-bit internal/48-bit external
Grayscale depth	16-bit internal/16-bit external
Maximum document size	12.2 × 17.2 inches (310 × 437 mm)
Resolution	2400 dpi (optical)
Maximum hardware resolution	2400 dpi (main scan); 4800 dpi with Micro Step Drive™ (sub scan)
Output resolution	50 to 12800 dpi

Maximum interpolated resolution	12800 dpi
Speed*	Color: 8.0 ms/line Grayscale: 2.7 ms/line Line Art: 2.7 ms/line * 1200 dpi, reflective documents
Color separation	RGB color filters
Reading sequence	Monochrome: One-pass scanning Color byte sequence: One-pass scanning (R, G, B) Color line sequence: One-pass scanning (R, G, B)
Zoom	50 to 200% in 1% increments
Command level	ESC/I-B8 FS
Pixel depth	16 bits per pixel input, 1 to 16 bits per pixel output
Brightness	7 levels
Line art settings	Fixed threshold TET (Text Enhancement Technology, enable/disable selectable)
Digital halftoning	AAS (Auto Area Segmentation, enable/disable selectable) 3 error diffusion modes (A, B, and C) 4 dither patterns (A, B, C, and D) for bi-level and quad-level data (2 downloadable dither patterns)
Gamma correction	2 types for CRT display 3 types for printer 1 type user-defined
Color correction	1 type for CRT display 3 types for printer (available in color byte sequence mode and color line sequence mode) 1 type user-defined
Interfaces	USB 2.0 (Type B connector) IEEE 1394 (FireWire®) 10Base-T/100Base-TX, optional
Light source	Xenon gas cold cathode fluorescent lamp
Reliability	100,000 cycles of carriage movement (MCBF)
Dimensions	Width: 25.8 inches (656 mm) Depth: 18.0 inches (458 mm) Height: 6.2 inches (158 mm)
Weight	Approximately 31.9 lb (14.5 kg)

Electrical

Input voltage	90 to 132 VAC
Rated frequency	50 to 60 Hz
Rated current	1.2 A
Power consumption	Operating: approximately 45 W (55 W with ADF or TPU) Standby: approximately 6 W (without ADF or TPU)

Environmental

Temperature	Operating: 41 to 95 °F (5 to 35 °C) Storage: -13 to 140 °F (-25 to 60 °C)
Humidity	Operating: 10 to 80% Storage: 10 to 85% No condensation
Operating conditions	Ordinary office or home conditions. Avoid dust, direct sunlight, and strong lighting.

Safety Approvals

Safety	UL 60950 (2000) CSA C22.2 No. 60950 (2000)
EMC	FCC part 15 subpart B class B CSA C108.8 class B

USB Interface

Interface type	Universal Serial Bus Specification, Rev. 2.0
Electrical standard	Full speed mode (12Mb) and High speed mode (480 Mbps) of Universal Serial Bus Specification Revision 2.0
Connector type	One receptacle (Type B)

IEEE 1394 (FireWire) Interface

Interface type	IEEE 1394-1995 compatible
Data transfer	Half-duplex Data/Strobe differential serial
Synchronization	Clock synchronization with DS-Link
Encoding/decoding	DS-Link
Logic level	3.3 V
Connectors	IEEE 1394-1995 compatible
Power class	Power class code 100 No power supply from external sources Repeat function with bus power

Transparency Unit (B12B813362)

Film types	35 mm strips or slides Medium format (120/220) 6 × 18 cm 4 × 5 inch film transparencies up to 12.2 × 16.5 inch
Maximum scan area	12.2 × 16.5 inches (309 × 420 mm)
Dimensions	Width: 25.8 inches (656 mm) Depth: 18.1 inches (460 mm) Height: 1.6 inches (40 mm)
Weight:	11 lbs (6 kg)
Electrical	24 VDC, 1.3 A 5 VDC, 0.3 A

The TPU comes with two film holders of each type. Each film holder can hold the following number of images:

Film type	Quantity per holder
35 mm slides	15
35 mm strips	24
Medium format (6 × 18 cm)	3
4 × 5 inch film	4

Automatic Document Feeder (B813212)

Paper input/output	Load face-up; eject face-down
Paper quantity	100 pages (55 g/m ² paper, max. total thickness under 0.48 inches [12 mm]) 100,000 sheets (load/eject MCBF)
Speed	10 ppm (monochrome, draft mode at 200 dpi)
Dimensions	Width: 23.8 inches (606 mm) Depth: 19.2 inches (488 mm) Height: 5.3 inches (134 mm)
Weight	Approximately 28.7 lb (13 kg)
Electrical	24 VDC, 1.5 A 5 VDC, 0.4 A

System Requirements

This section lists minimum system requirements. For optimum performance, a faster processor and more memory are recommended. When scanning high resolution images, you need more than the minimum available hard disk space.

Note: Color and tone reproduction are subject to the display capability of your computer system, including the video card, monitor, and software. See the documentation for these products for details.

Windows

- Microsoft Windows®-compatible Pentium-II processor, 266 MHz or faster
- Preinstalled Windows 98SE, Me, 2000, or XP
- USB (1.1 or 2.0) or IEEE 1394 (FireWire) port. To use the scanner's optional network card, your computer must be connected to an existing network using TCP/IP.

USB 1.1 and 2.0 require a preinstalled Windows operating system; USB 2.0 works with Windows XP and 2000 only

IEEE 1394 requires Windows Me, 2000, or XP; card must be IEEE1394a-2000 compatible and OHCI compliant
- 128MB RAM (512MB RAM recommended)
- 300MB available hard disk space
- CD-ROM drive
- VGA color monitor with 800 × 600 resolution (1024 × 768 or higher recommended)
- 16-bit, 65K-color display adapter card (24-bit display adapter card with millions of colors recommended)

Macintosh

- Macintosh® PowerPC G3; Power Mac® G5 with 500 MHz or faster processor recommended
- OS 9.1 to 9.2 or OS X 10.2.x to 10.3.x

Note: Check the Apple web site for any updates to your operating system. Fast User Switching is not supported for Mac OS X 10.3 users.
- USB (1.1 or 2.0) or IEEE 1394 (FireWire) port. To use the scanner's optional network card, your computer must be connected to an existing network using TCP/IP.


USB 2.0 requires Mac OS X 10.2.7 or later

IEEE 1394 requires IEEE1394a-2000 compatible and OHCI-compliant interface card; make sure FireWire 2.1 or later is installed on your computer
- 128MB RAM (512MB RAM recommended)
- 300MB available hard disk space
- CD-ROM drive
- VGA color monitor with 800 × 600 resolution (1024 × 768 or higher recommended)
- 16-bit 65K-color display adapter card (24-bit display adapter card with millions of colors recommended)

Transporting the Scanner and TPU

Lock the scanner's transportation lock before transporting it or storing it for an extended time.

1. Turn on the scanner and wait about 30 seconds for it to initialize. When the Ready light stops blinking and remains on, turn the scanner off.
2. Unplug the AC power cord, and then push down the transportation lock on the back of the scanner to the Lock position.

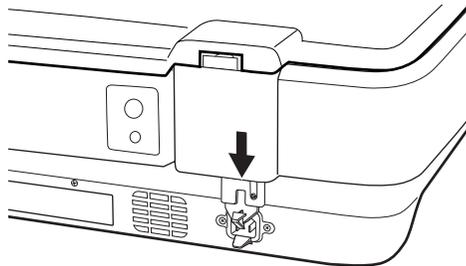


3. Place the scanner in its original box, or use equivalent packing materials.

Transporting the TPU

Before shipping or storing the transparency unit (TPU), follow these steps:

1. Use a coin to turn the transportation lock to the Lock position.

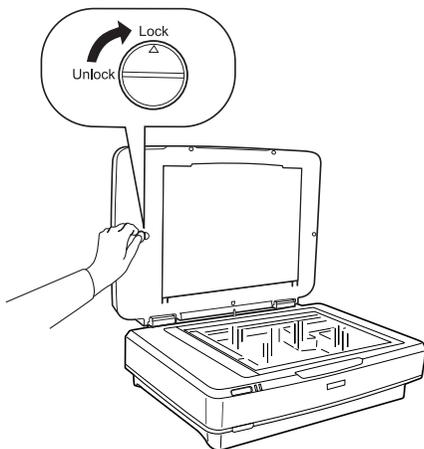

2. Disconnect the TPU cable from the OPTION port on the back of the scanner.
3. Remove the TPU from the scanner and place it in its original box, or use equivalent packing materials.

Cleaning the Scanner

Follow these steps to clean the scanner.

1. Press the Ⓚ power button to turn the scanner off, and unplug the power cord.

Caution: Always unplug the scanner before cleaning.

2. Use a soft, damp cloth and mild detergent to clean the outer case.

Caution: Be careful not to spill liquid or let water get into the scanner mechanism or electronic components. This could permanently damage them.

Never use alcohol, thinner, or corrosive solvent to clean the scanner. These chemicals can damage the scanner components as well as the case.

3. Clean dust and smudges from the document table glass with a soft, dry cloth (a microfiber glass cleaning cloth is recommended). You can also use compressed air spray cleaner.

To remove grease, use pretreated lens or scanner wipes, or a small amount of glass cleaner on a soft cloth. Dry the document table glass afterwards.


Caution: Never spray glass cleaner directly on the document table. Always spray it on a cloth first and then wipe the glass.

Never use a harsh or abrasive brush or cleaning product to clean the document table. A damaged glass surface can decrease the scanning quality.

Avoid leaving photos on the scanner glass for an extended period of time, or residue from the photos may adhere to the glass.

Scanner Lights

You can diagnose some problems by checking the scanner's lights.

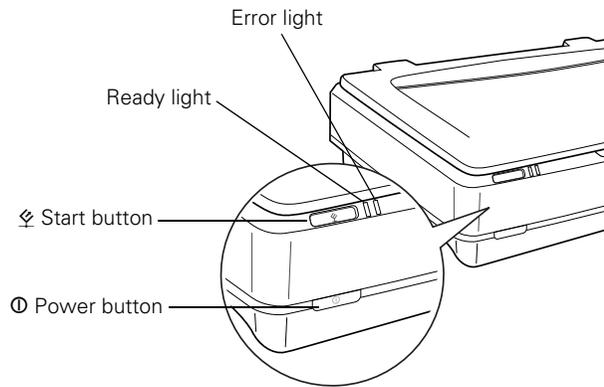

Light	Scanner Status
Ready light is on or flashing.	The green Ready light is on when the scanner is ready to scan. It flashes when scanning is in progress.
Error and Ready lights are both off.	Make sure your scanner is connected to a working outlet, then press the Power button.
Error and Ready lights are both on.	The scanner has received an incorrect command from your scanner software. Try scanning again. If the problem persists, try reinstalling your scanner software.
Error and Ready lights are both flashing.	If you're using the automatic document feeder, there may be a paper jam. Clear any jammed paper, then close any open covers. If this doesn't solve the issue, there may be a problem with the fluorescent lamp, or another problem. Contact Epson as described in the <i>User's Guide</i> .

Scanning with EPSON Scan

The EPSON Scan software offers three scanning modes:


- ❑ **Home Mode** makes scanning quick and easy, and provides excellent results for all types of documents. Use when advanced control over image quality settings is not required.
- ❑ **Office Mode** is ideal for scanning business documents containing text or graphics, with or without color. Choose this mode to scan multi-page documents on the optional automatic document feeder, or when scanning for OCR (optical character recognition) to create editable text.
- ❑ **Professional Mode** gives you the greatest control over image color and quality. Lets you manually adjust any setting, including the histogram setting, tone, color depth, balance, saturation, brightness, and contrast.

You can open EPSON Scan from any TWAIN-compliant imaging application, such as Photoshop Elements (included with the scanner); this lets you scan images into the application. Or you can use EPSON Scan in "standalone" mode to scan directly to a file on your computer's hard drive.

Placing the Original Document

Follow these steps to position a photo or single-page document for scanning. (If you want to scan several photos at a time, a multi-page document, or film or slides, see the *User's Guide*.)

1. Raise the scanner cover and place the document face down on the document table. Place it in the upper-left corner, aligning it with the edges of the glass.

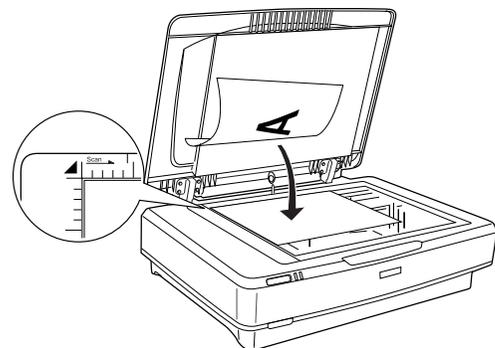

2. Close the cover, being careful not to move the document.

Tip: If the edges of the document don't scan, move it in about 1/16 of an inch (1.5 mm) from the edges of the glass.

You can raise or remove the document cover if you need to scan a thick item—such as a photo in an album—that doesn't fit under the cover. Simply lift the back of the cover straight up. When you reattach the cover, line up the hinge pins with the positioning holes and lower the cover into place.


Scanning an Image

First, place your document on the scanner as described on page 5. Then follow these steps to start EPSON Scan and scan an image into an application:

1. Turn on the scanner, and wait about 30 seconds for it to initialize. The green Ready light stops flashing and stays on.
2. Open your imaging application, then choose the Import (or Acquire) option in the application and select Epson Expression 10000XL.


Note: If you are using Windows XP and choose WIA-EPSON Expression 10000XL, certain features won't be available.

The EPSON Scan dialog box opens.

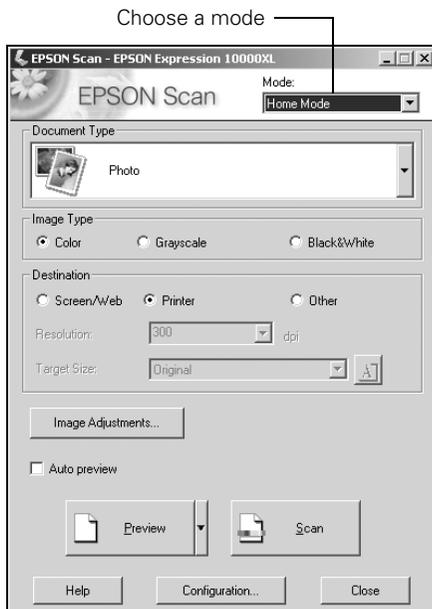

3. Choose a mode from the Mode list at the top of the EPSON Scan screen. (See page 5 for a description of the modes.)
4. Adjust any settings in EPSON Scan, as needed. For example, if you're using Home Mode, select the Document Type, Image Type, and Destination settings that are appropriate for your image and how you want to use it.

5. Click the Preview button to see a preview of your scan.

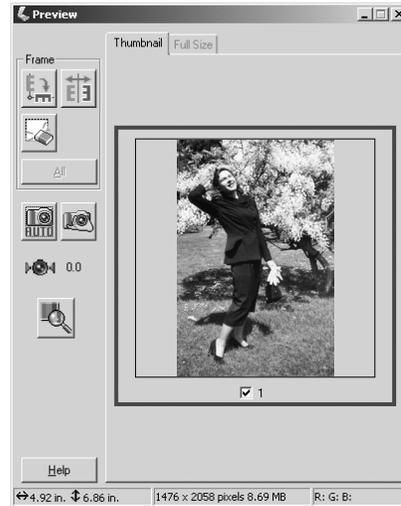

Note: The Thumbnail preview screen is shown above. Depending on your selected mode, you may see the Normal preview screen instead. To switch between preview screens, click the arrow next to the Preview button and choose Thumbnail or Normal.

In Home Mode, you can click the **Auto preview** checkbox to make the preview screen open automatically whenever you launch EPSON Scan.

6. Click and drag within the preview image to select the area you want to scan.
- Note:** Image quality adjustments are automatically applied to the selected area, unless you've turned off the **Continuous auto exposure** setting (click the **Configuration** button, then click the **Color** tab to access this setting). For best results, select only the part of the image you want to scan.
7. If you're previewing your image as a thumbnail (as shown above), click the button to rotate the image, if needed. Click the button to mirror the image.
8. Click **Scan**.
9. When scanning completes, click **Close** to exit EPSON Scan and view the scanned image in your imaging application.

Scanning to a File

You can use EPSON Scan in “standalone” mode to scan directly to a file on your computer’s hard drive. First, place your document or photo on the scanner. Then follow these steps:


1. Start EPSON Scan:
 - Windows: Click **Start**, open the **Programs** folder, open the **EPSON Scan** folder, and then click **EPSON Scan**.
 - Macintosh OS X: Open the **Applications** folder, and then click **EPSON Scan**.
 - Macintosh OS 9: Open the **Apple menu**, then select **EPSON Scan**.

Note: If you have multiple scanners installed, you are prompted to choose your scanner. Click **EPSON Expression 10000XL** and click **OK**.

2. Choose a mode from the Mode list at the top of the EPSON Scan screen.

Mode:

Home Mode
Home Mode
Office Mode
Professional Mode
3. Make any appropriate settings for the document you are scanning.
4. Click **Scan**. You see this screen:

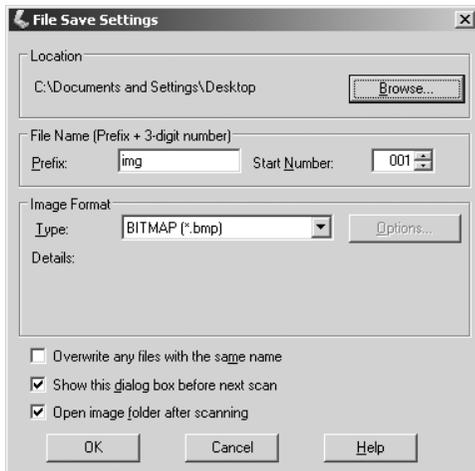


5. Type a name for your file in the Prefix field, then choose an image type and click **OK**.

Note: If you’re saving the file in JPEG format, be sure to select an appropriate compression ratio for your image. For details on file format settings, click the **Help** button.

Scanning With the Start Button

You can press the  Start button to open EPSON Scan—or if you’re running Windows, you can set the button to open another application of your choice.

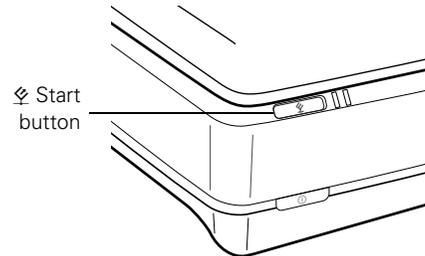

Note: You cannot assign a different application to the  Start button on Macintosh systems.

Assigning an Application to the Start Button in Windows

Follow the steps in the section for your operating system to assign an application to the  Start button.

Note: If you set the  Start button to open Photoshop Elements, EPSON Scan launches automatically after Photoshop opens. If you choose another program, wait for it to open, then start EPSON Scan manually.

You can assign multiple applications to the  Start button, but you’ll have to decide which program to launch after pressing it. To avoid doing this, do not assign more than one application to the  Start button.


Windows XP

Follow these steps to set up the  Start button in Windows XP:

1. Click the **Windows Start button**, then click  **My Computer**.
2. Right-click the **Expression 10000XL icon**, and then click **Properties**.

Epson Expression 10000XL

3. Click the Events tab. You see this window.

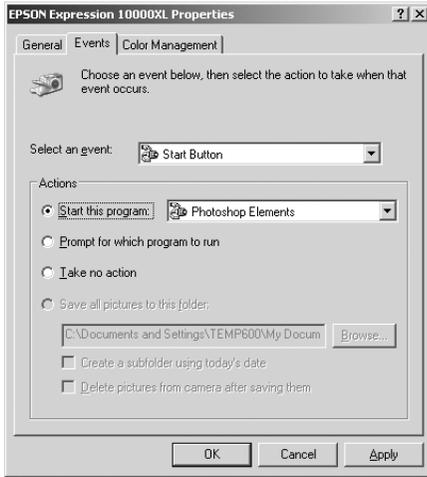

4. Make sure the **Start Button** is selected in the Select an event box.
5. Click **Start this program**, select a program from the list, and then click **OK**.

Note: If the program you want to use is not listed, open it and then follow these steps again. If it is still not listed, it cannot be opened using the Start button.

You can disable the Start button by clicking the **Take no action** checkbox on the Events tab.


Windows Me, Windows 2000, and Windows 98

For all Windows users except XP, follow these steps to set up the Start button:

1. Double-click the **Scanners and Cameras** icon in the Windows Control Panel.
2. Select **Epson Expression 10000XL** and click the **Properties** button.



3. Click the Events tab. You see this window.

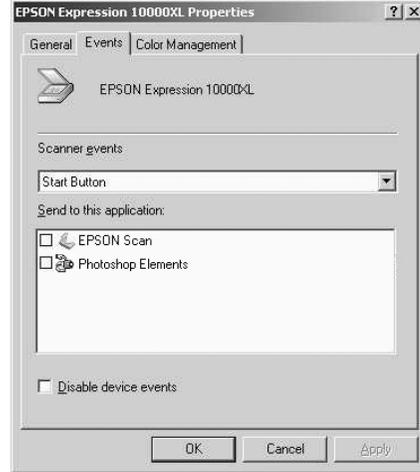

4. Make sure **Start Button** appears in the Scanner events box, then deselect any applications you don't want to use in the **Send to this application** list. Leave checked only the application(s) you want to assign to the Start button.
5. Click **Apply**, then click **OK** to close the Epson Expression 10000XL Properties window, then click **OK** again to close the Scanners and Cameras Properties window.

Note: You can disable the Start button by clicking the **Disable device events** checkbox on the Events tab.

Related Documentation

CPD-18060	Epson Expression 10000XL <i>Start Here</i> sheet
CPD-18061	Epson Expression 10000XL <i>User's Guide</i>
CPD-18062	<i>Scanner Software</i> CD-ROM (includes <i>HTML Reference Guide</i>)