

EX 21 / EX30 / EX50 / EX70
PowerLite S6 / 78 / W6 / W7

<u>DESCRIPTION</u>	<u>PART NUMBER</u>
AC Power Cable	1467649
PL W7: AC Power Cable	2126917
Lamp (V13H010L41)	1463504
PL W7 Lamp (V13H010L54)	1519600
Computer VGA Cable	2110978
Component to VGA video adapter (only for EX30/EX50)	2118180
Remote Control (PL78/S6/EX21/EX30/EX50)	1491605
Remote Control (PL W6/EX70)	1491616
Remote Control (W7)	1515068
Soft (black) Carrying Case with shoulder strap	1436644
EX21 (no carrying case)	--
PL W7	1516070
USB Cable 2.0	2109210

Order user replaceable parts from an [Epson authorized parts distributor](http://www.epson.com/cgi-bin/Store/AboutEpsonConnection.jsp).
<http://www.epson.com/cgi-bin/Store/AboutEpsonConnection.jsp>

---- or ----

Locate an Epson Authorized Service Center to order user replaceable parts
by using the “Help me find...” tool in the right column of the
[Epson Support](http://www.epson.com/cgi-bin/Store/support/SupportIndex.jsp) home page.
<http://www.epson.com/cgi-bin/Store/support/SupportIndex.jsp>