

**EX31 / EX51 / EX71**  
**PowerLite S7**

<b><u>DESCRIPTION</u></b>	<b><u>PART NUMBER</u></b>
<b>AC Power Cable (3-prong) 6 ft.</b>	<b>2126917 (70.5 inches)</b>
<b>Lamp (V13H010L54)</b>	<b>1519600</b>
<b>Computer VGA Cable (6 ft.)</b>	<b>2110978</b>
<b>Remote Control</b>	<b>1515068</b>
<b>USB cable 2.0 (EX31/EX51/EX71)</b>	<b>2109210 (6')</b>
<b>Soft Carrying Case</b>	<b>1516070</b>

Order user replaceable parts from an [Epson authorized parts distributor](#).

<http://www.epson.com/cgi-bin/Store/AboutEpsonConnection.jsp>

---- or ----

Locate an Epson Authorized Service Center to order user replaceable parts  
by using the “Help me find...” tool in the right column of the

[Epson Support](#) home page.

<http://www.epson.com/cgi-bin/Store/support/SupportIndex.jsp>