

Epson® SureColor® F3070

Handling and Unpacking Instructions


- * **Forklift and Hand Jack Handling Information**
- * **No Stacking**

Main unit

A mark indicating
Center of Gravity

Gross Weight of Main unit 926–1058 lb


FRONT_REAR

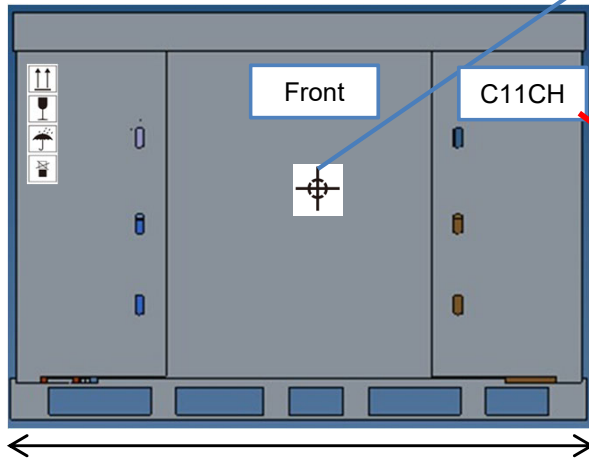

C-code is at
front right
side only.



Lifting around the center of
gravity mark position. Fully
insert the forks.

Maximum
capacity: 1.65 t

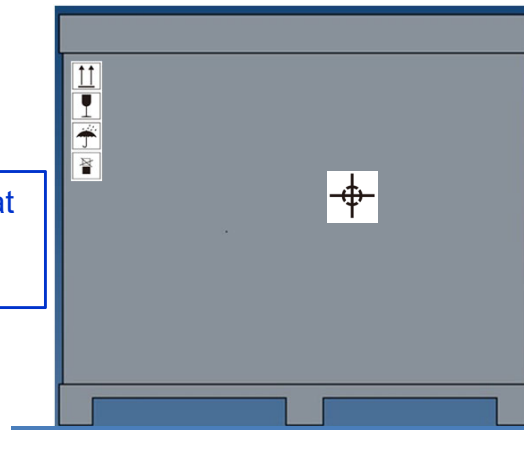

Length of fork: 6.6 ft or more

SIDE

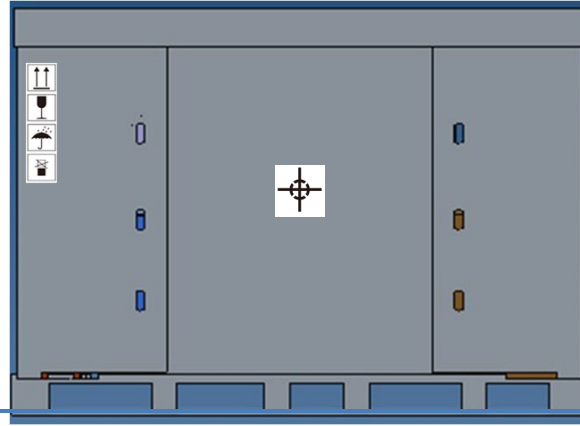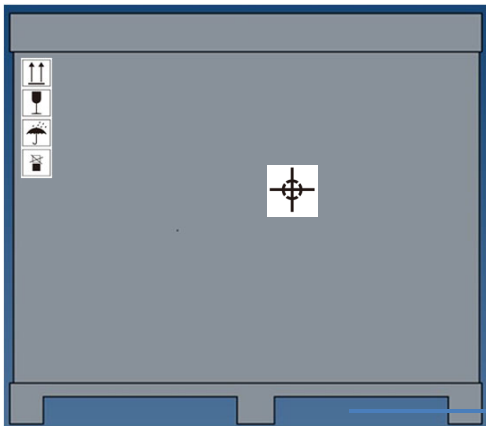


Packing size L89 × D72 × H63 in

Length of fork: 6.6 ft or more

SC-F3070 (No Stacking)

Note: No Stacking

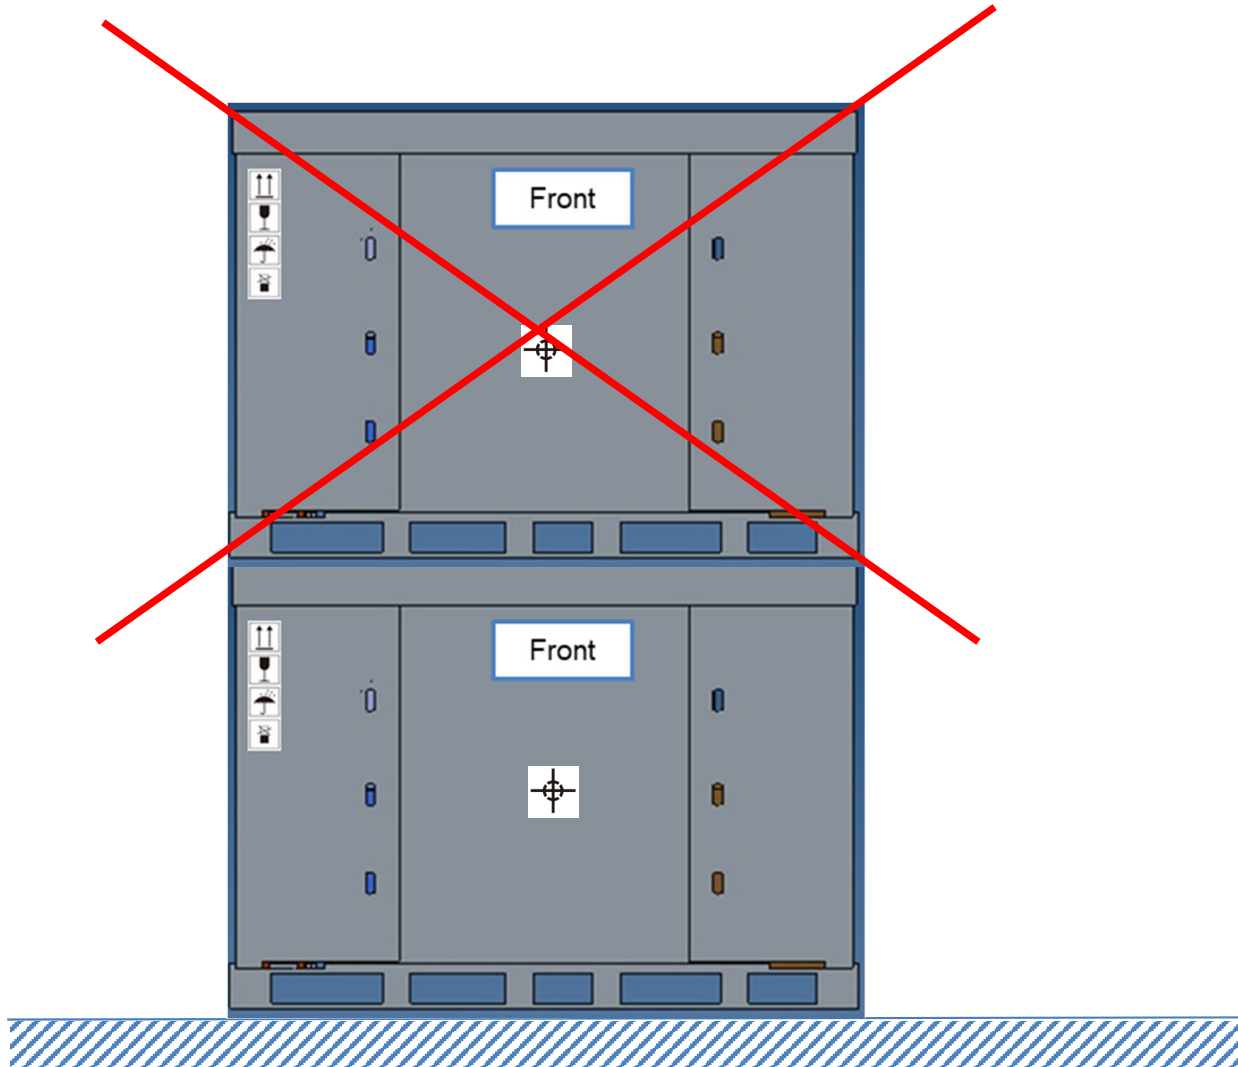

1.3 Included in the Box

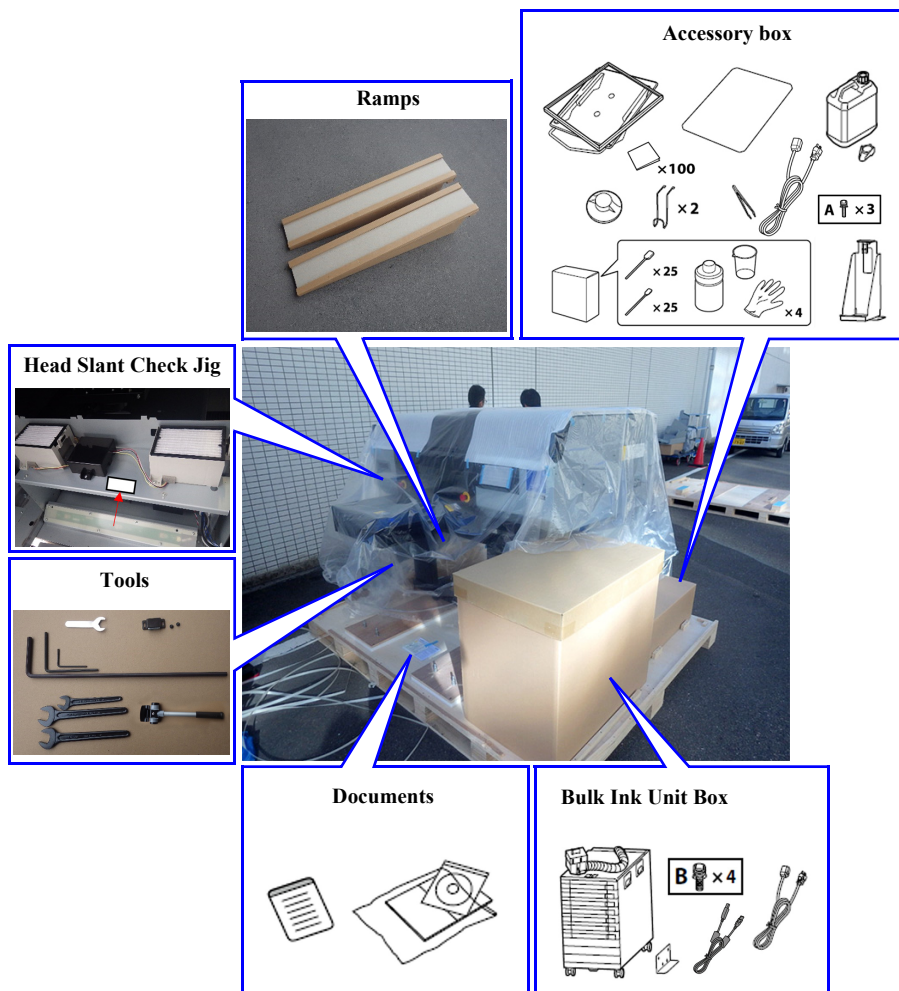


Figure 1-18. Included in the box

□ List of Items Included in the Package

Category	Item	Qty.	Explanation
Accessory box	Platen-M set	1	Standard included item
	Cloth platen-M	1	Standard included item
	Grip Pad Tool	1	Standard included item
	Platen frame hook	2	Standard included item
	Tweezers	1	Standard included item
	Maintenance kit	1	Standard included item
	Waste Ink Bottle Stand	1	Standard included item
	Waste Ink Bottle	1	Standard included item
	Hexagon screw	3	Standard included item
	Clean-room wiper	100	Standard included item
	AC cable	1	Standard included item
	Bulk Ink Unit Box	Bulk Ink Unit	1
M6 hexagon screw		4	Screws to secure the Anti-tip plate and the wire.
Anti-tip plate		1	Prevents the Bulk Ink Unit from tipping over.
USB cable		1	A cable for communication between the printer and the Bulk Ink Unit.
AC cable		1	For Bulk Ink Unit
Documents	Document pack	1	CD and documents
	Caution label	1	Multilingual ink caution label

Category	Item	Qty.	Explanation
Tools	Wrench 17"	1	To adjust the height of the adjusters.
	Wrench 19"	2	For the stand fixing bolt.
	Hexagon wrench M4	1	Mainly used for securing the Waste Ink Bottle Stand and for removing the Right Window Cover.
	Hexagon wrench M6	1	For the Anti-tip plate.
	Hexagon wrench M10	1	For the CR fixing jig.
	Hand jack	1	For removing the wood chocks.
Tools	Waste ink tank cover magnet	1	A magnet to secure the Waste ink tank cover.
	Waste ink tank cover magnet fixing screws	2	Screws to secure the Waste ink tank cover magnet.
Head Slant Check Jig	Head Slant Check Jig	1	Gauge for checking the printhead for slant.
Ramps	Ramps	2	Use to bring the printer down from the pallet.
Ink	Ink pack boxes (7 total included with printer)	1 1 1 1 2 1	Cyan Magenta Yellow Black White Maintenance Liquid

1.5 Unpacking and Install



IMPORTANT: Carrier must take photos of all four sides and top of the box as it is being offloaded from the truck. If you notice damage to the box or pallet, please take close-up photos. If photos are not provided, Carrier may be liable for damages.

Please email photos to EpsonSiteSurvey@ea.epson.com with the subject line being the printer serial number. See page 15 for serial number location and additional instructions.

1. Remove the packing of carton box using the cutter.



Figure 1-20. Removing the packing material

2. Release the two PP bands.

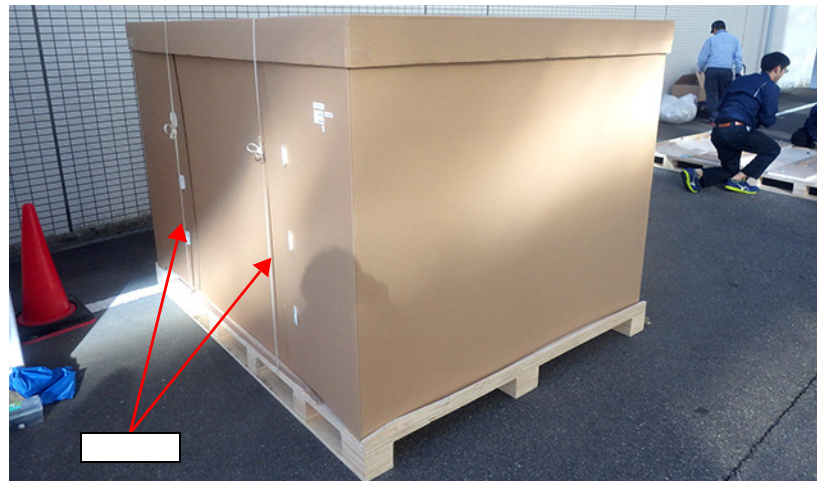


Figure 1-21. Releasing the PP bands

3. Remove the 12 joints.



[How to remove the joints]

Insert your finger into the hole and remove the joint while lifting and pulling it.



Note: Requires 4 delivery people and 1 forklift operator (total of 5).

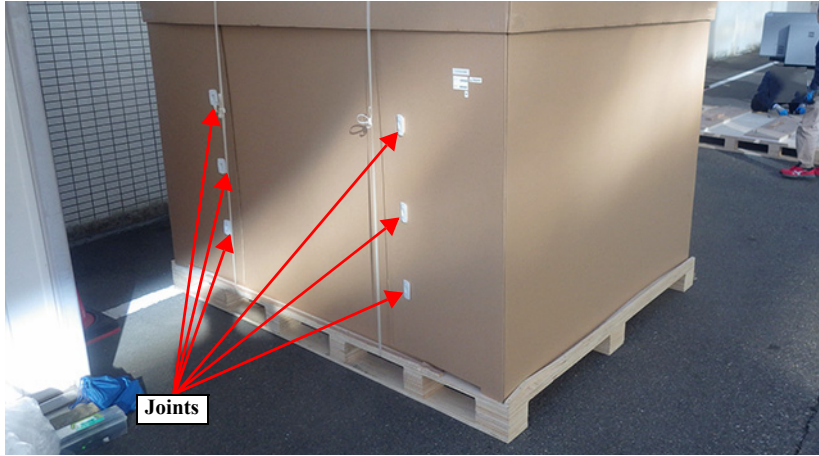


Figure 1-22. Removing the joints

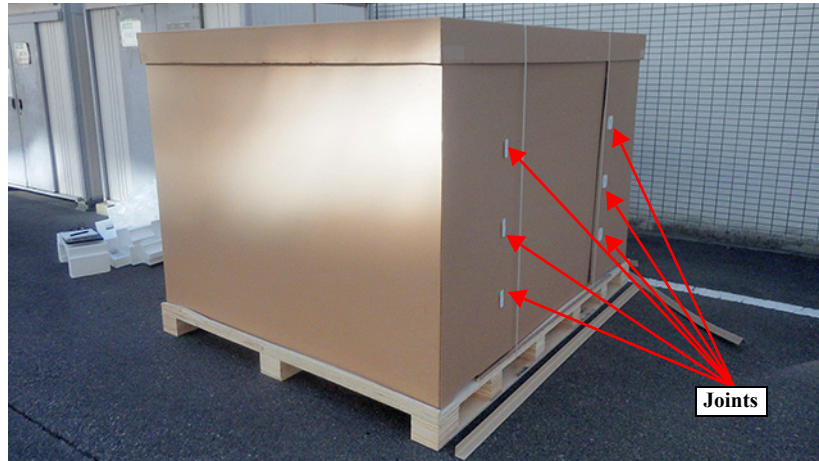



Figure 1-23. Removing the top cover

4. Remove the top cover.



Figure 1-24. Removing the cardboard enclosure

5. Remove the cardboard enclosure.

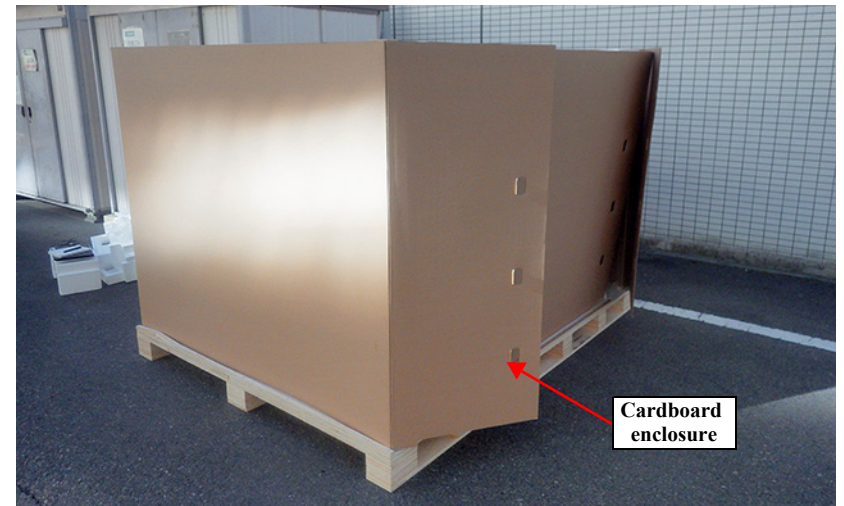

6. Unload the two empty boxes.

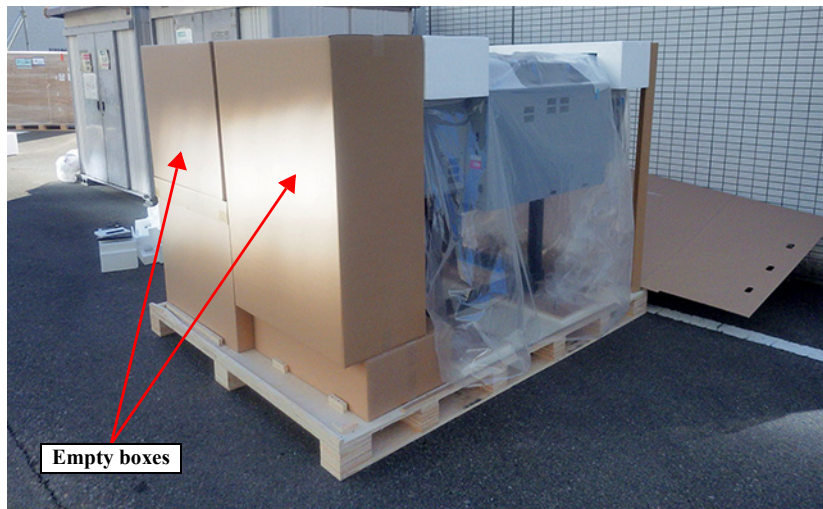


Figure 1-25. Unloading the empty boxes

7. Remove the protection parts (styrofoam).



Figure 1-26. Removing the protection parts

8. Unload the accessories box.

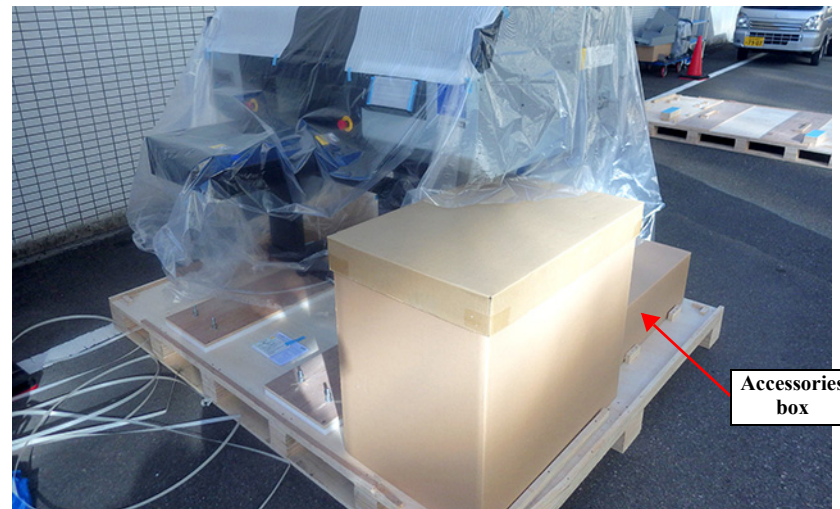


Figure 1-27. Unloading the accessories box

Note: Do not open the accessories box. Be sure to keep the accessories box with the main printer unit.

9. Remove the top cover of Bulk Ink Unit.



CHECK

[How to remove the top cover of the Bulk Ink Unit]
Cut the four corners of the top cover with a box cutter and remove it.



Figure 1-28. Removing the top cover

10. Remove the cardboard enclosure of Bulk Ink Unit.



CHECK

[How to remove the cardboard enclosure of the Bulk Ink Unit] With a box cutter, cut the right front corner of the box as viewed from the front, and remove it.

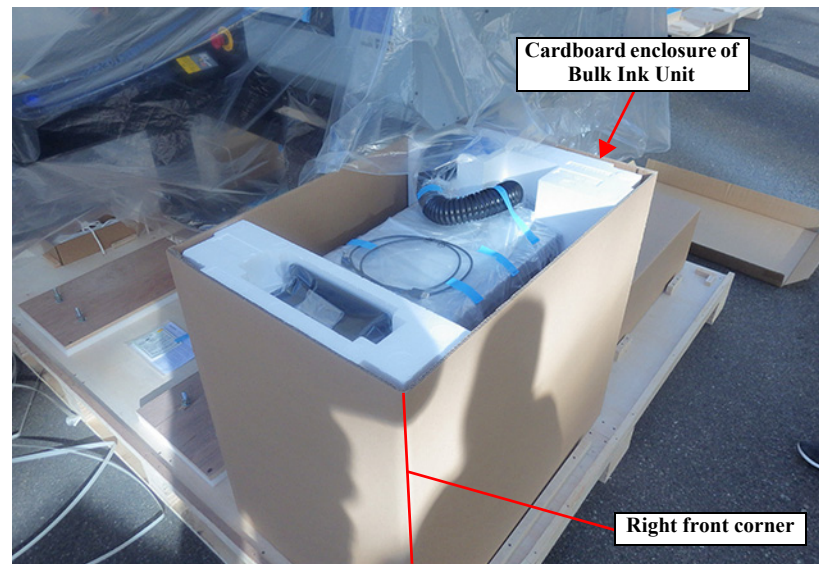


Figure 1-29. Removing the cardboard enclosure

11. Remove the two protection parts (styrofoam).

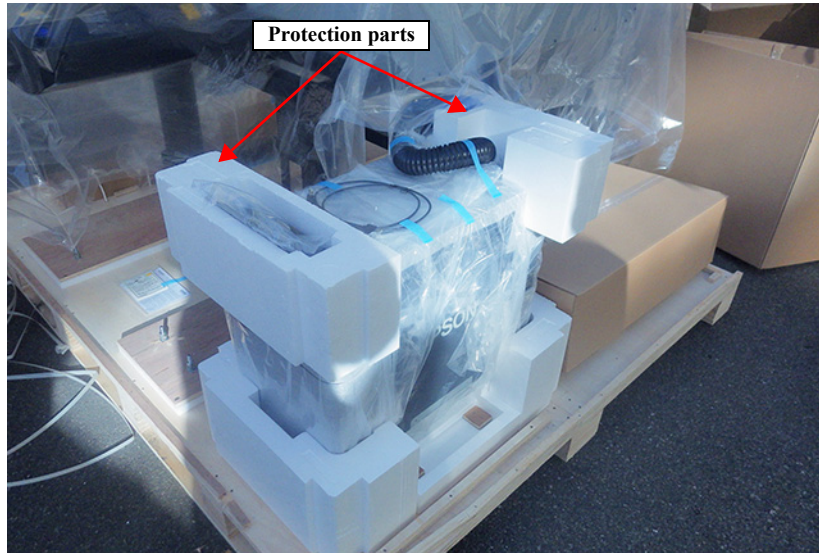


Figure 1-30. Removing the protection parts

12. Carefully unload the Bulk Ink Unit from the pallet and be sure to keep all of the parts together.



Make sure to lift the Bulk Ink Unit using two people.

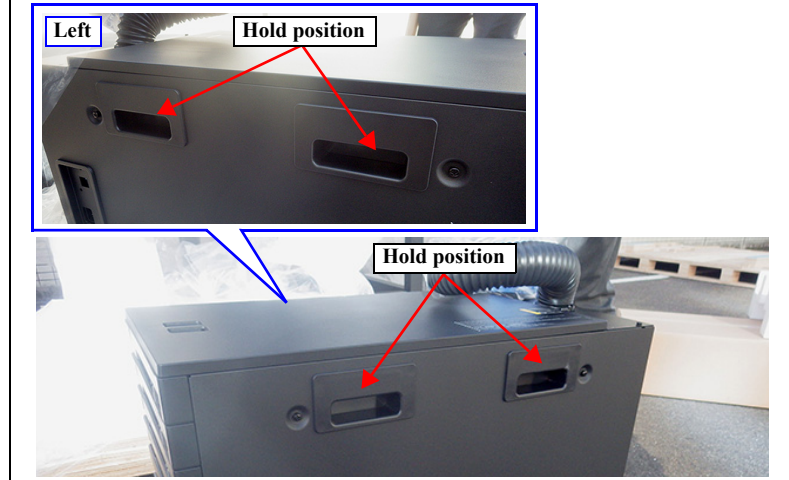


Figure 1-31. Unloading the Bulk Ink Unit

13. Remove the three protection parts (styrofoam).

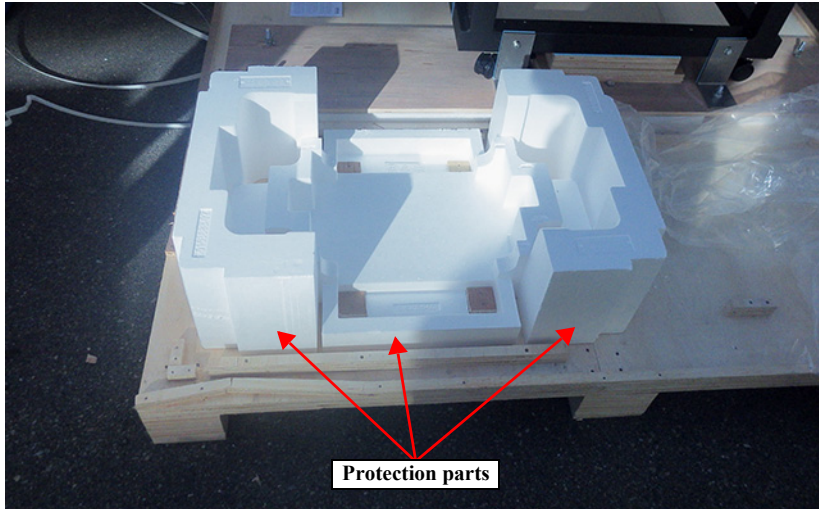


Figure 1-32. Removing the protection parts

14. Unload the two ramps and tools from pallet.

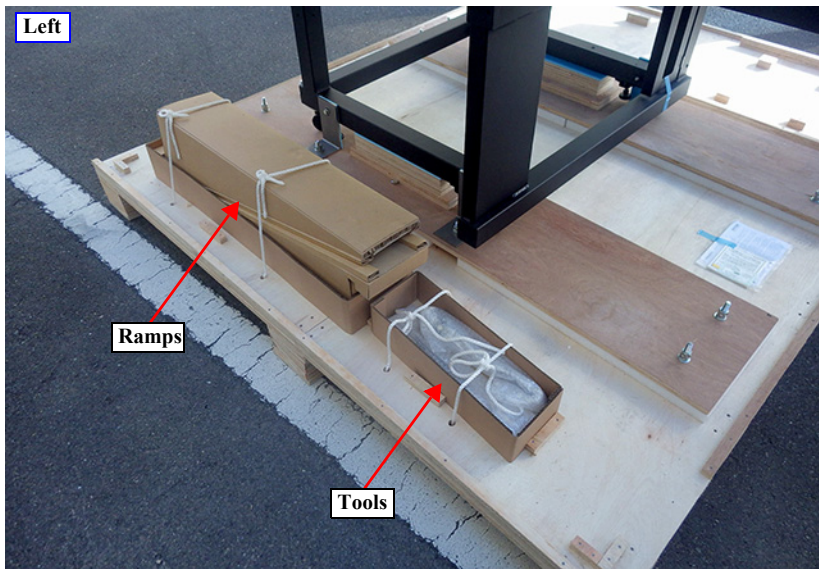


Figure 1-33. Unload the two ramps and tools

15. Remove the four bolts from the Stand with #13 wrench.

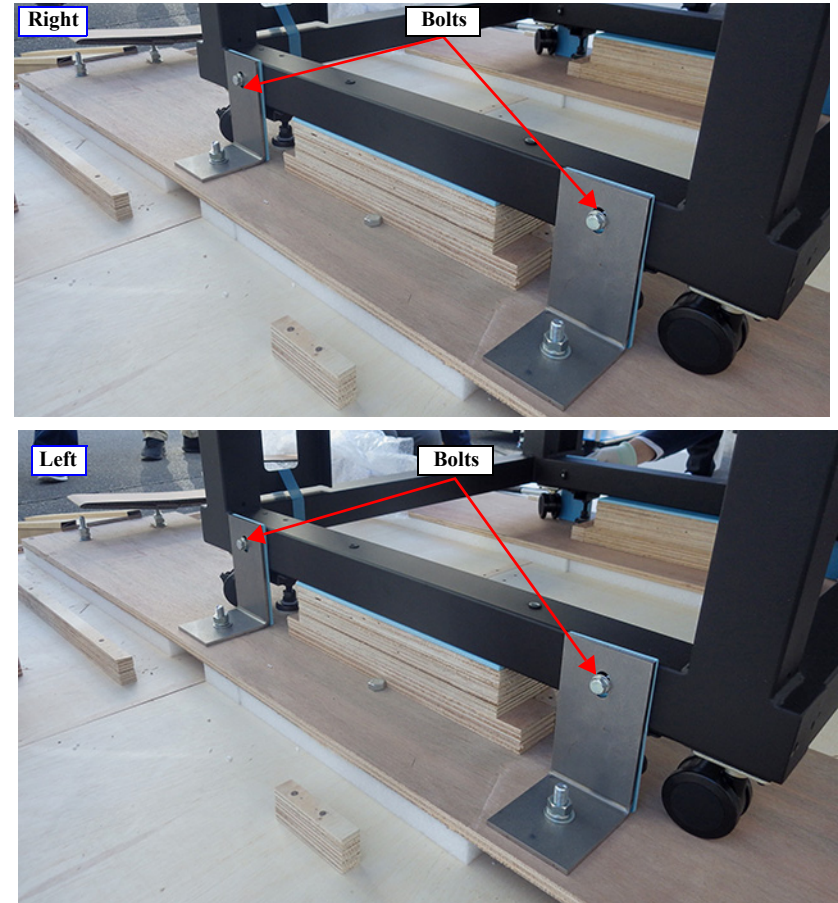


Figure 1-34. Removing the bolts



Be sure to place the pallet on the same level or within wheeling distance of the printer's final installation location. The printer cannot be lifted by forklift or by hand once removed from the pallet.

16. Remove the four nuts from pallet with two #19 wrenches.
Insert the #19 wrench into hole and lock the bolt then remove the nut with another #19 wrench.

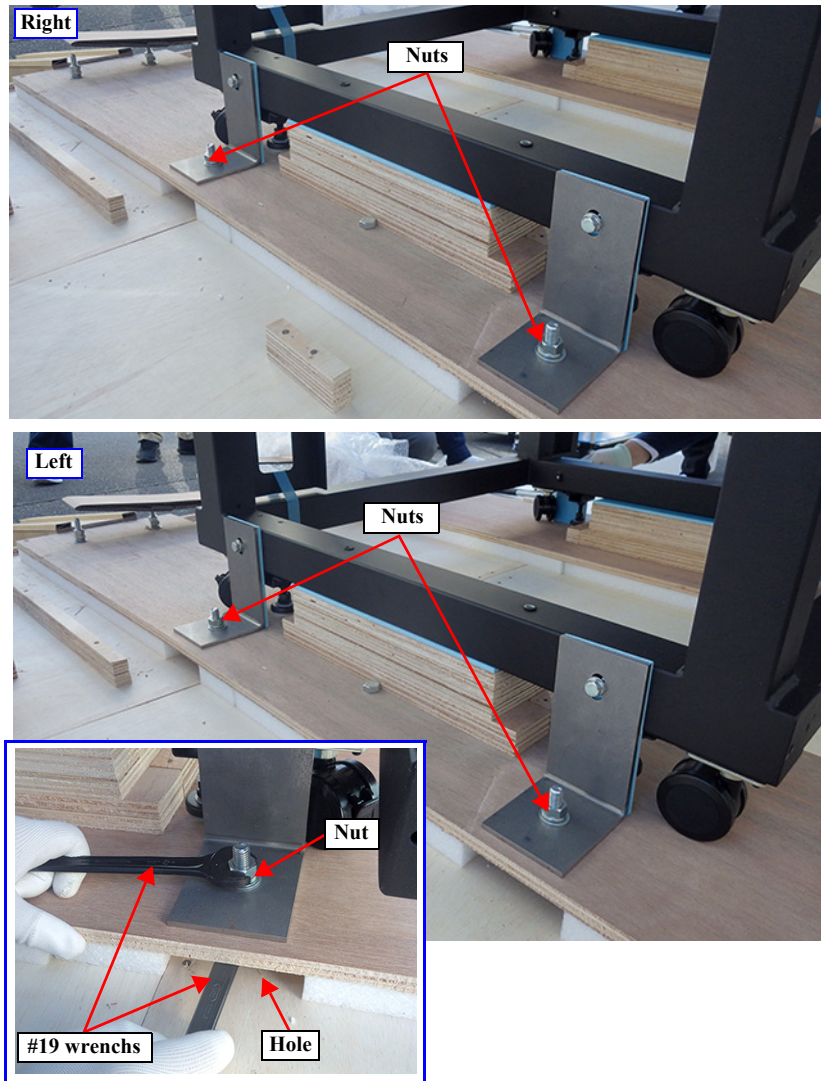


Figure 1-35. Removing the nuts

17. Remove the four fixing parts.

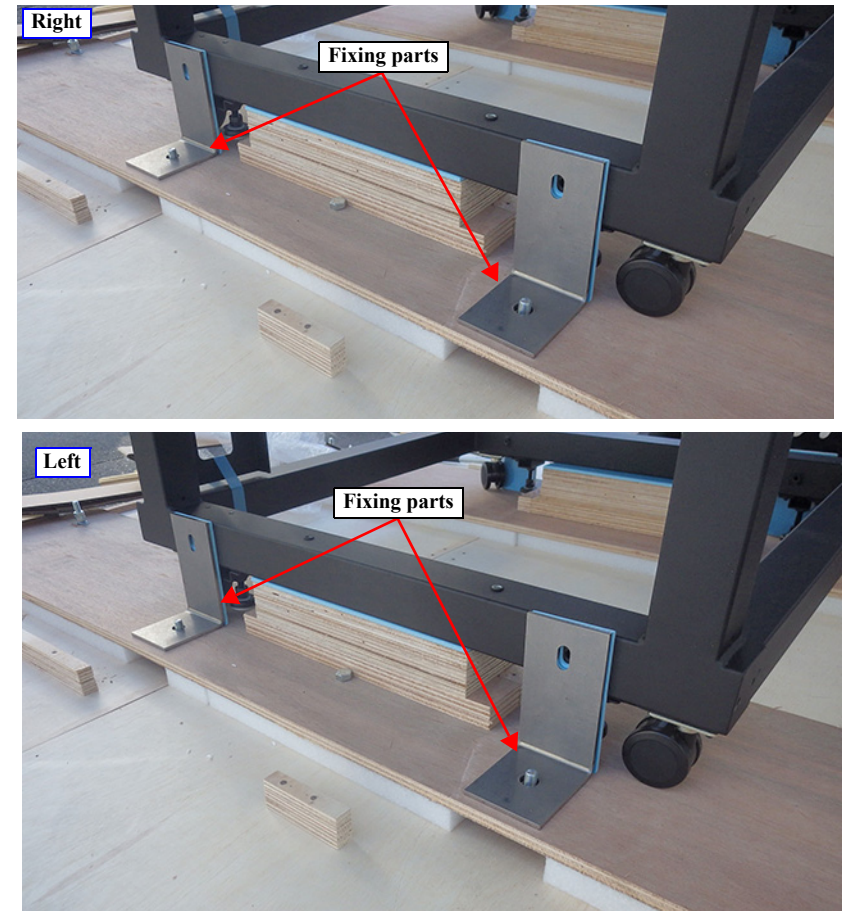


Figure 1-36. Removing the fixing parts

18. Make sure the adjusters are up.

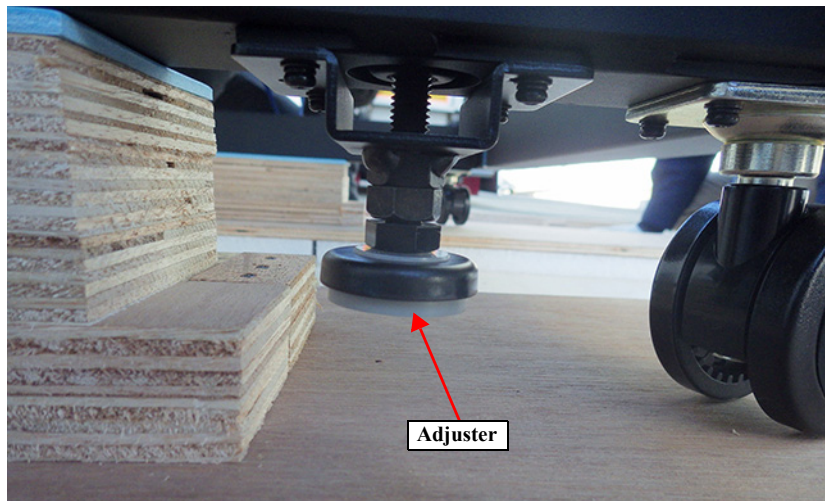


Figure 1-37. Checking the adjusters

19. Remove the two bolts from the pallet.



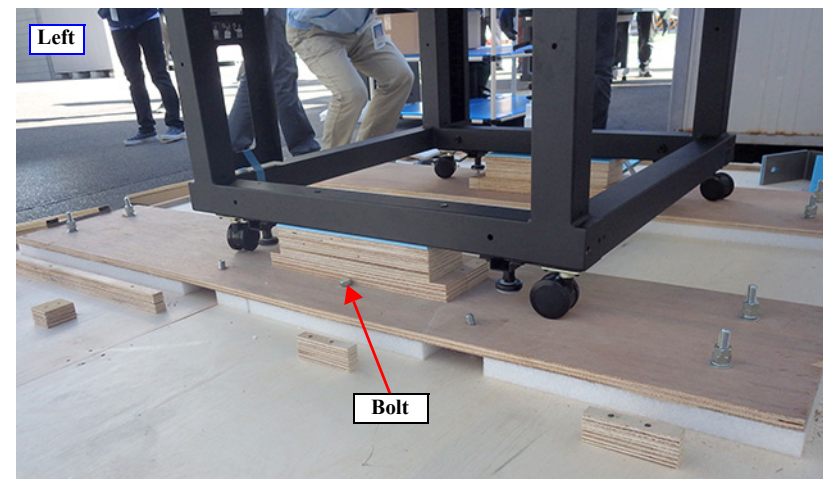


Figure 1-38. Removing the bolts

20. Remove the two wood chocks while lifting the printer with the hand jack.

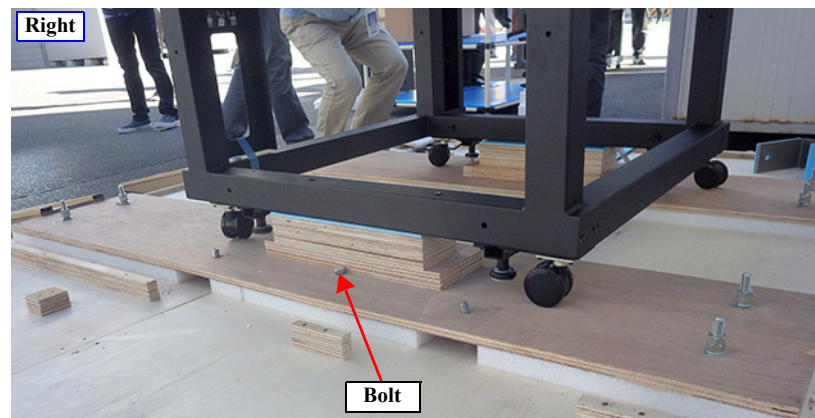

Make sure not to pinch your fingers between the stand and the wood chocks.

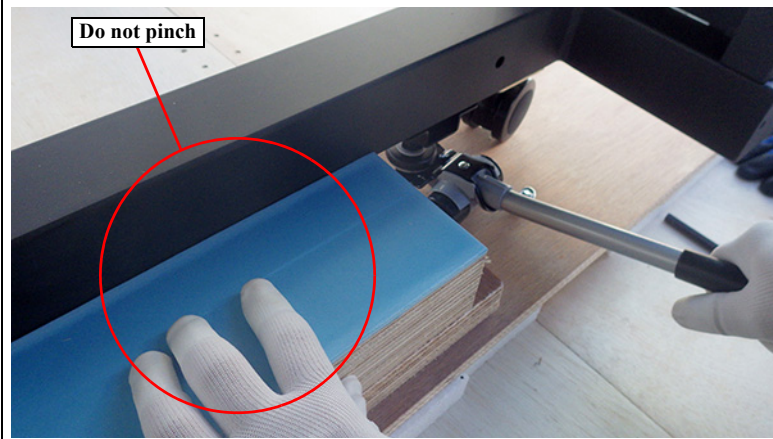

When it is difficult to lift the printer, lower the adjuster.


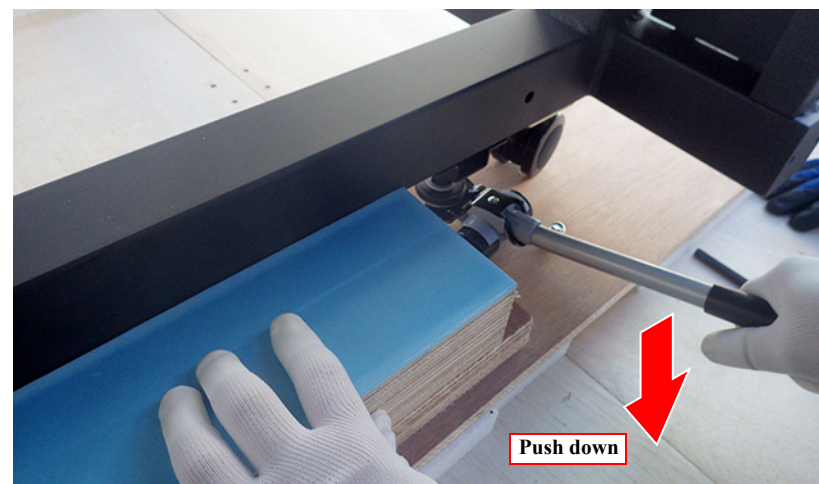


Figure 1-39. Removing the wood chocks

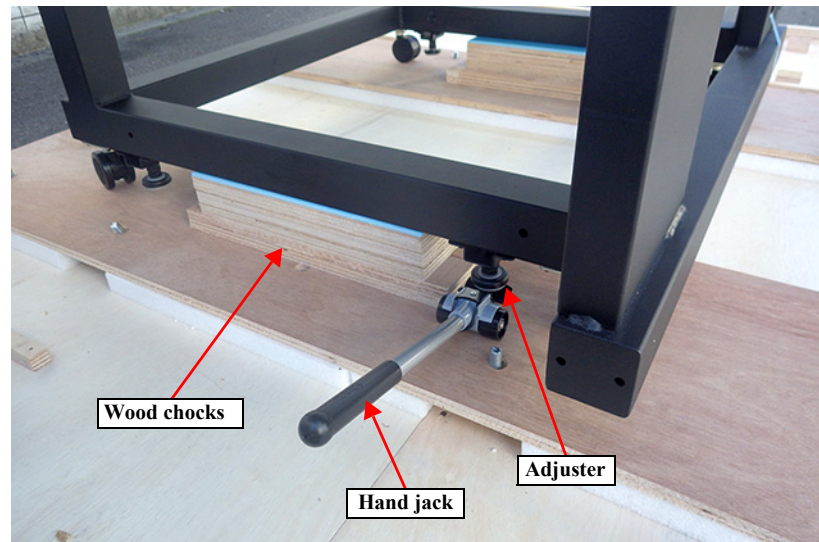

IMPORTANT: Carrier must take photos of all four sides of the unit and pallet after unpacking. If you notice damage to the unit or pallet, please take close-up photos before removing the unit from the pallet. If photos are not provided, Carrier may be liable for damages.

Please email photos to EpsonSiteSurvey@ea.epson.com with the subject line being the printer serial number. The serial number is located on the back right-side of the unit when viewed from the front.

21. Place the ramps on the front portion of the pallet.

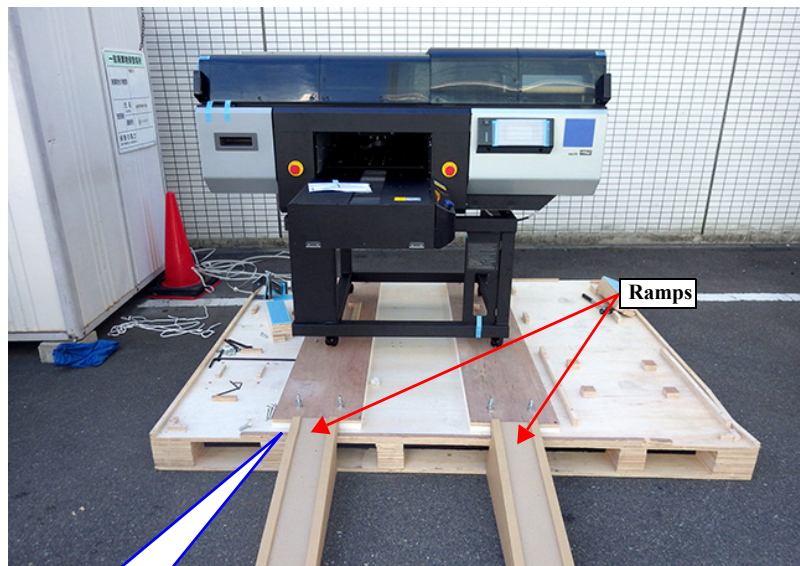


Figure 1-40. Setting the ramps

22. To ensure safety, remove the pallet from the work area after unloading the unit.

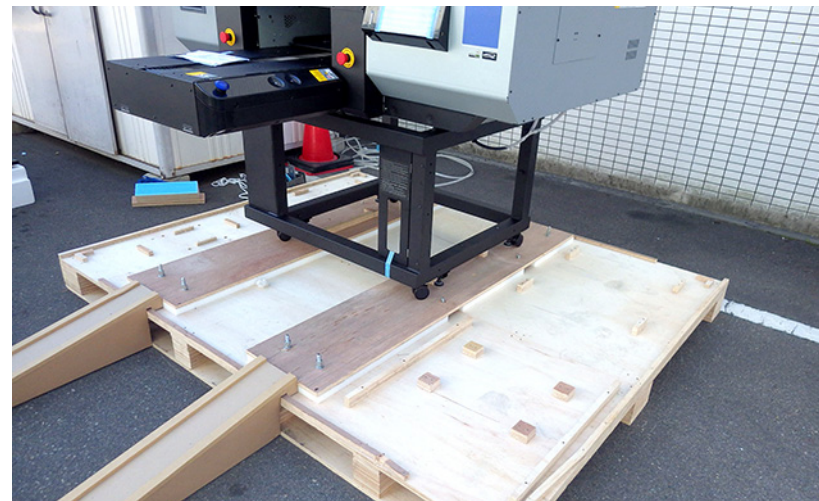


Figure 1-41. Move the pallet out of the work area after unloading the unit.

23. Unload the printer with an observer and four supporters.
 - Four supporters grip the hold positions and move the printer.
 - A technician supports them to unload the printer for safety.



Make sure to unload the printer with an observer and four supporters.

[Hold positions]



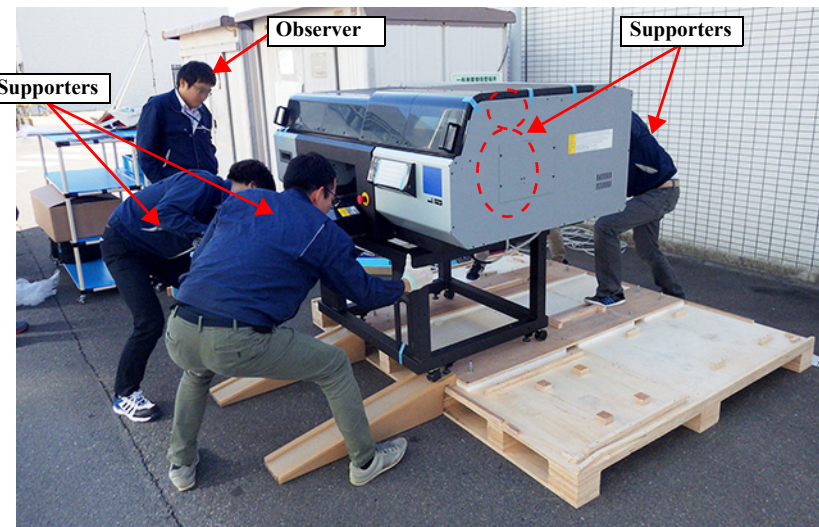


Figure 1-42. Unloading the printer

24. Install the printer in customer's site at designated indoor location.
25. Remove the protection parts inside of printer.

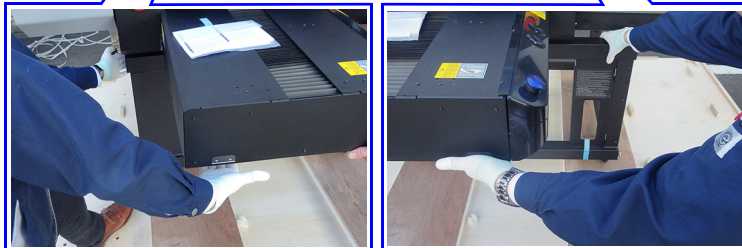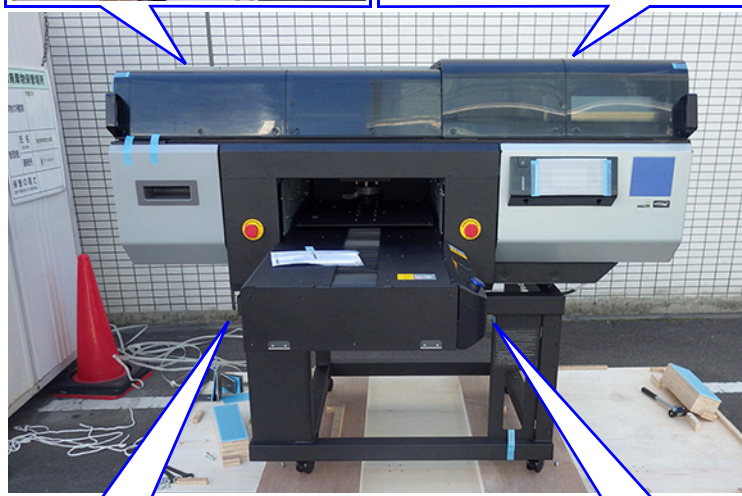

Once the unit is on the ground, do not attempt to lift it with a forklift or by hand. Always use the wheels when moving the unit into position.