## List of Art-Net Channel Specifications (EB-L1505U/EB-L1500U/EB-L1405U only)

Ch	M R		9 0 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1			,
ann	Function	**	Operation	Parameter	Settings	Operation Content
el			r <sub>ess</sub>	N N	852.0	
. 1	Luminance (Dimming)	0% - 100%		0 - 255	0	Set the brightness of the image.
2	Shutter control	Shutter	Closed	0 - 63	128	Enable/Disable A/V Mute.
		No operations	2 C	64 - 191		
		Shutter	Open	192 - 255	y-	
3	Display source	No operations		0-7	0	Display the set source.
		HDMI		8 - 15		
		No operations HDBaseT		16 - 23		
		DVI-D		24 - 31 32 - 39		
		No operations		40 - 47		
		SDI		48 - 55		
		Computer		56 - 63		
		No operations		64-71		
		BNC		72 - 79		
		LAN		80 - 87		
		No operations		88 - 95		
		No operations		96 - 255	1	
4	Lens position	No operations		0-31	0	Move lens shift to the home position.
		Move to Home	Position	32 - 63	1	
		No operations		64 - 255		
5	Horizontal lens shift	(+) Adjust	Movement amount: Large	0-31	128	Performs Horizontal lens shift for the amount of movement specified.
		Lens	Movement amount: Medium	32 - 63		
			Movement amount: Small	64 - 95		
		No operations	phon	96 -159		
		(-) Adjust Lens	Movement amount: Small	160 - 191		
			Movement amount: Medium	192 - 223		
			Movement amount: Large	224 - 255		
6	Vertical lens shift	(+) Adjust Lens	Movement amount: Large	0 - 31	128	Performs Vertical lens shift for the amount of movement specified.
			Movement amount: Medium	32 - 63		
			Movement amount: Small	64 - 95		
		No operations		96 -159	4	
		(-) Adjust Lens	Movement amount: Small	160 - 191	-	1
			Movement amount: Medium	192 - 223		
-,	7	(.) (.)	Movement amount: Large	224 - 255		
7	Zoom	(+) Adjust Lens	Movement amount: Large	0-31	128	Performs Zoom for the amount of movement specified.
			Movement amount: Medium	32 - 63		
			Movement amount: Small	64 - 95	1	
		No operations	T	96 - 159	4	
		(-) Adjust Lens	Movement amount: Small	160 - 191		
	E		Movement amount: Medium	192 - 223		•
		<u> </u>	Movement amount: Large	224 - 255		
8	Focus	(+) Adjust Lens	Movement amount: Large	0-31	128	Performs Focus for the amount of movement specified.
			Movement amount: Medium	32 - 63		
			Movement amount: Small	64 - 95		
		No operations		96 -159		
		(-) Adjust Lens	Movement amount: Small	160 - 191		
			Movement amount: Medium	192 - 223		
	40		Movement amount: Large	224 - 255		

Ch		1000	<del></del>			
ann	Function	g (d	Operation	Parameter	Settings	Operation Content
el	X70-01-05-70-0	Ė		2		
9	Electronic distortion	(+) Adjust Lens	Movement amount: Large	0-31	128	Performs Electronic Distortion for the amount of movement specified.
			Movement amount:	32 - 63		
			Movement amount: Small	64 - 95		
		No operations	Wovement amount. Sman	96-159		
		(-) Adjust Lens	Movement amount: Small	160 - 191		
		() riajust cens	Movement amount: Medium	192 - 223		
			Movement amount: Large	224 - 255		
10	Load Lens Memory	No operations		0 - 15	0	Loads the specified lens memory.
		Load Lens Memory 1		16-31		
		Load Lens Memory 2		32 - 47		
		Load Lens Memory 3		48 - 63		
		Load Lens Memory 4		64 - 79		
		Load Lens Memory 5		80 - 95		
		Load Lens Memory 6		96 - 111		
		Load Lens Memory 7		112 - 127		
		Load Lens Memory 8		128 - 143		
		Load Lens Memory 9		144 - 159		
		Load Lens Memory 10		160 - 175		
		No operations		176 - 255		
11	Power control instruction	Power off		0 - 63	128	Turns the power on/off.
		No operations		64 - 191		
		Power on		192 - 255		
12	Geometry Correction	Off		0-15	255	Performs Geometry Correction.
		H/V-Keystone (Keystone)		16-31		
		Quick Corner		32 - 47		
		Point Correction		48 - 63		
		Curved Surface		64 - 79		
		Corner Wall		80 - 95		
		Loads geometry correction memory 1		96 - 111		Loads geometry correction memory.
		Loads geometry correction memory 2		112 - 127		
		Loads geometry correction memory 3		128 - 143		
		No operations	r confide 200	144 - 175		
13	Lock	Cannot operat	e	0 - 127	0	Enable/Disable Art-Net operations.
		Can operate		128 - 255		***

When controlling the projector using Art-Net and operating the projector using the remote control or control panel, the settings and projector status for the DMX controller or application system may differ. When you want to control all channels in the projector, set channel 13 to "Cannot operate", and then return it to "Can operate".