


LW-400 User's Guide



412903600

Read these instructions before using your product.

Button names and functions

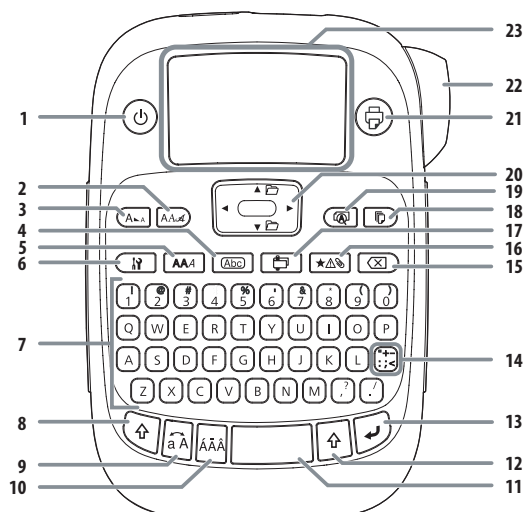


1. Power
2. Font
3. Font size
4. Frame
5. Font style
6. Settings
7. Character keys
8. Shift key
9. Caps lock
10. Accent
11. Space
12. Shift key
13. Select/Enter
14. Punctuation
15. Delete (☐) + (☒) deletes all text)
16. Symbols
17. Special formats
18. Print copies
19. Preview
20. Cursor keys (☐ + [▲], ☐ + [▼] goes to previous or next label)
21. Print (☐ + ☐ feeds the tape)
22. ✂ Cut button
23. Display

Turning the power off

Press (☐) to turn off the power. If using an AC adapter, disconnect it from the wall outlet and the product. If batteries are inserted, remove them only if the product will not be used for a long period of time.

Display indicators

Indicators on the display show whether or not settings are enabled.

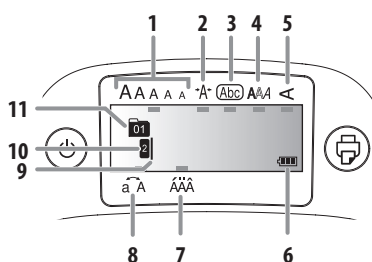

1. Font size
2. Font width
3. Frame
4. Font style
5. Vertical text
6. Battery level
7. Accent mark options
8. Upper/lower case
9. Cursor (blinks to indicate current position)
10. Line number (appears when multiple lines exist)
11. Label number (you can save up to 50 labels)

Note: You can print up to four lines of text.

Display settings

You can adjust the following display settings:

Backlight: Turns the backlight of the display on or off.

Contrast: Adjusts the density of the fonts on the display. (Value: -5 to +5)

Language: Changes the language of the settings and messages on the display.

inch:cm: Selects the unit of measurement for length.

To adjust display settings, follow the steps below:


1. Press (☐) to turn on the product.
2. Press (☐) + (☐).
3. Press [▲][▼][◀] or [▶] to highlight a setting, then press (☐) to select it.
4. Press [▲][▼][◀] or [▶] to select setting options, then press (☐).

Setup


This product operates with batteries (not included) or with an AC adapter (not included).

Inserting batteries

1. Remove the rear cover.

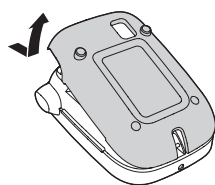


2. Insert 6 AA alkaline batteries.

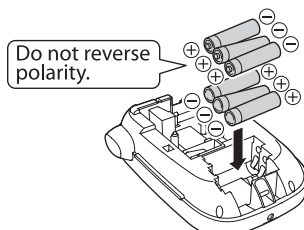

Note: If you need to install a tape cartridge, see "Inserting a tape cartridge" below.


3. Replace the cover and snap it into place.

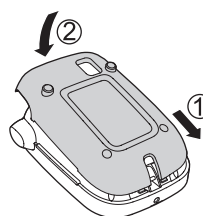

Optional AC adapter (APT0615Z1-1)


Warning: Make sure to use AC adapter APT0615Z1-1 or damage may occur.

1. Plug one end of the AC adapter into the product.
2. Plug the the other end of the AC adapter into the wall outlet.

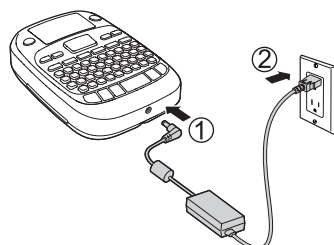


Inserting a tape cartridge


1. Remove any slack from the ink ribbon.

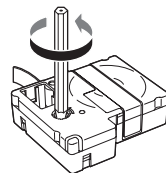

2. Remove the rear cover, if necessary.

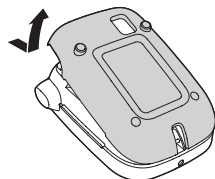

3. Insert the tape cartridge and press it down firmly until it snaps into place. If there is excess tape, feed the end of the tape through the tape guide slot.

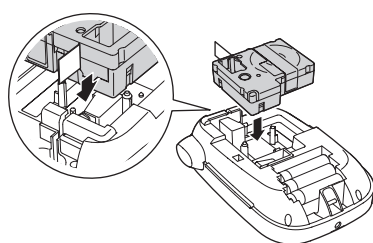

4. Replace the cover and snap it into place.

Preparing the tape

After inserting a tape cartridge, make sure to feed some tape through the tape guide slot to position it for printing.

1. Press (☐) to turn on the product.
2. Press (☐) + (☐).