

**PowerLite MovieMate 60
PowerLite Presenter**

<u>DESCRIPTION</u>	<u>PART NUMBER</u>
MovieMate 60	
Power Cord	2080118
Soft Case	1516948
Remote Control	1514830
Lamp (V13H010L56)	1521775
Computer Cable	2110978
PowerLite Presenter	
Power Cord	2080118
Soft Case	1516948
Remote Control	1514833
Lamp (V13H010L60)	1521556

Order user replaceable parts from an [Epson authorized parts distributor](#).

<http://www.epson.com/cgi-bin/Store/AboutEpsonConnection.jsp>

---- or ----

Locate an Epson Authorized Service Center to order user replaceable parts
by using the “Help me find...” tool in the right column of the
[Epson Support](#) home page.

<http://www.epson.com/cgi-bin/Store/support/SupportIndex.jsp>