

Ink Cartridges

Cartridge	Part number
Black	T007201 (U.S.), T007311 (Canada)
Color	T008201 (U.S.), T008311 (Canada)

Media

EPSON paper name	Size	Part number
360 dpi Ink Jet Paper	Letter A4	S041060 S041059
Photo Quality Ink Jet Paper	Letter A4 Legal	S041062 S041061 S041067
Photo Quality Ink Jet Cards	A6	S041054
Photo Paper	4 x 6 inches, perforated 4 x 6 inches, non-perforated*	S041134
	Letter - 20 sheets	S041458
	Letter - 500 sheets	S041141
	Letter - 100 sheets	S041272
	A4	S041271
	Panoramic	S041140
	Roll (3.9 in x 26.2 ft)	S041145
		S041279
Ink Jet Transparencies	Letter A4	S041064 S041063
Matte Paper - Heavyweight	Letter 8 x 10 inches* A4	S041257 S041467 S041258
Premium Glossy Photo Paper	Letter 5 x 7 inches* 8 x 10 inches* Roll (3.9 in x 26.2 ft) Roll (8.3 in x 26.2 ft)	S041286 S041464 S041465 S041302 S041376
Premium Semigloss Photo Paper	Letter A4 Roll (3.9 in x 26.2 ft)	S041331 S041332 S041329
Premium Luster Photo Paper	Letter Roll (8.3 in x 26.2 ft)	S041405 S041408
Photo Quality Glossy Film	Letter A4 A6	S041072 S041071 S041107
Photo Quality Self Adhesive Sheets	A4	S041106
Iron-On Cool Peel Transfer Paper	Letter - 10 sheets Letter - 50 sheets	S041153 S041155
Glossy Photo Greeting Cards	Letter	S041267
Photo Stickers Kit (CD-ROM/paper)	A6	S041144-KIT
Photo Stickers (refill)	A6	S041144

Options and Accessories

Options

Option	Part number
Preview Monitor	C860002

* Borderless paper, compatible with BorderFree™ (No Margins) printing.

Printer Specifications

Printing

Printing method	On-demand ink jet
Nozzle configuration	
Black	48 nozzles
Color	240 nozzles (48 each: cyan, magenta, yellow, light cyan, light magenta)
Resolution	Maximum 2880 dpi × 720 dpi
Print direction	Bidirectional with logic seeking
Control code	ESC/P Raster, EPSON Remote command
Input buffer	32KB

Mechanical

Paper feed method	Friction
Paper path	Sheet feeder, top entry, front exit
Sheet feeder capacity	100 sheets of 17 lb (64 g/m ²) paper
Dimensions	
Storage	Width: 18.4 inches (467 mm) Depth: 10.1 inches (256 mm) Height: 8.4 inches (212 mm)
Printing	Width: 18.4 inches (467 mm) Depth: 21.5 inches (547 mm) Height: 11.9 inches (302 mm)
Weight	11.6 lb (5.3 kg) without the ink cartridges

Electrical

Specification	120 V Model	220–240 V Model
Input voltage range*	99 to 132 V	198 to 264 V
Rated frequency range	50 to 60 Hz	
Input frequency range	49.5 to 60.5 Hz	
Rated current	0.45 A	0.25 A
Power consumption	Approx. 19 W (ISO10561 Letter Pattern) Approx. 3.5 W in standby mode	

* Check the label on the back of the printer for your printer's voltage.

Environmental

Temperature	
Operation	50 to 95 °F (10 to 35 °C)
Storage*	–4 to 104 °F (–20 to 40 °C) 1 month at 104 °F (40 °C)
Transit*	–4 to 140 °F (–20 to 60 °C) 120 hours at 140 °F (60 °C)
Humidity (without condensation)	
Operation	20 to 80% RH
Storage*	5 to 85% RH

*Stored in shipping container

Safety Approvals

Safety standards	UL 1950, CSA C22.2 No. 950
EMC	FCC part 15 subpart B class B CSA C108.8 Class B

Ink Cartridges

Specification	Black ink cartridge (T007xxx)	Color ink cartridge (T008xxx)
Color(s)	Black	Cyan, Magenta, Yellow, Light Cyan, Light Magenta
Print capacity*	540 pages; A4, 3.5% (ISO/IEC letter pattern), text at 360 dpi	220 pages (A4, 360 dpi, 5% duty each color)
Cartridge life	2 years from production date (if unopened) (within 6 months after opening package, at 77 °F [25 °C])	
Storage temperature	–4 to 104 °F (–20 to 40 °C) 1 month at 104 °F (40 °C)	
Transit temperature	–22 to 140 °F (–30 to 60 °C) 1 month at 104 °F (40 °C) 120 hours at 140 °F (60 °C)	
Freezing temperature**	3.2 °F (–16 °C)	–0.4 °F (–18 °C)
Dimensions	0.8 × 2.4 × 1.5 inches (W × D × H) 20.1 × 60 × 38.5 mm (W × D × H)	1.9 × 2.4 × 1.5 inches (W × D × H) 49.1 × 60 × 38.5 mm (W × D × H)

* The figure given is based on continuous printing after ink replacement. The actual print capacity may vary, depending on how often you turn on the printer and how often you clean the print head.

** Ink thaws and is usable after approximately 3 hours at 77 °F (25 °C).



To ensure good results, use genuine EPSON cartridges and do not refill them. Other products may cause damage to your printer not covered by EPSON's warranties.

Don't use an ink cartridge if the date on the package has expired.

Paper

Paper type	Size	Paper types	Thickness	Weight
Single sheets	Letter (8.5 × 11 inches) Legal (8.5 × 14 inches) Half letter (statement, 5.5 × 8.5 inches) Executive (7.5 × 10 inches) A4 (210 × 297 mm) A5 (148 × 210 mm) 5 × 7 inches 3.5 × 5 inches	Plain bond paper and special ink jet papers distributed by EPSON	0.003 to 0.004 inch (0.08 to 0.11 mm) for plain bond paper	17 to 24 lb (64 to 90 g/m ²) for plain bond paper
Transparencies, glossy film	Letter (8.5 × 11 inches) A4 (210 × 297 mm) A6 (105 × 148 mm)	Transparencies and glossy film distributed by EPSON	—	—
Matte Paper - Heavyweight	Letter (8.5 × 11 inches) A4 (210 × 297 mm) 8 × 10 inches	Matte paper distributed by EPSON	—	—
Self-adhesive sheets	A4 (210 × 297 mm)	Self adhesive sheets distributed by EPSON	—	—
Envelopes	No. 10, 4.1 × 9.5 inches (104 × 241 mm) DL, 4.3 × 8.7 inches (110 × 220 mm) C6, 4.4 × 6.4 inches (114 × 162 mm)	Plain bond paper or air mail paper	0.006 to 0.02 inch (0.16 to 0.52 mm)	12 to 20 lb (45 to 75 g/m ²)
Ink jet cards	A6 (105 × 148 mm)	Ink jet cards distributed by EPSON	—	—
Photo Paper	Letter (8.5 × 11 inches) A4 (210 × 297 mm) 4 × 6 inches (102 × 152 mm) Panoramic (210 × 594 mm) Roll (3.9 in × 26.2 ft)	Photo paper distributed by EPSON	—	—
Premium Glossy and Semigloss Photo Paper	Letter (8.5 × 11 inches) A4 (210 × 297 mm) 5 × 7 inches (glossy only) 8 × 10 inches (glossy only) Roll (3.9 in × 26.2 ft) Roll (8.3 in × 26.2 ft) (glossy only)	Premium Glossy Photo Paper or Premium Semigloss Photo Paper distributed by EPSON	—	—
Photo Stickers	A6 (105 × 148 mm), 16 frames/sheet	Photo stickers distributed by EPSON	—	—
Iron-On Cool Peel Transfer Paper	Letter (8.5 × 11 inches)	Transfer paper distributed by EPSON	—	—



Always load paper into the sheet feeder short edge first, except for envelopes. Load envelopes flap edge first with the flap side down

Since the quality of any particular brand or type of paper may be changed by the manufacturer at any time, EPSON cannot attest to the quality of any non-EPSON brand or type of paper. Always test samples of paper stock before purchasing large quantities or printing large jobs.

Poor quality paper may reduce print quality and cause paper jams and other problems. If you encounter problems, switch to a higher grade of paper.

Do not load curled or folded paper.

Use papers under these conditions:

Temperature: 59 to 77 °F (15 to 25 °C)


Humidity: 40 to 60% RH

Store printouts on Photo Quality Glossy Film and Self Adhesive Sheets under these conditions:

Temperature: 59 to 86 °F (15 to 30 °C)

Humidity: 20 to 60% RH

Printable area

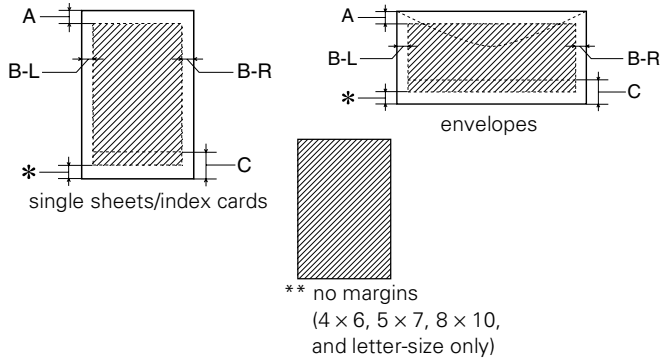

- A: The minimum top margin is 0.12 inch (3.0 mm).
When loading multiple sheets of EPSON Photo Quality Glossy Film, the minimum top margin is 1.2 inches (30.0 mm).
- B-L: The minimum left margin is 0.12 inch (3.0 mm).
- B-R: The minimum right margin is 0.12 inch (3.0 mm) for all papers except DL envelopes (0.28 inch [7.0 mm]) and No. 10 envelopes (1.10 inches [28.0 mm]).
- C: The minimum bottom margin is 0.55 inch (14.0 mm).
- * You can extend the minimum bottom margin to 0.12 inch (3.0 mm) by selecting Maximum as the Printable Area setting. However, print quality may decline in the expanded area.
- ** When printing with the No Margins setting, print quality may decline in the top and bottom areas of the printout.


Control Panel

To diagnose some problems, check the printer's control panel, as described below, or run a printer check (page 6).


Green Processing light flashes		The printer is receiving a print job, reading a PC card, printing, or performing maintenance procedures.
Red light is on		Your paper ran out, ink ran out, or paper is jammed. You may also see one of the messages shown at the left, or a message on your screen.
		<input type="checkbox"/> If paper is out, load more paper, then press the maintenance button to resume printing.
		<input type="checkbox"/> If paper is jammed, press the maintenance button to eject the paper. If that doesn't work, turn off the printer, open the printer cover, and remove all the paper, including any torn pieces. Then turn on the printer, reload paper, and press the maintenance button.
		<input type="checkbox"/> If you're printing on roll paper, press the roll paper button for at least three seconds to clear the jam.
		<input type="checkbox"/> If you see IEb (Ink Empty black) or IEc (Ink Empty color) on the control panel, you need to replace one of your ink cartridges. Replace the cartridge as described on page 7.
		<input type="checkbox"/> If you see IC (Ink Cartridge) on the control panel, one of the cartridges is not installed correctly. Remove it and install it correctly, as described on page 7.
Red light flashes		One of the ink cartridges is low. Make sure you have a replacement cartridge. Check the message that appears on your screen or on the control panel to see if you need a black (ILb) or color (ILc) cartridge.
Green Processing light flashes and red light is on		Press the maintenance button, then remove any paper in the printer. Turn off the printer, open the cover, and remove any paper or other foreign objects. Make sure there is sufficient space around the vents on the back of the printer. Then turn the printer on again. If the lights are still on, contact your dealer or EPSON.
Green Processing light and red light flash		An unknown printer error has occurred. Turn off the printer and contact your dealer or EPSON.
Red light flashes		Internal printer parts need adjustment or replacement. Turn off the printer, wait a few seconds, then turn it back on. If you still see the error, contact EPSON.
Red light flashes		The memory card is damaged or the data is corrupted. Try reformatting the card in your camera.

Installing Ink Cartridges for the First Time

1. Turn on the printer.
2. Lower the printer's output tray and open the cover.

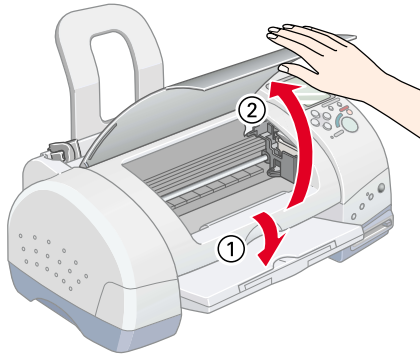

3. Lift up the two ink cartridge clamps.

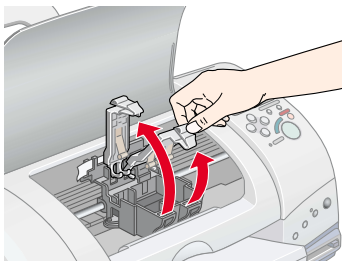


Install both ink cartridges, and leave them installed for all types of printing, or the printer won't work.





Keep ink cartridges out of the reach of children and do not drink the ink. If ink gets on your hands, wash them thoroughly with soap and water. If ink gets in your eyes, flush them thoroughly with water.

4. Unwrap the ink cartridges, then remove only the yellow part of the tape seal on top. **Don't pull off the blue part.**

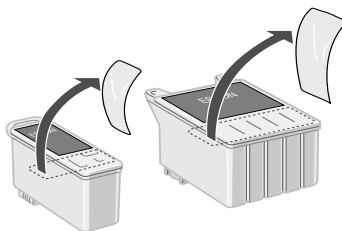


black cartridge color cartridge

5. Tilt each cartridge toward you slightly as you lower it. Make sure the tabs rest on the **hooks** as shown.

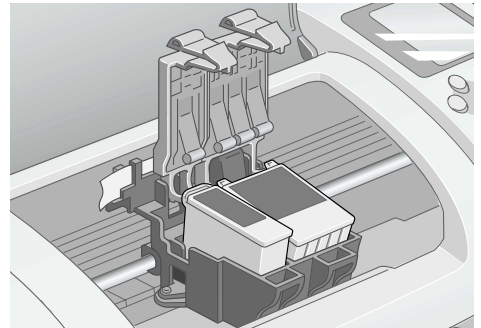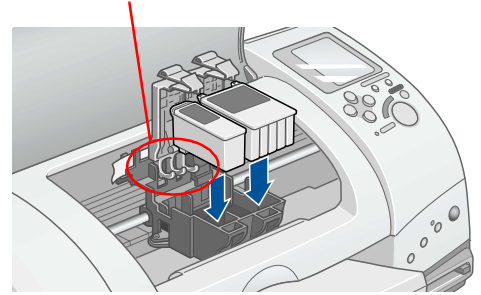

 Don't place the cartridges **under** the hooks; you may damage the clamp when you close it.



6. Lower the clamps so they snap shut.
7. Press the  ink replacement button and close the printer cover.

 
 

Ink charging takes about two minutes. You will see the lights flash and hear the printer make noise. Don't turn off the printer during this process or you'll waste ink.



Never turn off the printer when the green Processing light is flashing, unless the printer hasn't moved or made any noise for more than 5 minutes.

Testing the Printer

You can run a printer check to determine whether a problem comes from the printer itself or some other source.

1. Make sure both the printer and computer are turned off. Then disconnect the USB cable from the printer.
2. Make sure letter-size or larger paper is loaded in the printer.
3. Hold down the  maintenance button, then press and release the  power button. Continue holding down the  maintenance button until the **Processing** light starts to flash, then release it.

The printer prints one page showing its ROM version number, black and color ink percentages remaining, and a nozzle check pattern. (If the pattern has gaps in its dots, you need to clean the print head; see page 8.)

4. Turn off the printer after it prints the check page. Then reconnect the cable and turn on your printer and computer.
 - If the check page prints, the problem probably lies in your memory card, software settings, interface cable, or computer. Your software may not be installed correctly.
 - If the check page doesn't print, you may have a problem with your printer. Try the suggestions in the *Printer Basics* book. If nothing works, contact your dealer or EPSON.

Printing on Special Media

Select the Media Type setting according to the guidelines in the table below.

For this paper name...	Select this Media Type setting
Plain paper and envelopes	Plain paper
EPSON 360 dpi Ink Jet Paper EPSON Iron-On Cool Peel Transfer Paper	360 dpi Ink Jet Paper
EPSON Photo Quality Ink Jet Paper EPSON Photo Quality Ink Jet Cards EPSON Photo Quality Self Adhesive Sheets	Photo Quality Ink Jet Paper
EPSON Photo Quality Glossy Paper EPSON Photo Paper EPSON Glossy Photo Greeting Cards	Photo Paper
EPSON Premium Glossy Photo Paper EPSON Premium Semigloss Photo Paper EPSON Premium Luster Photo Paper	Premium Glossy Photo Paper
EPSON Photo Quality Glossy Film EPSON Photo Stickers	Photo Quality Glossy Film
EPSON Ink Jet Transparencies	Ink Jet Transparencies
EPSON Matte Paper - Heavyweight	Matte Paper - Heavyweight

Additional Media Loading Guidelines



Don't use the cleaning sheets that may be included with your special media; they may damage the printer.

- Always load paper short edge first, even when printing landscape-oriented pictures.
- Always handle sheets by the edges, and don't touch the printable surface.
- Be sure to load the printable (whiter) side of the media face up in the sheet feeder.
- You can load paper up to the arrow mark on the left edge guide.
- In addition to the **Media Type** setting, remember to select the correct **Paper Size** for your media in the printer software.
- If the special media has protective sheets between each sheet of media, be sure to remove the protective sheets before printing.
- Some special media have a cut corner that you need to position in the upper right corner when you load it.
- You can load the following number of sheets of EPSON special media:

For this paper name...	Load this number of sheets
EPSON 360 dpi Ink Jet Paper EPSON Photo Quality Ink Jet Paper	Up to the arrow mark on the inside of the left edge guide
EPSON Photo Quality Ink Jet Cards EPSON Glossy Photo Greeting Cards	Up to 30 cards with the included support sheet beneath the stack
EPSON Photo Quality Glossy Paper EPSON Photo Quality Self Adhesive Sheets EPSON Iron-On Cool Peel Transfer Paper EPSON Photo Stickers EPSON Premium Glossy Photo Paper EPSON Premium Semigloss Photo Paper EPSON Premium Luster Photo Paper EPSON Photo Paper (Panoramic size) EPSON Ink Jet Transparencies	One sheet at a time
EPSON Photo Paper (Letter-, A4-, or 4 × 6-inch size) Matte Paper - Heavyweight	Up to 20 sheets with the included support sheet beneath the stack



Printing Borderless Photos

You can print your photos with no margins, extending the image all the way to the edges of the page. Although BorderFree printing is a bit slower (especially near the edges), you get perfect snapshots or enlargements, without trimming.


BorderFree printing supports the following paper types and sizes:

Paper name	Letter size	4 × 6	5 × 7	8 × 10
Photo Paper	S041141 S041272 S041271	S041458	—	—
Premium Glossy Photo Paper	S041286	Roll paper: S041302	S041464	S041465
Matte Paper - Heavyweight	S041257	—	—	S041467
Premium Semigloss Photo Paper	S041286	Roll paper: S041332	—	—
Premium Luster Photo Paper	S041405	—	—	—

  Replacing an Ink Cartridge

 When the red  error light flashes, an ink cartridge is low on ink. This is a good time to make sure you have a new cartridge. When the  error light stays on, a cartridge is empty and you need to replace it.



The  error light also comes on if you have a paper jam, so make sure you check for that before replacing a cartridge.


Check the control panel to see which cartridge is low or empty:

llb	llc	Err	Err
Ink Low— Black	Ink Low— Color	Ink Empty— Black	Ink Empty— Color

If you're printing from your computer, you'll see a message on your screen telling you which cartridge is low or empty. Click the **How to** button to see instructions for replacing the cartridge.



 You cannot print if either ink cartridge is empty. Leave the empty cartridge installed in the printer until you have obtained a replacement. Otherwise the ink remaining in the print head nozzles may dry out.

When an installed cartridge is more than six months old, you may need to replace it if printouts don't look their best. If the quality doesn't improve after cleaning and aligning the print head, you can replace the cartridge even if the  error light is off.

Use these EPSON ink cartridges within six months of installing them and before the expiration date on the package:

- Black ink cartridge: T007201 (U.S.), T007311 (Canada)
- Color ink cartridge: T008201 (U.S.), T008311 (Canada)




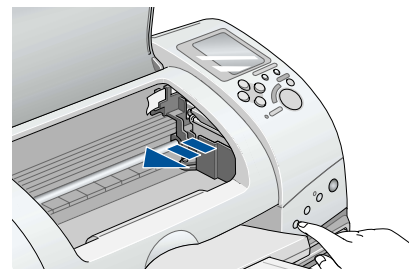
To ensure good results, use genuine EPSON ink cartridges and do not refill them. Other products may cause damage to your printer not covered by EPSON's warranty.

When you need new ink cartridges, contact your dealer or call the EPSON Store at (800) 873-7766 or visit www.epsonstore.com (U.S. sales only). In Canada, please call (800) 873-7766 for dealer referral.


Be sure you have a new ink cartridge before you begin. Once you start the ink cartridge replacement procedure, you must complete all the steps in one session.

Removing and Installing Ink Cartridges


1. Make sure the printer is turned on and not printing (the Processing light should be on, but not flashing), then open the printer cover.
2. Press the  ink cartridge replacement button. The print head moves to the center and the Processing light flashes.



3. The color cartridge is on the right and the black is on the left. Pull up the ink cartridge clamp. The cartridge rises up from its holder.

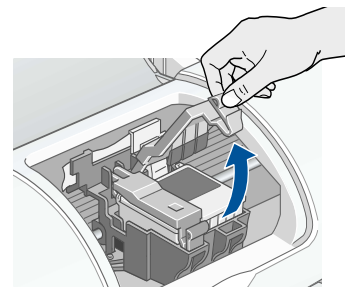


- Lift the cartridge out of the printer and dispose of it carefully.

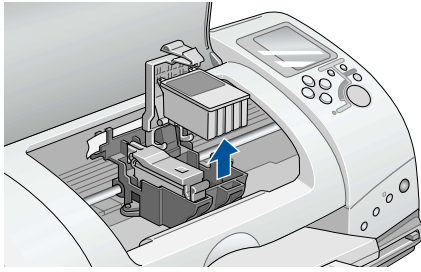

Keep ink cartridges out of the reach of children and do not drink the ink.

If ink gets on your hands, wash them thoroughly with soap and water. If ink gets in your eyes, flush them thoroughly with water.


- Unwrap the new ink cartridge. Then remove *only* the yellow tape seal on top.

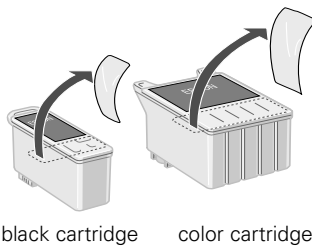

You must remove the yellow tape from the top of the cartridge or you will permanently damage it. Don't try to remove the clear seal underneath the cartridge.

Don't touch the green circuit board on the back of the cartridge; you may inhibit normal operation and printing.


- Tilt the new cartridge toward you slightly as you insert it.

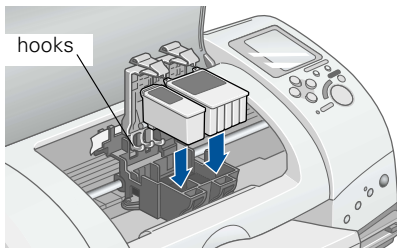



Don't place the cartridge under the hooks; you may damage the clamp when you close it.

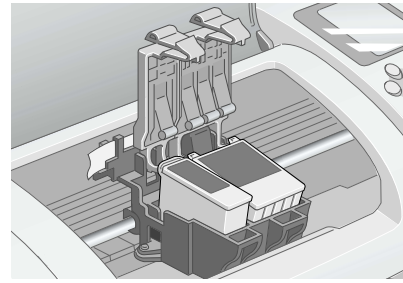

Lower the cartridge so that the tabs rest on the hooks as shown:



- Press down firmly on the ink cartridge clamp until it snaps in place.
- If you need to replace the other ink cartridge, repeat steps 3 through 7 before continuing with step 9.
- Press the  ink cartridge replacement button and close the printer cover. The printer begins charging the ink delivery system.

The **Processing** light flashes, and the printer makes noise. Charging takes about one minute. When it's finished, the **Processing** light stops flashing and stays on, and the  error light goes out.





Never turn off the printer while the Processing light is flashing, unless the printer hasn't moved or made noise for more than 5 minutes.

Cleaning the Print Head

If your printouts are unexpectedly light or faint, or dots or lines are missing from the image, you may need to clean the print head. This unclogs the nozzles so they can deliver ink properly. Print head cleaning uses ink, so clean it only if quality declines.

This section explains how to clean the print head using the Head Cleaning utility. This is the recommended method when the printer is connected directly to your computer (not over a network).



You can also clean the print head by holding down the  maintenance button on the printer's control panel for three seconds when the  error light is off. See your on-screen *Reference Guide* for detailed instructions.



When you don't turn on your printer for a long time, the print quality can decline. It's a good idea to turn on your printer at least once a month to maintain good print quality.

Running the Head Cleaning Utility

Follow these steps to run the Head Cleaning utility:

1. Make sure the printer is turned on but not printing, and the red error light is off. (If the red light is flashing or on, you may need to replace the ink cartridge; see page 7 for details.)
2. Do one of the following:
 - Windows: click **Start**, point to **Settings**, then select **Printers**. Right-click the **EPSON Stylus Photo 785EPX** printer icon and select **Properties** (Windows 98 or Me) or **Printing Preferences** (Windows 2000). Click the **Utility** tab.
 - Macintosh: Open the **File** menu and choose **Page Setup** or **Print**. Then click the  **Utility** button.
3. On the Utility menu, click the  **Head Cleaning** button.
4. Follow the instructions on the screen to clean the print head. Cleaning takes about 30 seconds, during which the printer makes some noise and the **Processing** light flashes.



Never turn off the printer while the Processing light is flashing, unless the printer hasn't moved or made noise for more than 5 minutes.

5. When the **Processing** light stops flashing, run a nozzle check to confirm the print head nozzles are clean.

Make sure paper is loaded in the printer and click **Print nozzle check pattern**. Then click **Print**. The nozzle check pattern prints (see the next section for details).

 
6. If the nozzle check pattern has no gaps in its dots, click **Finish**.

If the pattern is missing dots, click **Clean** to clean the print head again.


If you don't see any improvement after cleaning three or four times, check the solutions in your *Printer Basics* book. You can also turn the printer off and wait overnight—this allows any dried ink to soften—and then try cleaning the print head again.

Examining the Nozzle Check Pattern

Examine the nozzle check pattern you print. Each staggered horizontal and straight vertical line should be complete, with no gaps in the dot pattern, as shown below:



 - If your printout looks okay, you're done.
- If any dots are missing (as shown below), clean the print head again; see the previous section for instructions.





Aligning the Print Head

If your printouts contain misaligned vertical lines, you may need to align the print head. Your printer must be connected to a local port, not on a network, to use the Print Head Alignment utility.

1. Make sure the printer is turned on, but not printing, and letter-size paper is loaded.



Load paper that's at least 8.27 inches (210 mm) wide to prevent ink from spraying inside the printer and smudging your printouts. For the best results, load EPSON Photo Quality Ink Jet Paper in the printer whenever you check the print head alignment.

2. Do one of the following:
 - Windows: click **Start**, point to **Settings**, then select **Printers**. Right-click the **EPSON Stylus Photo 785EPX** printer icon and select **Properties** (Windows 98 or Me) or **Printing Preferences** (Windows 2000). Click the **Utility** tab.
 - Macintosh: Open the **File** menu and choose **Page Setup** or **Print**. Then click the  **Utility** button.
3. In the Utility menu, click the  **Print Head Alignment** button.
4. Follow the instructions on the screen to print a test page. You see the alignment window.
5. On the printed page, select the pattern that shows the two vertical lines most precisely printed on top of each other. You may need to use a magnifying glass.

Select one pattern each for rows 1, 2, and 3. Then enter the number of the best pattern for each row in the corresponding boxes on the screen.
6. Click **Realignment** to print another test page. Make sure the pattern numbered 8 in each row is the best aligned. If not, repeat steps 5 and 6.
7. When you're finished, click **Finish**.

Cleaning the Printer

To keep your printer working at its best, you should clean it several times a year. Follow these steps:

1. Turn off the printer, unplug the power cord, and disconnect the printer cable.
2. Remove all paper, then use a soft brush to clean any dust or dirt from the sheet feeder.
3. Clean the exterior of the printer with a soft, damp cloth.
4. Clean ink out of the printer's interior with a soft, damp cloth.
5. Use a soft, dry cloth to clean the display and optional preview monitor. Do not use liquid or chemical cleaners on these parts.



Don't touch the gears inside the printer.

Never use a hard or abrasive brush, or alcohol or thinner for cleaning; they can damage the printer components and case.

Don't get water on the printer components and don't spray lubricants or oils inside the printer.

Don't use any cleaning sheets included with special paper; they may jam inside the printer.

Transporting the Printer

If you move your printer some distance, you need to prepare it for transportation in its original box or one of a similar size.




To avoid damage, always leave the ink cartridges installed when transporting the printer.

Be sure to remove the tape used in step 4 after installing the printer in its new location.

Follow these steps:

1. Turn on the printer, wait until the print head locks in the far right position, then turn off the printer.
2. Unplug the power cord from the electrical outlet. Then disconnect the printer cable from the printer.
3. Remove any paper from the printer and remove the paper support.

4. Open the printer cover. Secure the ink cartridge holder to the printer with tape as shown, then close the printer cover.

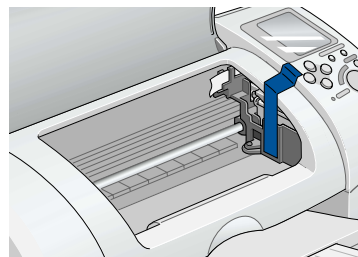

Tape the ink cartridge holder to the printer case

5. Push in the output tray extension and close the tray.
6. Repack the printer and its attachments in the original box using the protective materials that came with them. See your *Start Here* sheet.

Keep the printer level as you transport it.

After transporting the printer, remove the tape securing the print head and test your printer. If you notice a decline in print quality, clean the print head (see page 8); if output is misaligned, align the print head (see page 9).

Related Documentation

TM-SP785EPX	EPSON Stylus Photo 785EPX Service Manual
PL-SP785EPX	EPSON Stylus Photo 785EPX Parts Price List
CPD-12098	EPSON Stylus Photo 785EPX <i>Printer Basics</i>
CPD-12099	EPSON Stylus Photo 785EPX <i>Start Here</i>
CPD-12101	EPSON Stylus Photo 785EPX <i>Quick Reference card</i>
CPD-12100	EPSON Stylus Photo 785EPX CD-ROM with <i>Reference Guide</i>