

## Error Codes

I L b	Ink Low: black	Make sure you have a new black ink cartridge.
I L c	Ink Low: color	Make sure you have a new color ink cartridge.
E r r I E b	Ink Empty: black	Replace the black ink cartridge.
E r r I E c	Ink Empty: color	Replace the color ink cartridge.
E r r P E	Paper End	Load (or reload) paper and press the  maintenance button.
E r r P J	Paper Jam	Press the  maintenance button to eject the jammed paper. (If you're using roll paper, press and hold the  roll paper button.) If you still see the error, turn off the printer, open the printer cover, and remove all paper, including any torn pieces. Then reload paper, turn the printer on, and press the  maintenance button to continue.
r O	Roll Out	Cut your picture(s) off the roll. Then press the  roll paper button to feed the paper back into the printer.
E r r I C	Install Cartridge	One of the ink cartridges is missing or not installed correctly. Remove the cartridge and reinstall it.
E r r S r	Service Required	Turn the printer off, wait a few seconds, and turn it back on. If you still see the error, contact EPSON as described in <i>Printer Basics</i> .
E r r C E	Card Error	The memory card is damaged or the data is corrupted. Try reformatting the card in your camera.
E r r F E	Fatal Error	Turn the printer off, wait a few seconds, and turn it back on. If you still see the error, contact EPSON as described in <i>Printer Basics</i> .

## Recommended Papers

### EPSON Borderless Premium Glossy Photo Paper

4" x 6" S041682

5" x 7" S041464

8" x 10" S041465

### EPSON Roll Paper

4" Premium Glossy Photo Paper S041302

4" Premium Semigloss Photo Paper S041329

EPSON Photo Stickers® S041144

## Optional Preview Monitor





The easy-to-use preview monitor (C12C860005) lets you confirm your layouts before you print. You don't need to print an index.



EPSON Stylus® Photo 825


# Quick Reference Printing Without a Computer

Here's how to use the control panel:

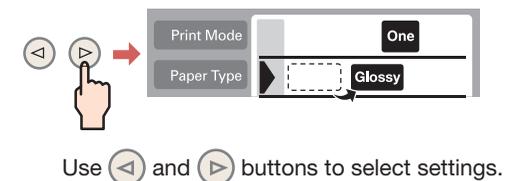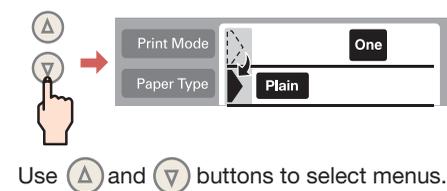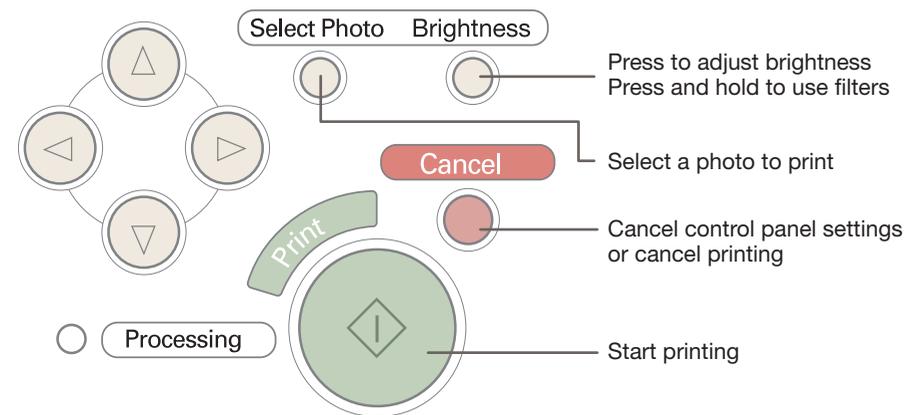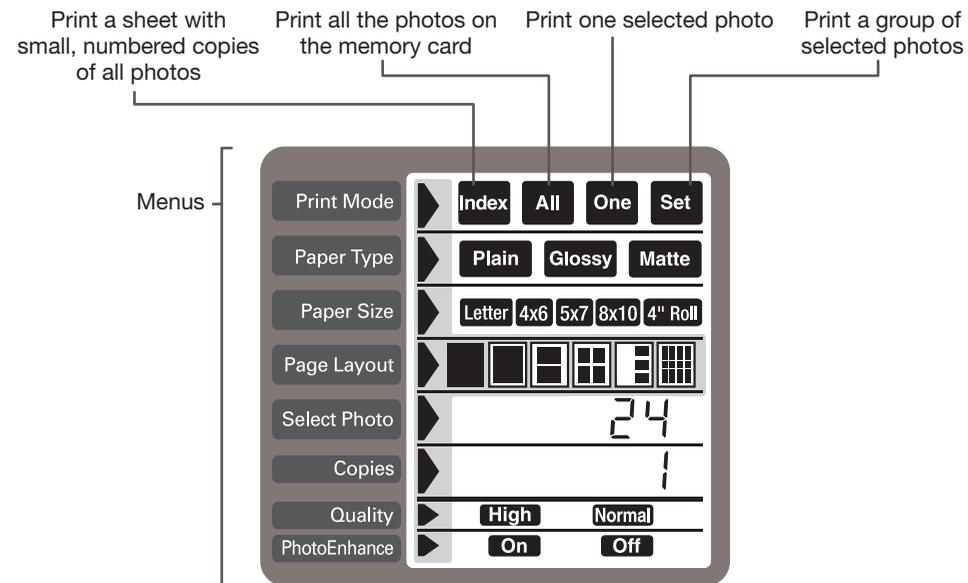


## Inserting a Memory Card

1. Insert your memory card into the appropriate adapter.

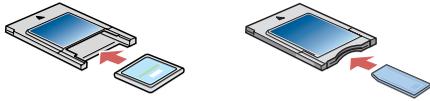

2. Insert the adapter into the card slot. Push it in firmly so the button pops out.

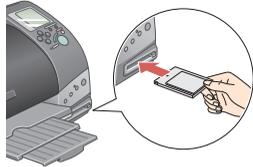


## Printing an Index

An index print includes small, numbered copies of all the pictures on the memory card.


1. Load plain paper.

Place the paper against the right side of the feeder

Slide the edge guide against the paper

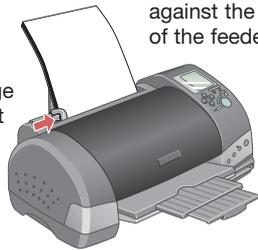


2. Make sure these settings appear on the control panel:

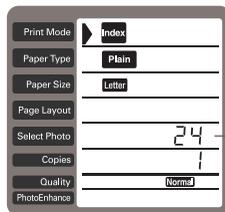

Number of photos on the card

3. Press the **Print** button.

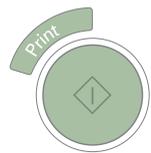

Your index is printed. Use it to select photos for reprinting and enlarging.




## Printing Snapshots

1. Load EPSON® Borderless 4" x 6" Premium Glossy Photo Paper.

Insert short edge first with the glossy side up

Slide the edge guide against the paper

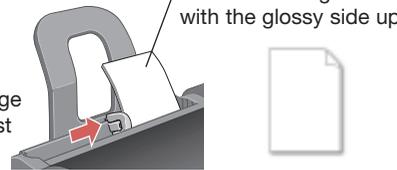

2. In the Print Mode menu, select **Set**.



3. In the Paper Type menu, select **Glossy**.



4. In the Paper Size menu, select **4x6**.



5. In the Page Layout menu, select  for borderless prints, or  for white borders.

6. In the Select Photo menu, press  to select the number of the photo you want to print. See the index print for photo numbers.



7. Press the round **Select Photo** button.

8. Repeat steps 6 and 7 for each photo you want to print.

9. Press the **Print** button.

## Adjusting Brightness

1. Press the round **Brightness** button.




2. Press the  button once or twice to make your pictures 1 or 2 steps lighter.

Press the  button once or twice to make them 1 or 2 steps darker (-1 or -2 is displayed).

3. Press the **Brightness** button again to lock in your selection.

## Printing with Special Effects

1. In the Copies menu, press and hold the **Brightness** button until **Filter No.** flashes on screen.

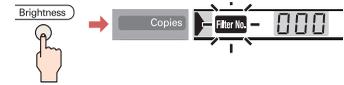

2. Press the  button to select from the special effect filters shown below.

3. Press the **Brightness** button again to lock in your selection.



no filter



1—black and white



2—sepia



3—high contrast



4—one level brighter



5—two levels brighter



6—one level darker



7—two levels darker



8—more vivid



9—sharper

## Printing Special Layouts

You can print  2,  3,  4, or  20 photos per page by selecting these settings on the Page Layout menu.



You can also...

Print multiple copies of the same image on one page.


Turn a normal landscape into a panoramic photo.



Take a portrait and print 8 different sizes on one sheet of paper.



Turn your favorite picture into photo stickers.

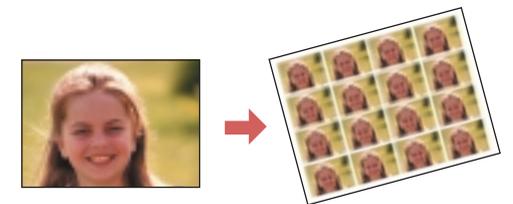

See your *Printer Basics* book for instructions.