

User Replaceable Items effective 2/1/2007

**PowerLite 1700c/1710c / 1705c/1715c**

<u>DESCRIPTION</u>	<u>PART NUMBER</u>
AC Power Cord (2-prong)	210 6756
Computer VGA cable	211 0978
Lamp (V13H010L38)	144 6801
USB (A/B) Cable	210 9210
Audio Adapter	208 9445
Remote Control	129 1754
Carrying Case with shoulder strap	144 0601
User's Guide for PL1700c and 1710c	CPD-21955
User's Guide for PL1705c and 1715c <b>For PL1705c and 1715c only</b>	CPD-21951
- 802.11 a/b/c wireless LAN card	2110778
- Screw (1) to secure the Wireless LAN Adapter (2 x 8 mm)	1302469
- Projector software CD for Windows and MAC for <b>PL1705c and 1715c only:</b>	3101444
- EMP NS Connection ver. 2.0 (Windows)	
- EMP NS Connection ver. 2.0 (MAC)	
- EMP SlideMaker2 ver. 1.13	
- EMP Monitor ver. 4.1	

Order user replaceable parts from an [Epson authorized parts distributor](#).

---- or ----

Locate an Epson Authorized Service Center to order user replaceable parts by using the "Help me find..." tool in the right column of the [Epson Support](#) home page.