

PowerLite 1716 /1720 / 1725 / 1730W / 1735W

<u>DESCRIPTION</u>	<u>PART NUMBER</u>
AC Power Cord (2-prong) 10'	1467676
Computer VGA cable	2110978
Lamp (V13H010L48)	1497432
USB 2.0 cable est. 6' (1720/1730 /1716 only)	2109210
USB 2.0 cable est. 10' (1725/1735 only)	2121991
Audio adapter (mini to RCA red and white audio)	2089445
Remote Control	1483291
<u>PL 1720 / 1725 / 1730W / 1735W</u> Carrying Case with shoulder strap	1495059
<u>PL1716</u> Soft Carrying Case	1516070
PL 1725 / PL1735W: Quick Wireless Connection USB Key ELPAP04 (V12H005M04)	2123567
Replacement air filter	V13H134A19
<u>For PL1725 / 1735W only</u>	
Wifi 802.11 a/b/c wireless LAN card ELPAP03 Model WN6501 CEP (V12H306P11)	2122537
	3103009
EMP NS Connection Ver. 2.50 Win/Mac <u>Windows only:</u> EMPSlidemaker2 Ver.120 EMP Monitor Ver 4.22	
PowerLite 1716 EMP NS Connection Ver. 2.50 EMP SlideMaker2 Ver. 1.30 EMP Monitor Ver. 4.22 (Windows & MAC)	3103687

Order user replaceable parts from an Epson authorized parts distributor.

<http://www.epson.com/cgi-bin/Store/AboutEpsonConnection.jsp>

---- or ----

Locate an Epson Authorized Service Center to order user replaceable parts
by using the "Help me find..." tool in the right column of the

Epson Support home page.

<http://www.epson.com/cgi-bin/Store/support/SupportIndex.jsp>