

PowerLite 400W / PowerLite 410W

<u>DESCRIPTION</u>	<u>PART NUMBER</u>
AC Power Cable (2-prong cable)	2123414
Lamp (V13H010L42)	2121325
Computer VGA Cable	2110978
Remote Control	1456641
Filter	V13H134A13
CD/User's Guide (PL 400)	CPD-25024

Order user replaceable parts from an [Epson authorized parts distributor](#).

<http://www.epson.com/cgi-bin/Store/AboutEpsonConnection.jsp>

---- or ----

Locate an Epson Authorized Service Center to order user replaceable parts by using the "Help me find..." tool in the right column of the

[Epson Support](#) home page.

<http://www.epson.com/cgi-bin/Store/support/SupportIndex.jsp>