

User Replaceable Items effective 12/01/2005

PowerLite 505c / 703c / 715c

<u>DESCRIPTION</u>	<u>PART NUMBER</u>
AC Power Cable	201 7328
A/V Cable (RCA Plugs)	600 2366
Computer Cable (VGA Cable)	202 2604
PS/2 Mouse Cable	600 2771
USB Mouse Cable	600 2770
Lamp (PowerLite 505c/703c/715c) (ELPLP14)	600 5199
Air Filter (S)	600 3103
Remote Control (PowerLite 505c/715c)	600 4615
Remote Control (PowerLite 703c)	600 2911
Lens Cap with String	600 2781
User's Manual (PowerLite 505c/715c)	CPD-11736
User's Manual (PowerLite 703c)	CPD-11727
Compact Flash (8MB) Memory Card (PowerLite 505c/715c)	600 4539
Compact Flash Card Adapter (PowerLite 505c/715c)	600 4540
Easy MP Software (PowerLite 505c/715c)	600 5253
Black, Soft Carrying Case (Portfolio style) (no shoulder strap)	754 4082

Order user replaceable parts from an [Epson authorized parts distributor](#).

---- or ----

Locate an Epson Authorized Service Center to order user replaceable parts by using the "Help me find..." tool in the right column of the [Epson Support](#) home page.