

User Replaceable Items effective 12/01/2005

PowerLite 50c / 70c / 51c / 71c

<u>DESCRIPTION</u>	<u>PART NUMBER</u>
AC Power Cable	201 7328
RCA AV Cable	600 2366
Computer Cable (VGA Cable)	600 3951
USB Mouse Cable	600 2770
PS/2 Mouse Cable	600 2771
Lamp- PowerLite 50c/70c (ELPLP13)	600 4000
Lamp-PowerLite 51c/71c (V13H010L16)	600 7571
Remote Control	600 4931
Lens Cap with String	600 4112
User's Manual (50c/70c)	CPD-11578
User's Manual (51c/71c)	CPD-13440
Black, Carrying Case with shoulder strap (inside compartments for projector and cables)	600 5022

Order user replaceable parts from an [Epson authorized parts distributor](#).

---- or ----

Locate an Epson Authorized Service Center to order user replaceable parts by using the "Help me find..." tool in the right column of the [Epson Support](#) home page.