


START HERE

Locate everything you'll need

For most setups, you'll need just these two cables:

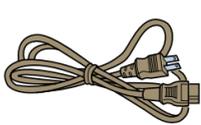

power cord




computer cable

You won't need to install any software.

Connect the projector to your laptop

- 1 Make sure your projector and laptop are turned off.
- 2 Connect one end of the computer cable to the **Computer** port on the projector.

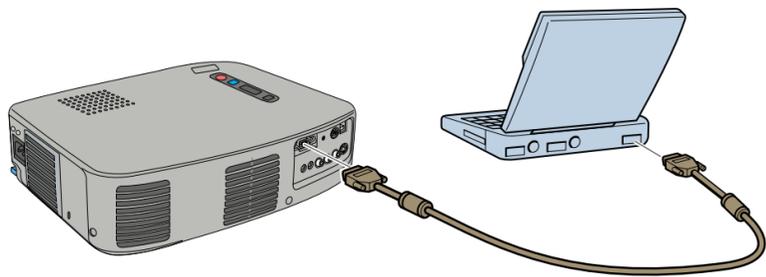


- 3 Connect the other end to your laptop's video or  monitor port.



Follow these instructions to connect the projector to your laptop. To connect other devices, such as a DVD player or desktop PC, see your *User's Guide*.


Plug in your projector

Connect the power cord to your projector and plug the other end into a grounded outlet.

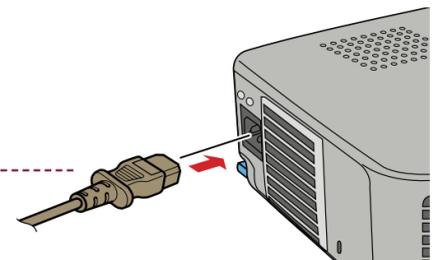

Turn on your equipment

- 1 Turn on the projector first. To do so, press the red **Power** button. The  power light flashes green as the projector warms up, and the projection lamp comes on in about 30 seconds.
- 2 Turn on or restart your laptop. (Windows® only: If you see a New Hardware Wizard screen, click **Cancel**.)

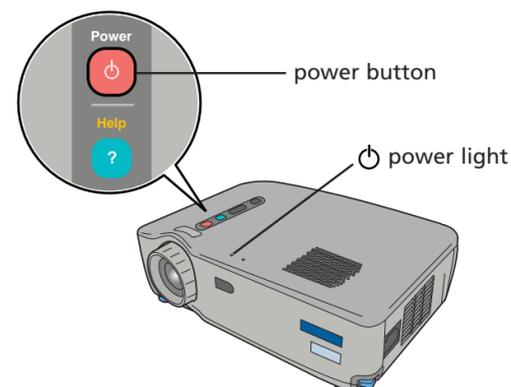


Caution: Before unplugging the projector...

Press the red **Power** button twice, then let the projector cool while the  power light flashes orange (about a minute). Once the light stops flashing and stays on, it's safe to unplug the projector.

Never unplug the projector when the  power light is green or flashing orange.


Adjust the image

- 1 Remove the lens cap and rotate the focus ring to sharpen the image.

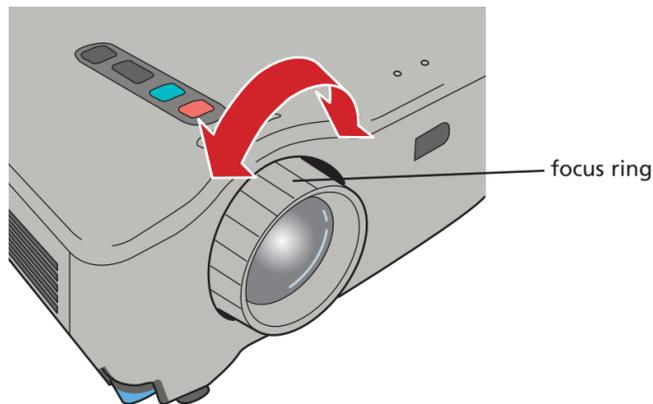

Note: If you see a blank screen  after focusing, see the box below. Otherwise, continue with Step 2 in the next column.

- 2 Raise the image as needed. To do this, pull up the blue foot release levers and lift the front of the projector. Once the image is positioned where you want it, release the levers to lock the feet in position.

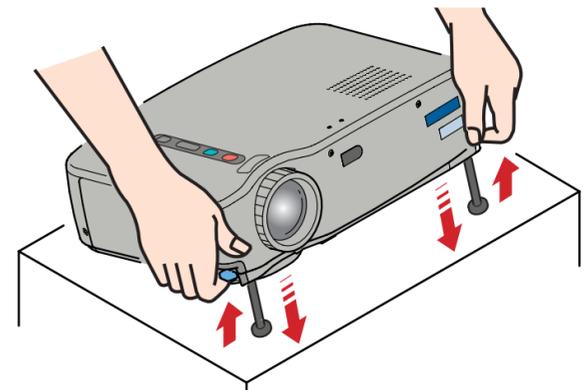

- 3 If your image looks like  or , you've placed the projector at an angle to the screen. Move it directly in front of the center of the screen, facing the screen squarely.

- 4 If your image looks like  or , press the + or - side of the **Keystone** button to correct the shape of the image.

If You See a Blank Screen

If you see a blank screen or the **No Signal** message after turning on your laptop, check the following:

- Make sure the  power light is green and not flashing and the lens cap is off.
- Try turning off the laptop and restarting it.
- If you've connected more than one computer and/or video source, you may need to press the **Source** button on top of the projector. (Allow a few seconds for the projector to sync up after pressing it.)



If these suggestions don't work, try the procedure for your system in the following sections. For more troubleshooting information, see your *User's Guide*.

For a Windows laptop:

- Press the function key that lets you display on an external monitor. It may have an icon such as , or it may be labelled **CRT/LCD**. You may have to hold down the **Fn** (function) key while pressing it. (Allow a few seconds for the projector to sync up after pressing the key.) Check your laptop's manual or online help for details.


On most systems, the  or **CRT/LCD** key let you toggle between the LCD screen and the projector, or display on both at the same time.

- You might need to use the Display utility in the Control Panel to enable both the LCD screen and external monitor port.

For a PowerBook® with OS 9.x or earlier:

1. From the Apple menu, select **Control Panels**, then click **Monitors and Sound**.

2. Click the **Arrange** icon.

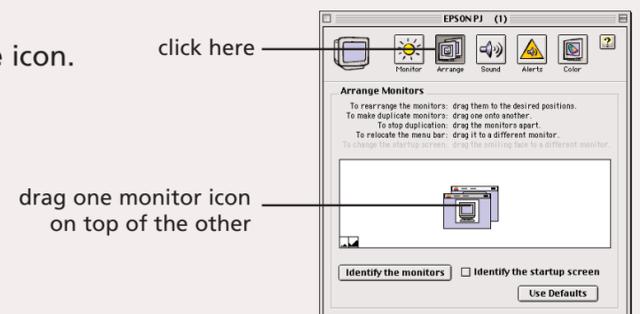

3. Drag one monitor icon on top of the other. This lets you display on the projector screen as well as the LCD screen.


For a PowerBook with OS X:

1. From the Apple menu, select **System Preferences**, then click **Displays**.

2. Click **Detect Displays** to display part of your desktop on the projector screen.

3. To display the entire desktop on both your projector screen and LCD screen, click the **Arrange** tab. (If you don't see this tab, check to see if there is a window hidden by another window on your screen.)

4. Click **Mirror Displays**. One of the monitor icons automatically moves on top of the other.

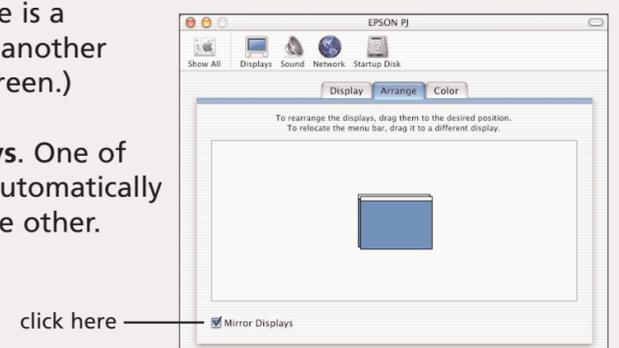

EPSON PowerLite 51c/71c