

User Replaceable Items effective 12/01/2005

PowerLite 53c / 73c

PowerLite 54c / 74c

<u>DESCRIPTION</u>	<u>PART NUMBER</u>
AC Power Cable	208 0118
Lamp (V13H010L21) (53c / 73c)	121 4370
Lamp (V13H010L27) (54c / 74c)	H010L27
Remote Control (53c / 73c)	600 8203
Remote Control (54c / 74c)	126 5603
Lens Cap with String	123 4295
Computer VGA Cable	207 1748
RCA A/V Cable	206 8500
USB Mouse Cable	110 1569
Navy Blue Carrying Case with handle and shoulder strap (outside compartment for cables)	112 4164

Order user replaceable parts from an [Epson authorized parts distributor](#).

---- or ----

Locate an Epson Authorized Service Center to order user replaceable parts by using the “Help me find...” tool in the right column of the [Epson Support](#) home page.