

PowerLite 5600 / 7600 / 7700

<u>DESCRIPTION</u>	<u>PART NUMBER</u>
AC Power Cable	201 7328
RCA Audio Cable	600 2506
RCA Video Cable	600 2507
Computer Cable(VGA Cable)	202 2604
Audio Cable (3.5mm plugs)	202 2956
USB Mouse Cable	600 4964
PS/2 Mouse Cable	600 4965
Lamp (ELPLP12)	600 4332
Remote Control	600 4935
Lens Cap with String	600 2791
User's Manual	900 1078
ELP Link V	600 4632

Order user replaceable parts from an [Epson authorized parts distributor](#).

---- or ----

Locate an Epson Authorized Service Center to order user replaceable parts by using the “Help me find...” tool in the right column of the [Epson Support](#) home page.