

PowerLite 5000 / 7000

<u>DESCRIPTION</u>	<u>PART NUMBER</u>
AC Power Cable	201 7328
A/V Cable (RCA Plugs)	201 6048
MAC Adapter Set	202 3359
Computer Cable (VGA Cable)	202 2604
Audio Cable (3.5mm plugs)	202 2956
Main Cable	202 3367
PS/2 Mouse Cable	202 3368
Serial Mouse Cable	202 3369
Mac Mouse Cable	202 3370
Serial Cable	202 3642
Mac Serial Cable	202 3643
Lamp (ELPLP03)	103 7212
Remote Control	103 3569
Lens Cap with String	103 1941
3.5" FD Set (PowerLite 5000)	202 4409
3.5" FD Set (PowerLite7000)	754 4006
User's Manual Set (PowerLite 5000)	400 6463
User's Manual Set (PowerLite 7000)	754 1050

Order user replaceable parts from an [Epson authorized parts distributor](#).

---- or ----

Locate an Epson Authorized Service Center to order user replaceable parts by using the "Help me find..." tool in the right column of the [Epson Support](#) home page.