

PowerLite 8150i / 8150NL / 8200i / 8200NL

<u>DESCRIPTION</u>	<u>PART NUMBER</u>
AC Power Cable	201 7328
Audio Cable (RCA)	600 2506
Video Cable (RCA)	600 2507
Computer Cable (VGA Cable)D-Sub15,D -Sub15	202 2604
Computer Cable (VGA Cable)D-Sub15,5BNC	600 3021
Mac Adapter Set	202 3359
Audio Cable	202 2956
Main Cable	202 3367
PS/2 Mouse Cable	202 3368
Serial Mouse Cable	202 3369
Mac Mouse Cable	202 3370
Mac Serial Cable	202 3643
Serial Cable	202 3642
USB Mouse Cable	600 2510
Lamp (ELPLP11)	600 3829
Remote Control (8150i)	600 4616
Remote Control (8200i)	600 4935
Lens Cap with String	600 2791
User's Guide (8200i)	CPD-13534
EMP-8150 Owner's Manual	900 1260
Easy MP.net User's Guide Set	900 1265
Compact Flash Memory Card (32MB)	600 4093
Compact Flash Memory Card (16MB)	600 4679
Compact Flash Card Adapter	600 4540
EasyMP.net CD-ROM with ELP Link	600 4766

Order user replaceable parts from an [Epson authorized parts distributor](#).

---- or ----

Locate an Epson Authorized Service Center to order user replaceable parts by using the "Help me find..." tool in the right column of the [Epson Support](#) home page.