

User Replaceable Items effective 12/01/2005

**PowerLite 8000i / 8000NL / 8100i / 8100NL
9000i / 9000NL / 9100i / 9100NL**

<u>DESCRIPTION</u>	<u>PART NUMBER</u>
AC Power Cable	201 7328
Audio Cable (RCA)	600 2506
Video Cable (RCA)	600 2507
Computer Cable (VGA Cable)	202 2604
Mac Adapter Set	202 3359
Audio Cable	202 2956
Main Cable	202 3367
PS/2 Mouse Cable	202 3368
Serial Mouse Cable	202 3369
Mac Mouse Cable	202 3370
Mac Serial Cable	202 3643
Serial Cable	202 3642
USB Mouse Cable	600 2510
Lamp-PowerLite 8000i 9000i (ELPLP08)	600 2132
Lamp-PowerLite 8100i/9100i (ELPLP11)	600 3829
Remote Control (8000i/9000i)	754 4074
Remote Control (8100i/9100i)	600 4935
Lens Cap with String	600 2791
User's Manual (8000i/9000i)	754 1921
User's Manual (8100i/9100i)	CPD-11054R1
PowerLite 8000i/9000i (ELP Link IV)	754 4073
PowerLite 8100i/9100i (ELP Link V)	600 4632

Order user replaceable parts from an [Epson authorized parts distributor](#).

---- or ----

Locate an Epson Authorized Service Center to order user replaceable parts by using the "Help me find..." tool in the right column of the [Epson Support](#) home page.