


# Epson® PowerLite® Cinema 200 Update


Your projector includes an additional picture quality setting not described in your *User's Guide*. If you notice faint vertical bands in the picture, you can eliminate them by following these steps:

1. Turn on the projector and let it warm up for about 10 minutes.
2. Darken the room lights. You do not need to project an image from a video source to perform this adjustment.
3. Press the **Menu** button on the remote control.
4. Use the **▲▼** arrow buttons to highlight the **Setting** menu, press **↵** to select it, then open the **Operation** menu and select **LCD Panel Adjustment**.

You see this screen, which lets you correct each of the three RGB (red, green, blue) color components:

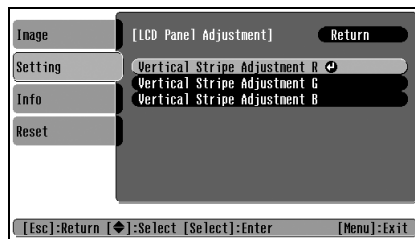


5. Select **Vertical Stripe Adjustment R**. You see this screen:

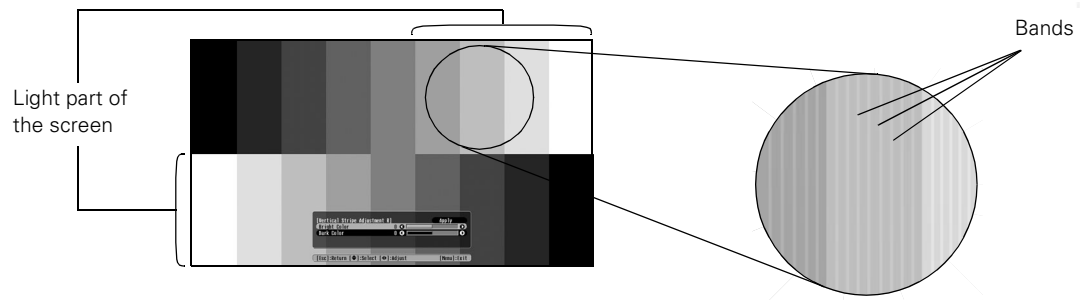

6. Look at the screen to determine where the vertical bands are more visible—in the light or dark part of the screen. This is the part you should adjust first.

**Note:** The banding (if visible) appears within each bar or stripe on the screen.

7. If the bands are more visible in the light part of the image, select **Bright Color**—otherwise, select **Dark Color**.
8. Move the slider bar until the bands disappear, then repeat the adjustment for the other (light or dark) part of the image.
9. Once both adjustments are done, highlight **Apply** and then press the  button.
10. Repeat steps 5 through 9 to adjust the green (G) and blue (B) color components.
11. When done, press the **Menu** button to exit the menu system.

Epson is a registered trademark of SEIKO EPSON CORPORATION.

PowerLite is a registered trademark of Epson America, Inc.

© 2004 Epson America, Inc. 3/04