

User Replaceable Items effective 12/01/2005

PowerLite Cinema 200 / 200+/ 500

<u>DESCRIPTION</u>	<u>PART NUMBER</u>
AC Power Cable	208 0118
Lamp (V13H010L28)	H010L28
USB Mouse Cable	110 1569
Remote Control (Cinema 200 / 200+)	127 0588
Remote Control (Cinema 500)	127 0589
Lens Cap Unit	126 3267
Cinema Color CD Ver. 1.10 (Cinema 200 and 500)	302 1639
Cinema Color CD Ver. 1.20 (Cinema 200+)	3022370
Rear Cover (Cinema 500)	126 7925

Order user replaceable parts from an [Epson authorized parts distributor](#).

---- or ----

Locate an Epson Authorized Service Center to order user replaceable parts by using the “Help me find...” tool in the right column of the [Epson Support](#) home page.