


# Epson PowerLite® Home 10+ Quick Setup



## 1 *Unpack the projector*

Your projector comes with the following items:

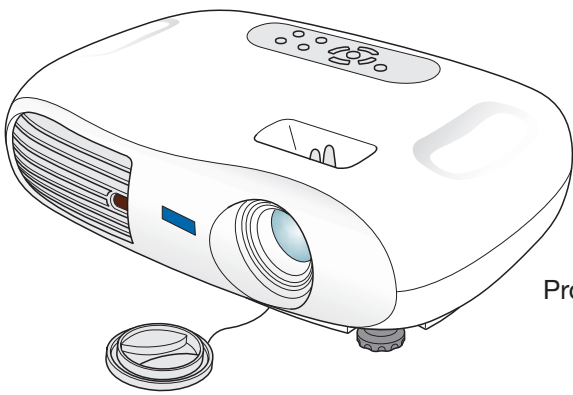

Projector




User's Guide



Remote control



Rubber feet

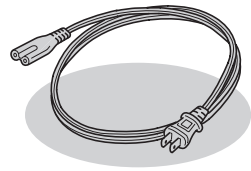


Power cord

## 2 *Set up the remote control*

Pull out the insulating tape to remove it from the battery holder.


The remote control is ready for use.

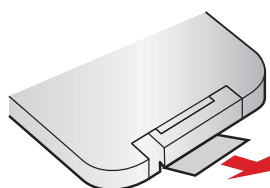

# 3 *Connect your equipment*

The projector has 4 types of connections, as shown below. Each one is color-coded and requires a different type of cable (not included). You can connect up to 4 video sources and use the remote control to switch from one to the other.

- Check the connectors on your video equipment. If more than one connection is available, choose the one that provides the best quality. For example, component video produces higher quality images than S-video or composite video.
- Make sure you have the right cable for the connection you want to use, and the cable is long enough for your setup. If you need a cable longer than the standard 6 to 10 feet, you may need a distribution amplifier.
- Before you connect your equipment, make sure everything is turned off.
- Connect your video equipment to the projector using any of the available connections shown below.

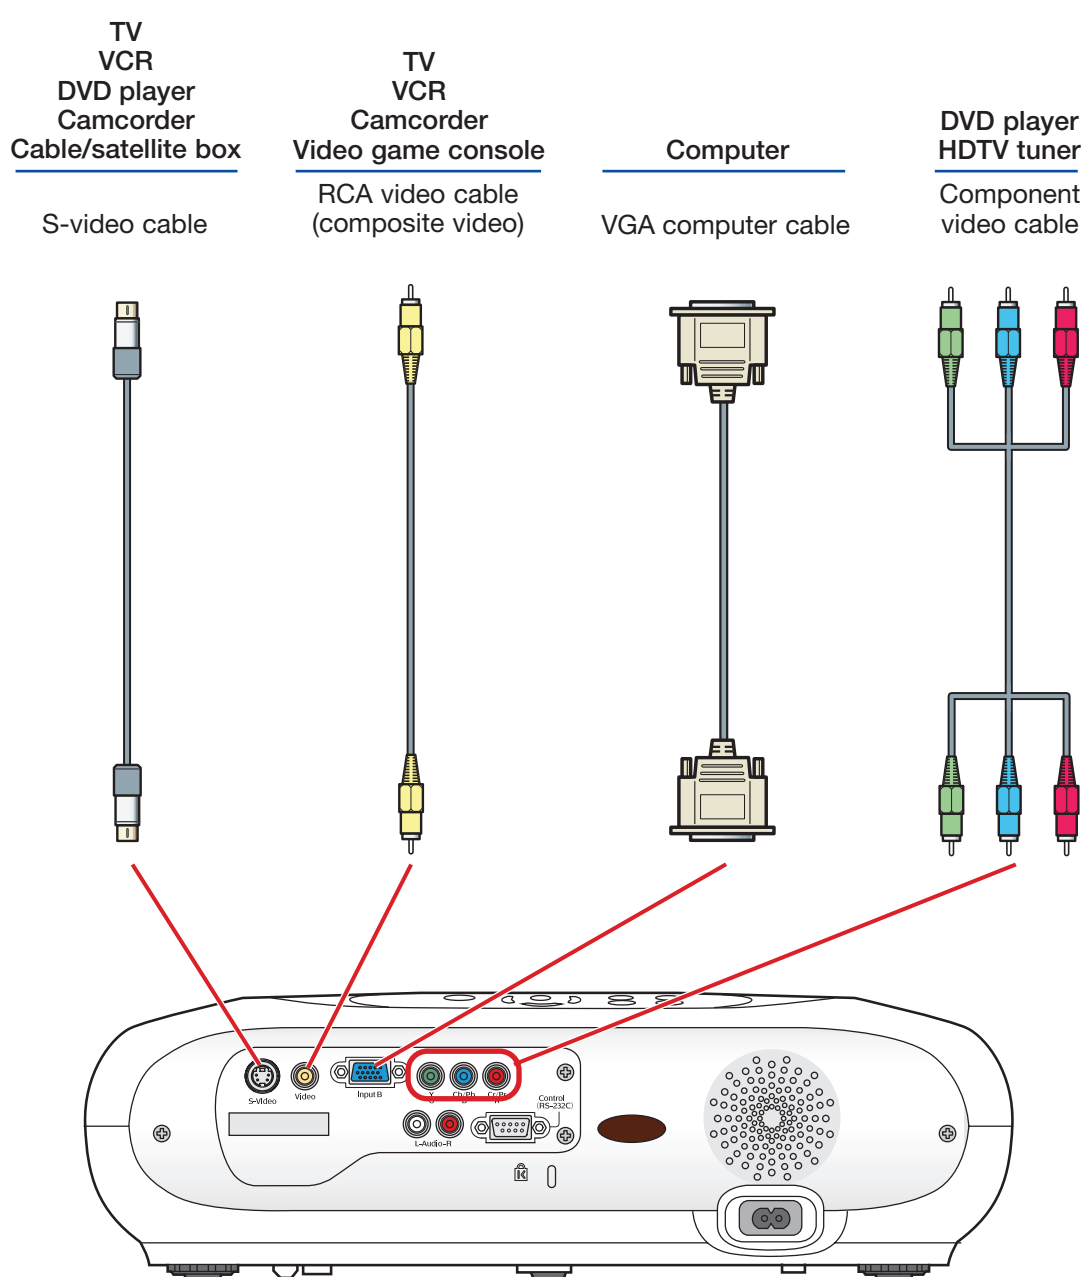


**NOTE** To play back audio through the projector, you can connect an audio cable from your video device to the audio-in ports on the projector. See the *User's Guide* for instructions.

# Choosing a location


The easiest way to set up your projector is to place it on a table in front of your screen or wall, or on a high shelf behind you. See the *User's Guide* for other ways of setting up the projector.

## Table

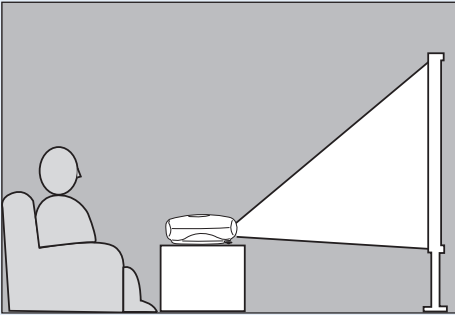


Convenient for temporary front projection. Ideally, place the projector directly in front of the screen, facing the screen squarely. The base of the lens should be level with the bottom of the screen.


## Shelf

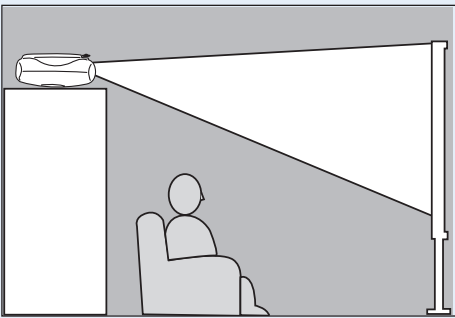

For temporary or permanent installation on a high shelf. Attach the rubber feet and place the projector upside-down. After you turn on the projector, choose **Front/Ceiling** for the Projection option in the Setting menu. See the *User's Guide* for details.

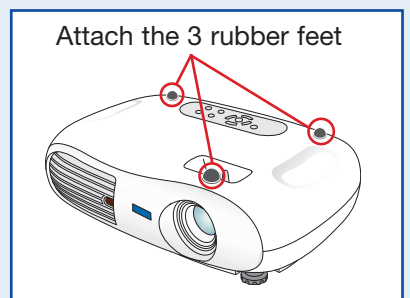


The distance between the projector and the screen determines the size of the image. The diagram below shows approximately how big your image will be, based on where you set up the projector.

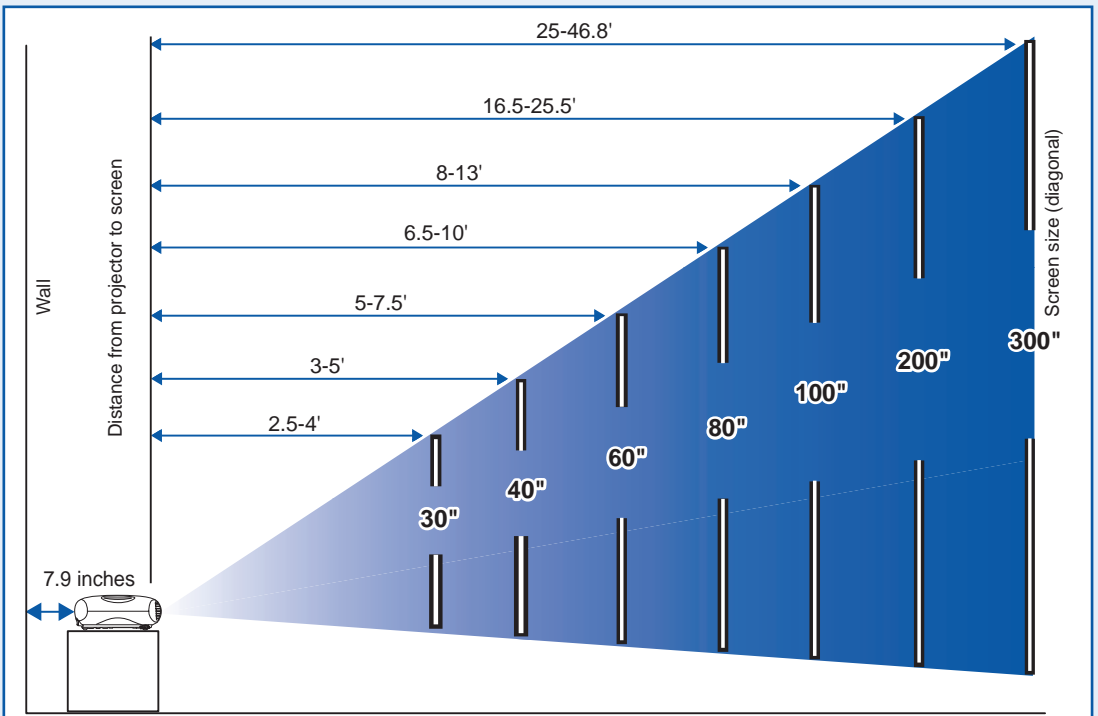


# 4 Plug in and turn on


- 1 Remove the lens cover.

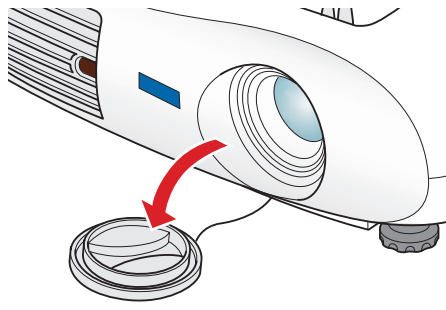

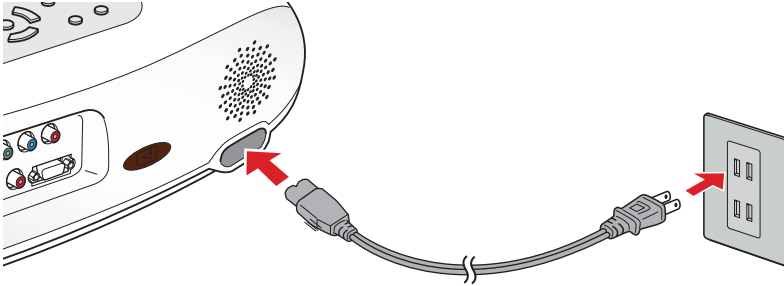

- 2 Connect one end of the power cord to the projector and plug the other end into an electrical outlet.

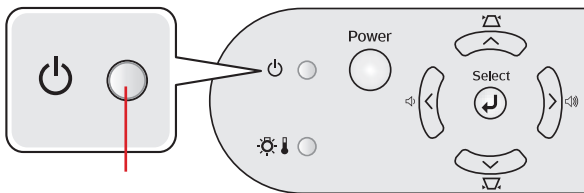


The  power light turns orange.




 


- 3 Turn on your equipment. (If you are connecting to a computer, don't turn it on yet. Wait until you've turned on the projector.)

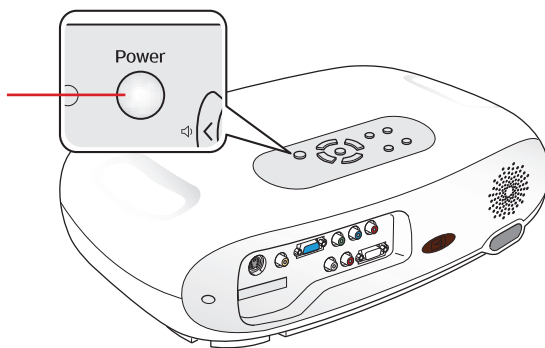
- 4 Press the  **Power** button on the projector or remote control. You hear a beep, the  power light flashes green, and the projector lamp comes on in about 45 seconds.



The projector automatically detects your video source and begins projecting.

## Turning off the projector


- 1 When you're finished using the projector, turn off your video equipment.
- 2 Press the  **Power** button on the projector or remote control.
- 3 When you see the confirmation message, press the  **Power** button again. The  power light flashes orange as the projector cools down.
- 4 When the  power light is a steady orange, unplug the projector.
- 5 Store the remote control in its holder on the back of the projector. (Part of the remote control will stick out when it's fully inserted.)

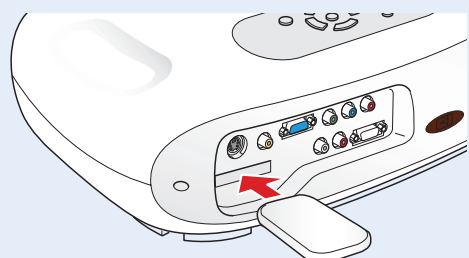


**Caution:** Never unplug the projector when the  power light is green or flashing orange.



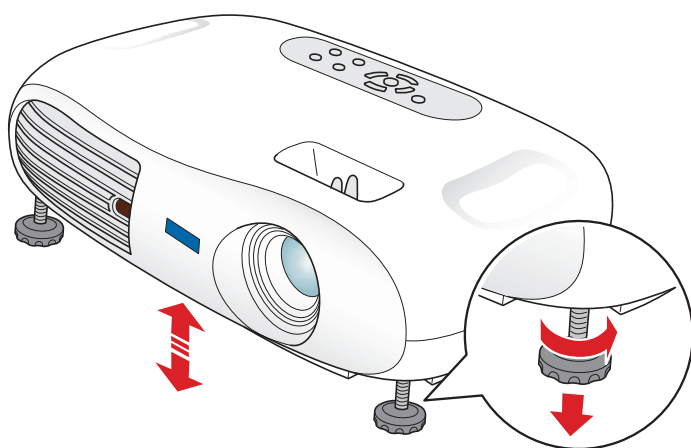

# 5 Adjust the image

- 1 To raise the image, turn the projector's front feet.

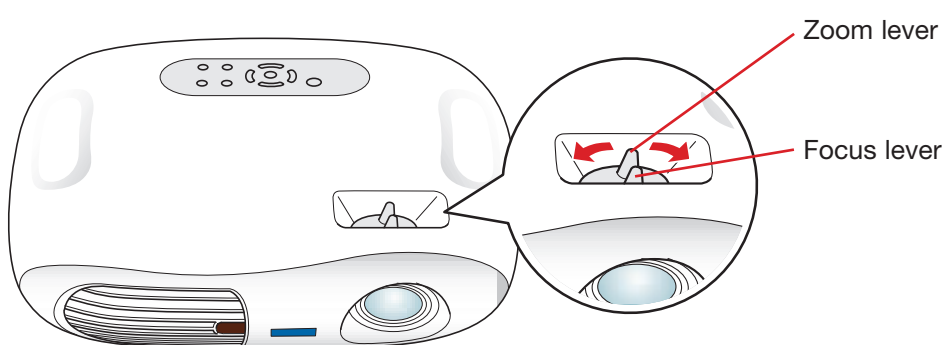


- 2 Rotate the focus ring to sharpen the image. Rotate the zoom ring to reduce or enlarge the image.



- 3 If your image looks like  or , first make sure the projector is facing the screen squarely. If necessary, press the  and  buttons on the projector's control panel until the image is corrected.

- 4 To select the best color mode, press the **Color Mode** button on the remote control repeatedly to move through the options.

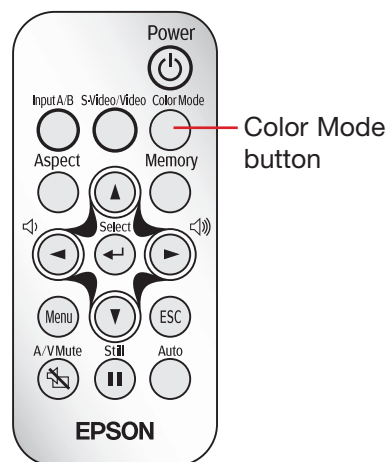

See your *User's Guide* for more information about image adjustments.

## Where to get help

### Telephone Support Services

To use the Epson® PrivateLine® Support service, call (800) 637-7661 and enter the PIN on the included Epson PrivateLine Support card. This service is available 6 AM to 6 PM Pacific Time, Monday through Friday, for the duration of your warranty period. You may also speak with a projector support specialist by dialing one of these numbers:

**U.S.:** (562) 276-4394, 6 AM to 6 PM, Pacific Time, Monday through Friday

**Canada:** (905) 709-3839, 6 AM to 6 PM, Pacific Time, Monday through Friday

Toll or long distance charges may apply.

### Electronic Support Services

Epson provides technical assistance through electronic support services 24 hours a day at <http://support.epson.com>.

### Accessories


You can purchase video cables, screens, carrying cases or other accessories from Epson at (800) 873-7766 or by visiting the Epson Store<sup>SM</sup> at [www.epsonstore.com](http://www.epsonstore.com) (U.S. sales only). In Canada, call (800) 463-7766 for dealer referral.

# Troubleshooting

If you don't find the answer to your problem here, see the *User's Guide* for more troubleshooting tips.

## The image doesn't fill the screen.

- Try adjusting the zoom ring.
- If possible, place the projector farther away from the screen.
- Press the **Aspect** button to move through the projector's aspect ratio settings: **Normal**, **Squeeze**, and **Zoom**. Experiment to see which setting looks best on your screen.

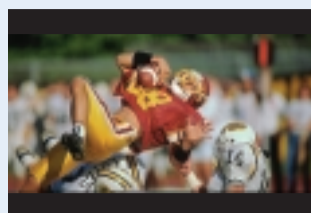


## The colors on your screen don't look right.

- Press the **Color Mode** button on the remote control to move through the different color mode settings.
- Check your cable connection. If your cable is not securely connected at both ends, some colors may not appear.
- Make sure the projector has detected the correct video source. Press one of these buttons on the remote control:





**Input A/B** Toggles between component video and computer signals.

**S-Video/Video** Toggles between S-video and composite video signals.

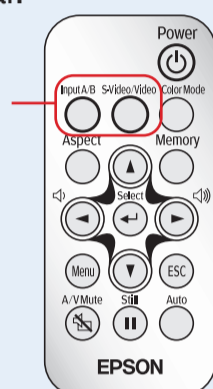- Adjust the settings under the **Picture Quality** option in the projector's **Image** menu. See the *User's Guide* for details.




## Only part of the image is displayed, or the image is distorted.

 - Try selecting a different aspect ratio by pressing the **Aspect** button.
- If the image is distorted or contains interference, make sure the cable is securely connected.
- If your image looks like  or , press the  or  buttons on the projector's control panel to correct the problem.



## Nothing is displayed, or you see a "No signal" message.

- Press the **Source** button on the projector or the **Input A/B** or **S-Video/Video** button on the remote control until you see your picture.
- Check the cable connection.
- Make sure your video equipment is on. If it isn't, turn your projector off. Then turn it on again after you've turned on your video equipment.

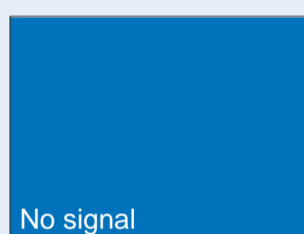

## The remote control doesn't work.

- Make sure you've removed the battery insulating tape. See section 2 on the front of this sheet.
- Make sure you're not farther than 20 feet from the projector. Also, point the remote control at one of the projector's two infrared receivers.
- Move the projector and remote control away from strong sunlight and turn off any fluorescent lighting.
- Remove the clear film covering the infrared receivers.

