

User Replaceable Items effective 2/1/2007

**PowerLite S4**

| <b><u>DESCRIPTION</u></b>                                       | <b><u>PART NUMBER</u></b> |
|---|---------------------------|
| AC Power Cable (2-prong cable)                                  | 210 6756                  |
| <b>PL S4</b> Lamp (V13H010L36)                                  | 144 1935                  |
| Computer VGA Cable  | 207 1748                  |
| Projector Remote Control  | 130 6200                  |
| Projector Software CD (includes User's Guide and Adobe Acrobat) | CPD-21361                 |
| Soft (black) Carrying Case with shoulder strap                  | 143 6644                  |

Order user replaceable parts from an [Epson authorized parts distributor](#).

---- or ----

Locate an Epson Authorized Service Center to order user replaceable parts by using the "Help me find..." tool in the right column of the [Epson Support](#) home page.