

Banding Adjustment

for

Epson® SecurColor™ Inkjet Printer (TM-C3400)



 
By: Ernie Villarreal
Kelly Ng

Rev. C


NOTE: Fixing the Banding is NOT perfect, but will help considerably. Please use qualified media.

To adjust print banding:

1. Right-click the printer icon in Printers and Faxes and go to "Printing Preferences".
2. Find the "Maintenance and Utilities" tab across the top.
3. Click "Print Head Alignment".

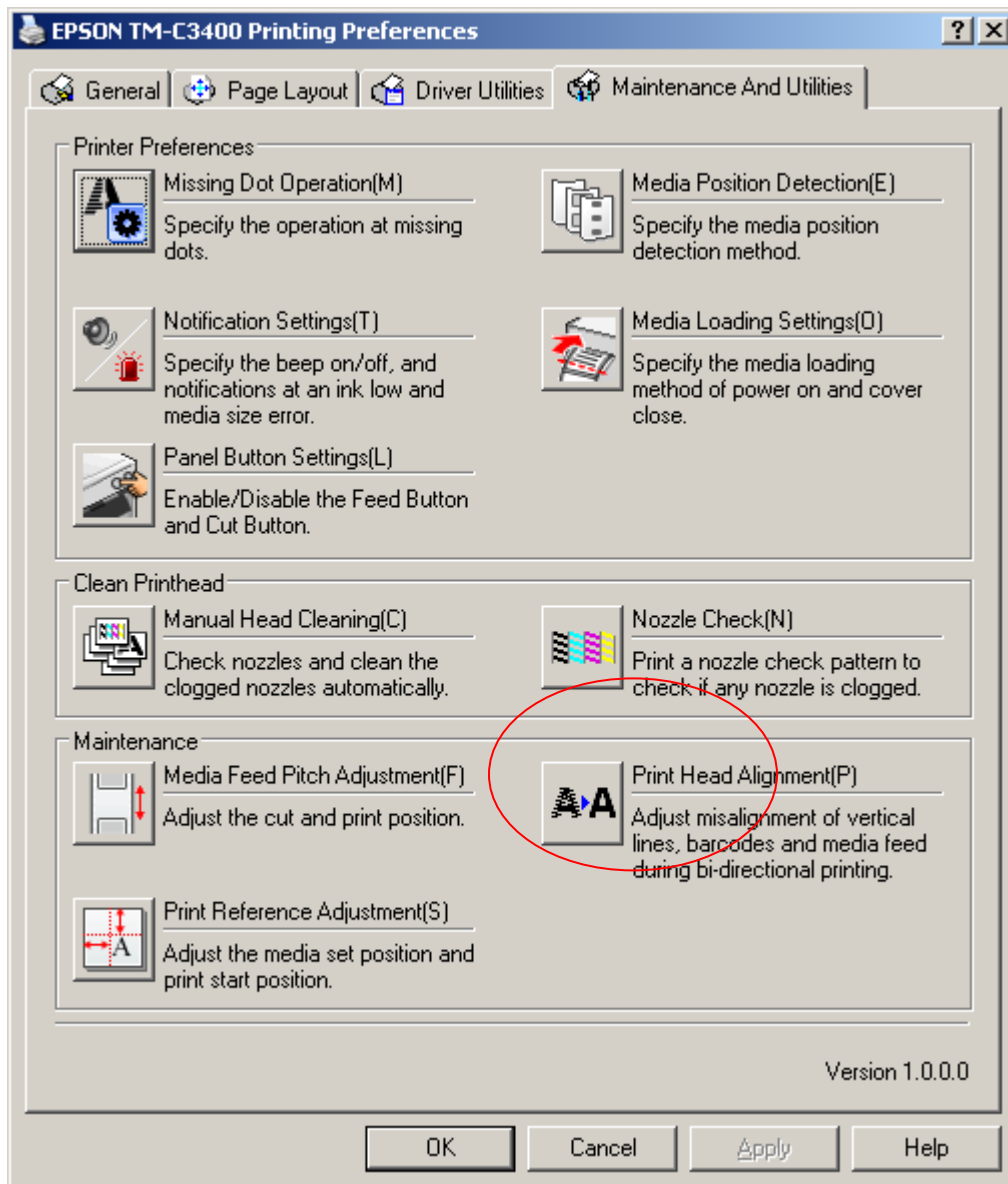

4. Select "Media Feed Adjustment (Not print adjustment sheet)."

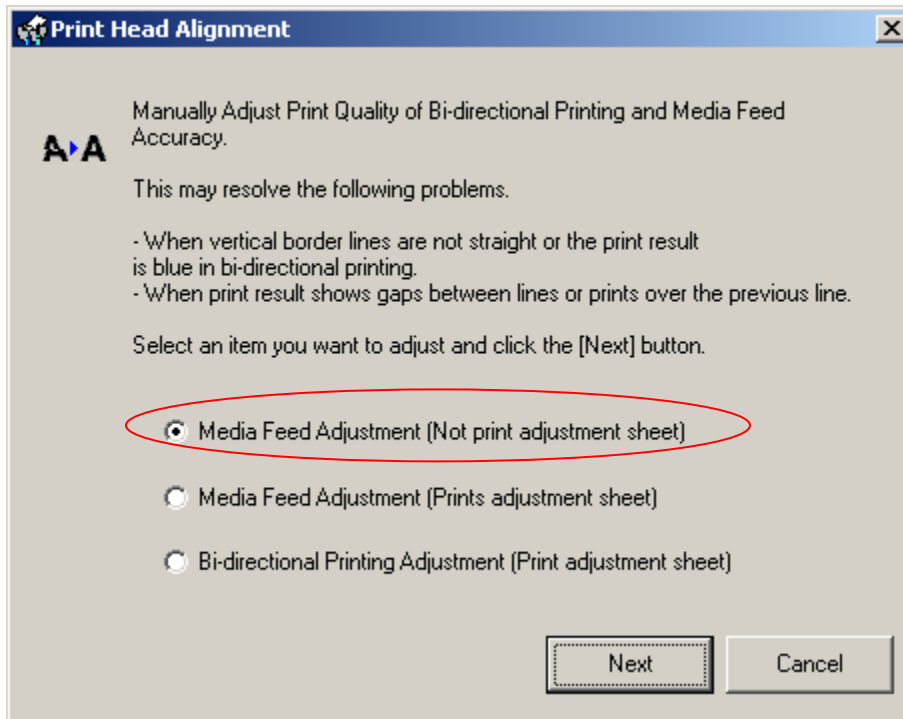

5. If the banding is overlapping, select +1 or +2, etc. If you have white space, select -1 or -2, etc. Click OK. Print out the image or label, and see how much has changed. You will need to keep adjusting until you are happy with the printout.

