

Creating New Media Layouts

for


**Epson® SecurColor™ Inkjet Printer
(TM-C3400)**



By: Ernie Villarreal
Kelly Ng

To create new media layouts:

1. Right-click the printer icon and go to "Printing Preferences".
2. You will automatically be on the "General" tab
3. Click "Add/Del...(W)".

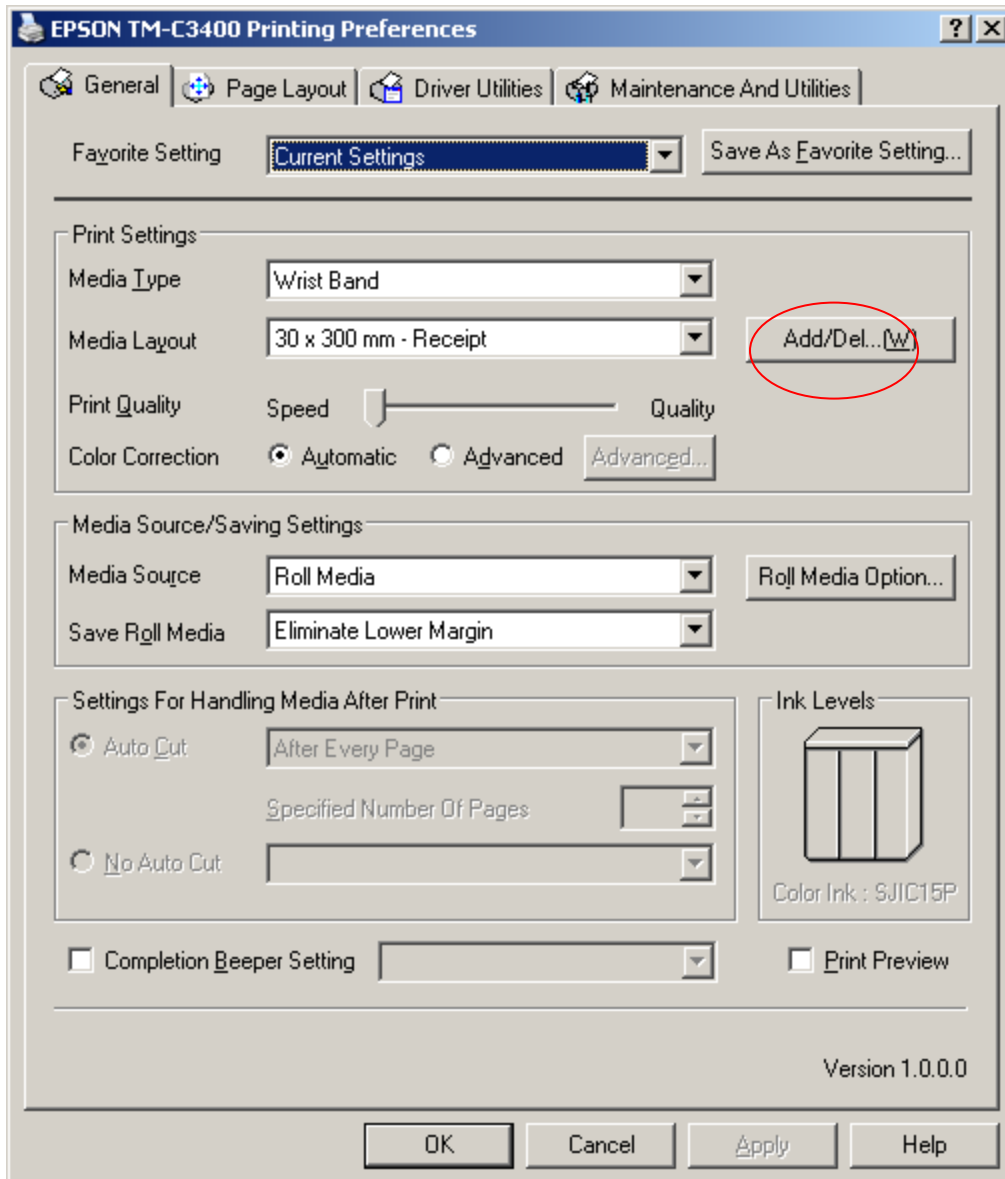

4. In this new window, you can select any “Media Layout” and modify to your liking.

User Defined Media Layout

Media Layout :


- 108 x 174.8 mm - Die-cut Label
- 105 x 74 mm - Receipt
- 86 x 54 mm - Receipt
- 83 x 297 mm - Full-page Label
- 80 x 100 mm - Die-cut Label
- 50 x 35 mm - Die-cut Label
- 50 x 32 mm - Die-cut Label
- 30 x 300 mm - Receipt**

Media Layout Name :

30 x 300 mm - Receipt

Media Type :

Receipt

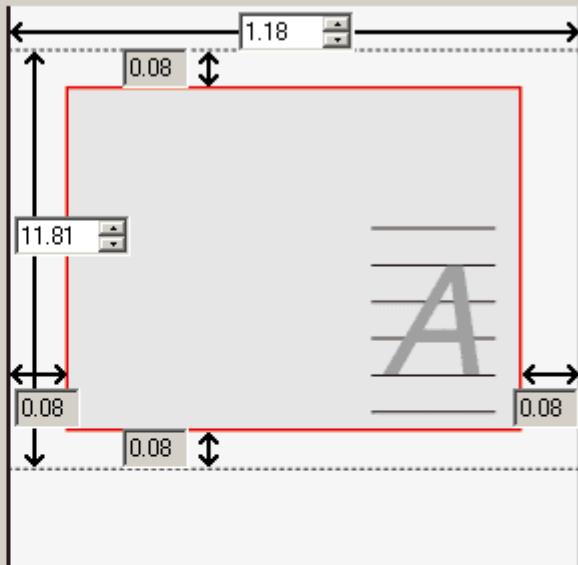

Specify [No Detection] in [Media Position Detection Settings] under [Printer Utilities].

Layout Information (inch)

Media Width	1.18	(1.18 - 4.25)	Media Length	11.81	(0.59 - 44.00)
Label Width		(1.00 - 4.25)	Label Length		(0.59 - 44.00)
Labels Gap		(0.12 - 0.24)	BM Interval		(0.59 - 44.00)

Add Delete OK Cancel Help

5. Select a “Media Layout” and change the size. Give it a “Media Layout Name” and “Type”. Once you finish click “Add” to add the New Media Layout.
6. Click OK.

