

# **Changing Edge Detection**

**for**

## **Epson® SecurColor™ Inkjet Printer (TM-C3400)**




By: Ernie Villarreal  
Kelly Ng

Rev. C

Changing from one method of edge detection to another is a simple process.

**\*You can change the media settings with media in the printer and the front cover closed or with no media in the printer and the front cover closed.**

1. Right-click the printer icon and go to “Printing Preferences”.
2. Find the “Maintenance and Utilities” tab across the top.
3. Select “Media Position Detection”.

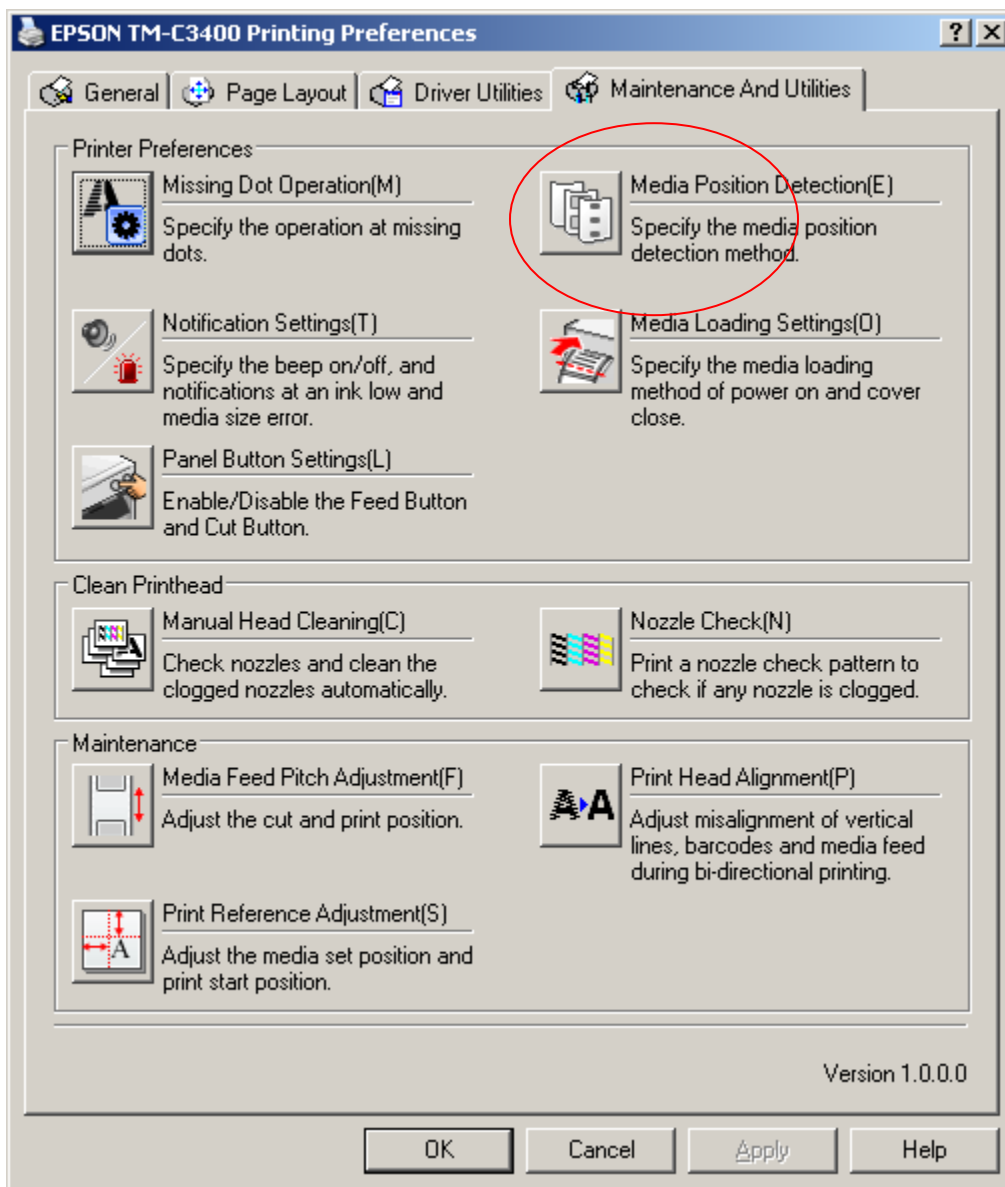

4. Select your preferred method.
5. Click OK.

