

# Printing at Different Resolutions

for

**Epson® SecurColor™ Inkjet Printer  
(TM-C3400)**




By: Ernie Villarreal  
Kelly Ng

Rev. C

To print using 360x180

1. Select the “Media Type” as “Plain Media” or “Plain Media Label”.
2. The “Print Quality” slider should be set to “Speed”.
3. In the “Current Settings” window you will see “Print Quality” set for Level 1, which is 360x180.


**\* To increase the resolution, you can move the slider to "Quality" for 360 x 360.**

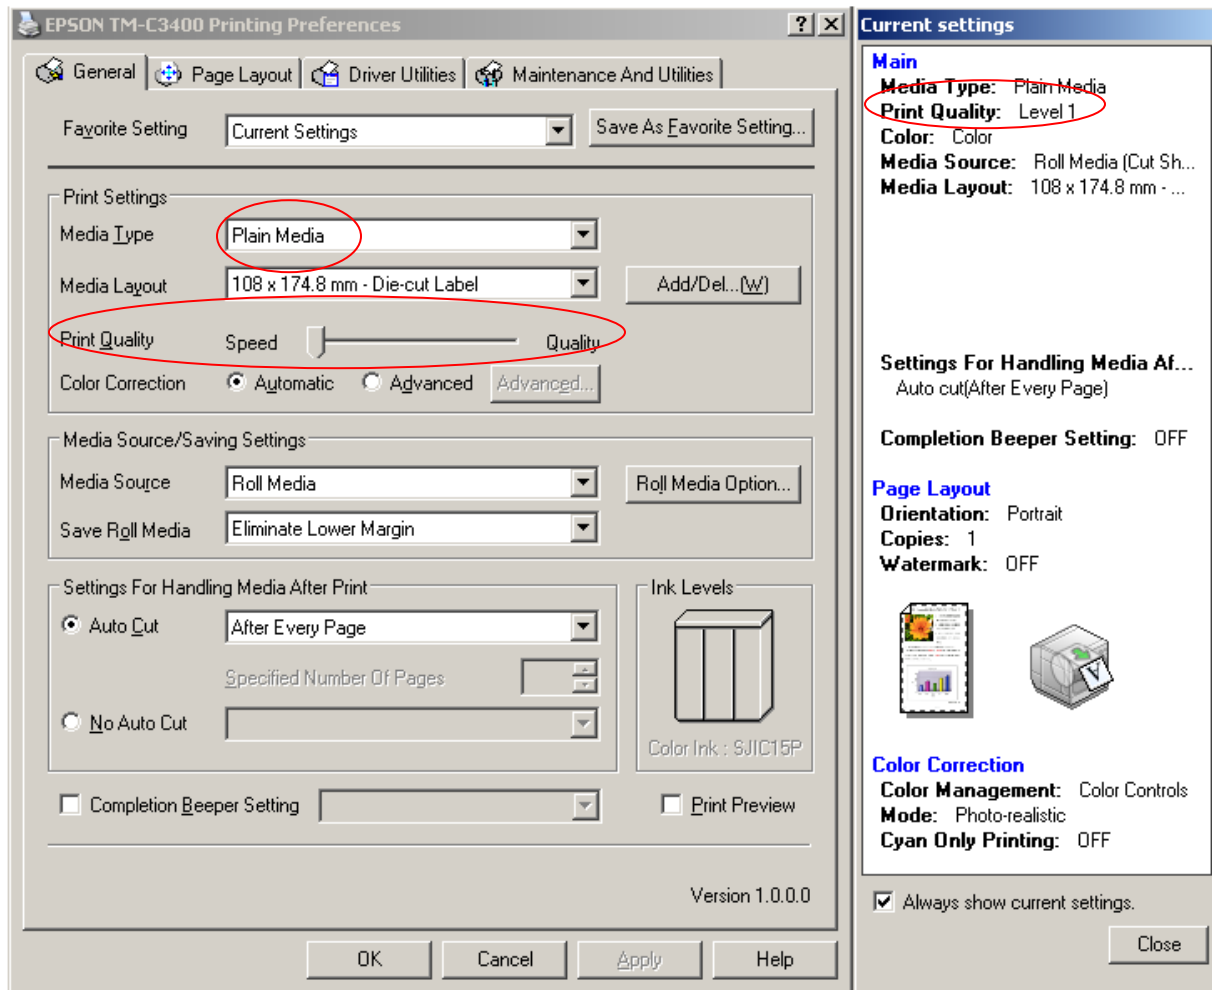

To print using 360x360

1. Select the any **other** media besides “Plain Media” or “Plain Media Label”.
2. The “Print Quality” slider should be set to “Speed”.
3. In the “Current Settings” window you will see “Print Quality” set for Level 2, which is 360x360.

**\*To increase the resolution, you can move the slider to "Quality" for 720 x 360.**

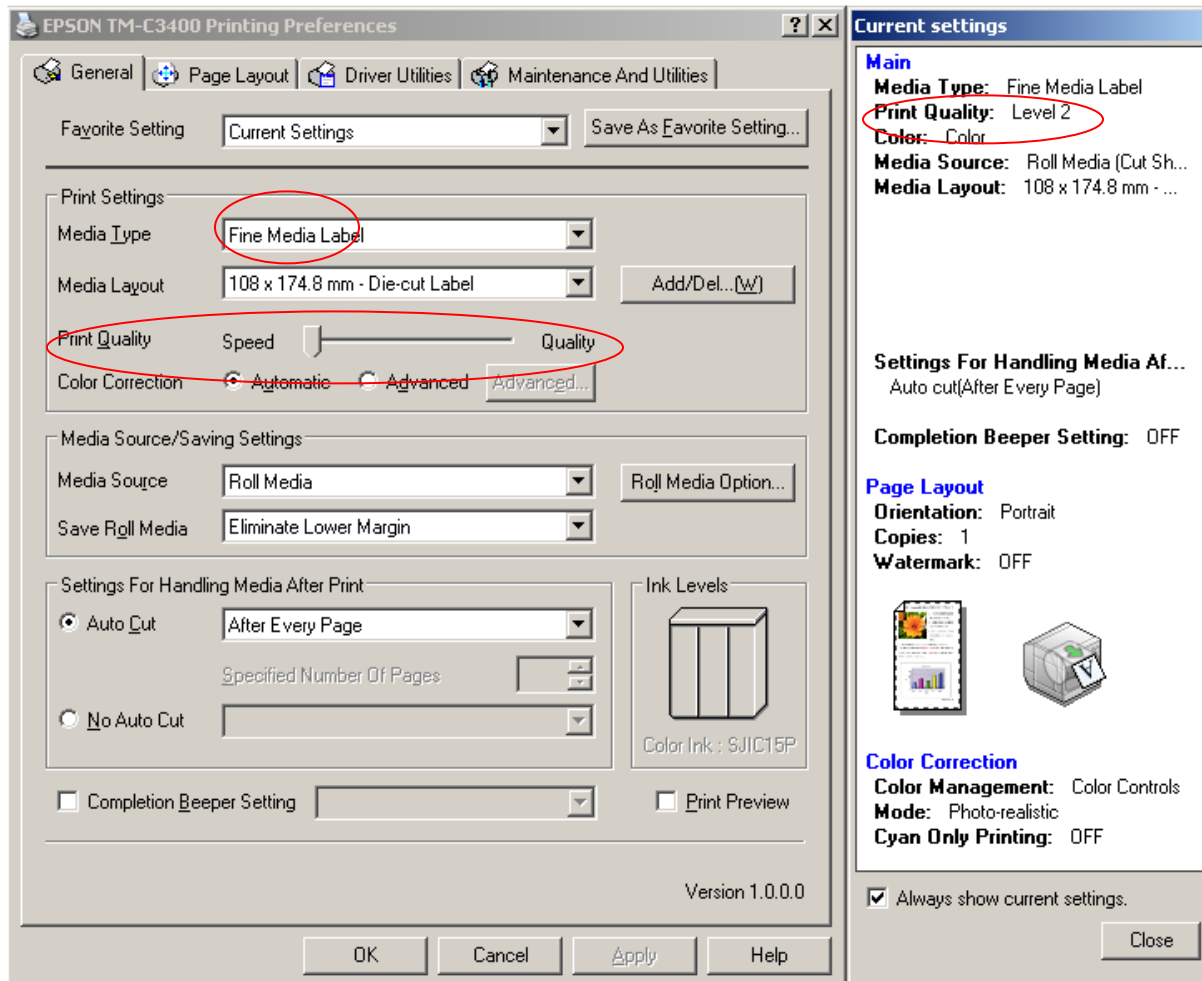

To print using 720x360

4. Select any **other** media besides “Plain Media” or “Plain Media Label”.
5. The “Print Quality” slider should be set to “Quality”.
6. In the “Current Settings” window you will see “Print Quality” set for Level 3, which is 720x360.

