

Chit and Receipt Printing

About this Guide

This guide consists of three sections:

- **Overview** – A detailed description of what this function is.
- **How to configure Chit and Receipt Printing** – A procedure that can be followed to configure this.
- **Appendix – POS/KDS Routing Considerations**

This guide is relevant for:

KDS FW: **v2.50 and above**

KDS Utility (Windows): **v2.5.0.0 and above**

Overview

When enabled, this function allows the Master or POS attached printer to print an incoming chit or receipt.

Kitchen Chit	

Register#:	01
Order#:	0032
DATE:	2017/6/30
TIME:	1:46 PM
SERVER:	Stephanie Smith
TABLE:	01
Qty	Description
1	Classic Hamburger
	Onions
	Lettuce
	Mustard
1	Cheesburger
	Extra Ketchup
	Extra Onions
1	Veggie Burger
	Pickles
	Extra Tomatoes
	Extra Onions
	Extra Lettuce
1	Chicken Sandwich
	Pickles
	Mayo
	Tomatoes

Figure 0.1 – Sample Kitchen Chit

How to Configure Chit and Receipt Printing

This procedure assumes that you already have a Multi-Station KDS setup as described in the Epson KDS Multi-Station Quick Start Guide. However, these instructions can be referenced to enable incoming chit and receipt printing in any Epson KDS.

Step 1: Enable Print Chit Function

1. Select **Devices**.
2. Choose **Device 1 (POS Attached printer.)**
3. Enable **“Print Chit”** Function
4. **Apply KDS Settings**.

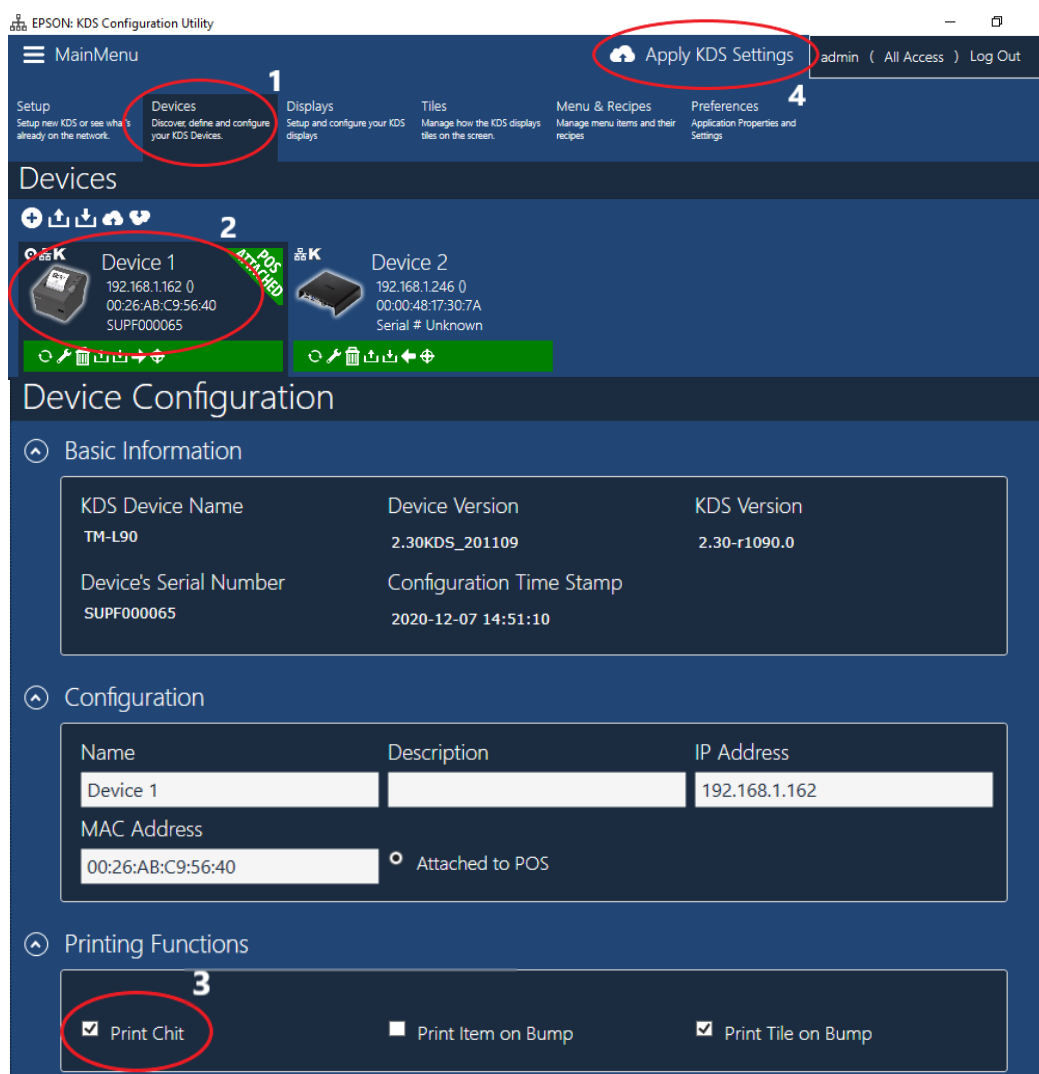


Figure 1.1 – Enabling Print Chit Function

Appendix – POS/KDS Routing Considerations

Some considerations dependent on if you are POS Menu Routing vs KDS Menu Routing.

KDS Menu Routing – The print job is directed to the Master, POS Attached printer so the “Print Chit” option will enable the incoming receipt/chit to print immediately when it is sent.

POS Menu Routing – The print jobs are not directed to the Master, POS Attached printer. They are directed to the prep stations. Enabling the “Print Chit” option on the Master, POS Attached printer will print all print jobs directed to the prep station.