

## Tile Arrangement

### About this Guide

This guide consists of 2 sections:

- **Overview** – A description on how Tiles within the KDS can be configured.
- **How to Configure** – A procedure that can be followed to configure this in a Single or Multi-Station KDS system. This guide assumes that you already have one of these KDS systems setup as described in the Epson KDS Quick Start Guides.

This guide is relevant for:

KDS FW: **v2.30 and above**

KDS Utility (Windows): **v2.3.1.0 and above**

## Overview

Orders are displayed in Tiles on the KDS screen and the **Tile Arrangement** can be configured for each display in the system, with the following (row x columns) options:

- 1x4
- 1x5
- 1x6
- 1x7
- 2x4
- 2x5
- 2x6
- 2x7
- 3x4
- 3x5
- 3x6
- 3x7

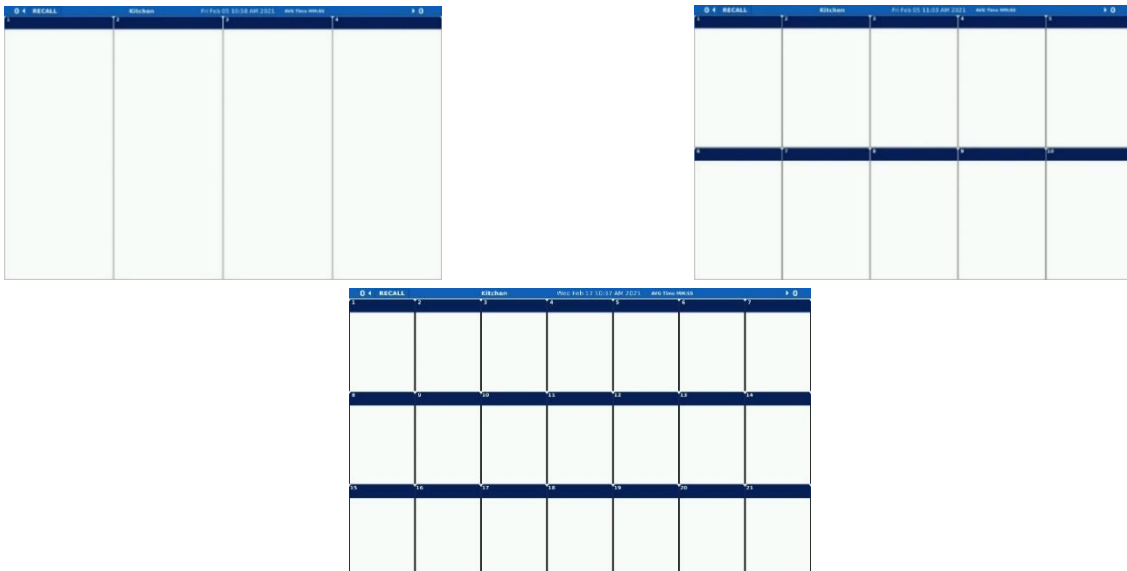


Figure 0.1 – 1x4, 2x5 and 3x7 Tile Arrangement

# How to Configure a Tile Arrangement

## Step 1:

1. Select **Displays**.
2. Choose the **Display** you want to configure.
3. Select **Tile Arrangement**.
4. Apply **KDS Settings**.

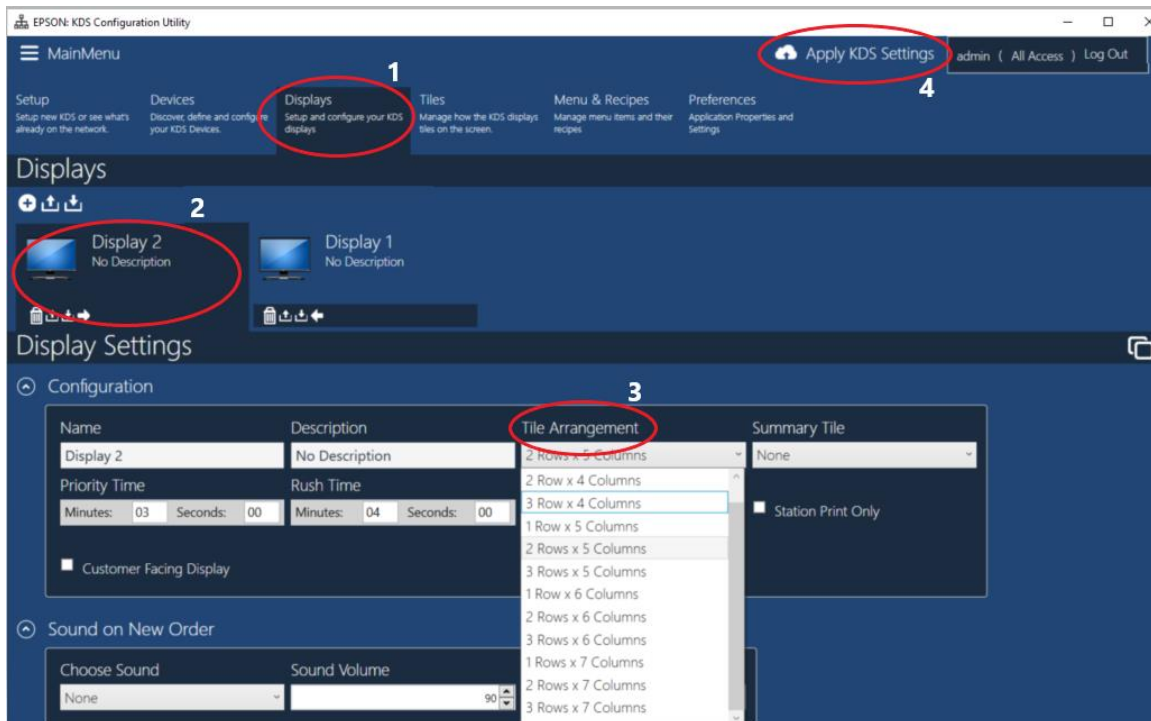


Figure 1.1 – Configuring a Tile Arrangement

The display will be restarted with the selected tile arrangement.