

Time on KDS

About this Guide

This guide consists of one section:

- Overview
- **How to Configure Time on KDS** A procedure that can be followed to configure the KDS system time.
- **Appendix** Options for time configuration.

This guide is relevant for:

KDS FW: v2.50 and above

KDS Utility (Windows): v2.5.0.0 and above

Overview

The time is shown at the top of each KDS display and can be configured.

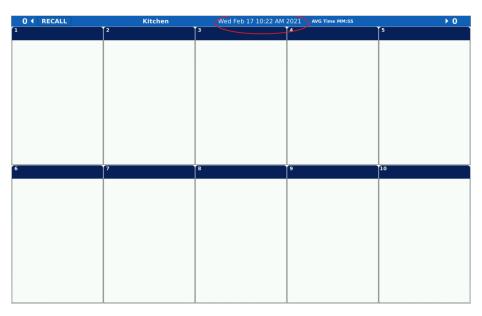


Figure 0.1 – Kitchen Display Showing the date and time

How to Configure

This procedure sets the current KDS time to that of the PC that is running the Configuration Utility.

Step 1: Configuring Time Settings

- 1. Select **Setup**.
- 2. Select Site Wide Settings.
- 3. In Time Setting Actions, click "Set Current KDS Time".
- 4. Apply KDS Settings.

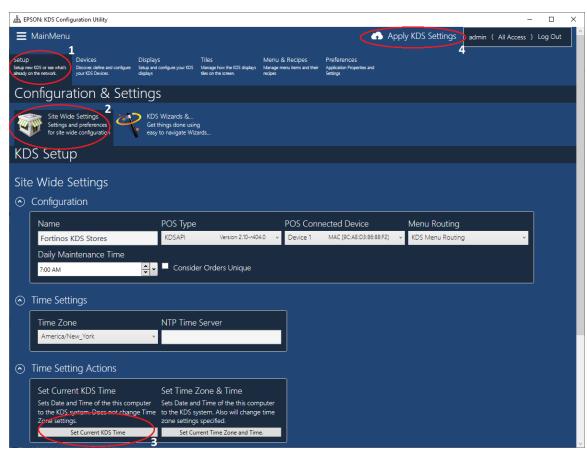


Figure 1.1 – Configuring Time Settings




Appendix

Time Settings

Time Zone: The system support time zone settings. Choose your time zone and click "Set Time & Time Zone setting" in the Main Menu. This will update the master device (If selected) to the new time zone settings and the current local time.

NTP Time Server: Specifies NTP Time Server. This setting must be applied by clicking "Set Time & Time Zone Settings" in the Main Menu.

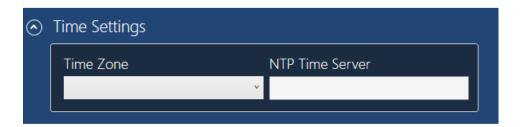

Time Setting Actions



Set Current KDS Time: Sets the date and time for this computer to the KDS system. Does not change the time zone settings.

Set Time Zone & Time: Sets the date and time for this computer to the KDS system. It will also change the specified time zone settings.

