

## Sound Devices

### About this Guide

This guide consists of two sections:

- **Overview** – A brief description of what Sound Devices are in a TrueOrder™ Kitchen Display System (KDS).
- **How-to Configure Sound Devices** – A procedure that can be followed to configure this in a Single-Station KDS Setup.

## Overview


USB to 3.5mm audio adapters or USB speakers can be plugged directly into a TrueOrder KDS device to allow for sound notifications when new orders arrive. Several different sounds are pre-installed and can be configured from the configuration application.




**Note:** An all-in-one device will typically have speakers built in that could also be used.


# How to Configure Sound Devices

This guide assumes that you already have a Single-Station KDS system setup as described in the TrueOrder KDS Single-Station Quick Start Guide.

1. Click **Layout** header.
2. Click **Grids**.
3. Click drop down menu icon  to edit Kitchen grid.

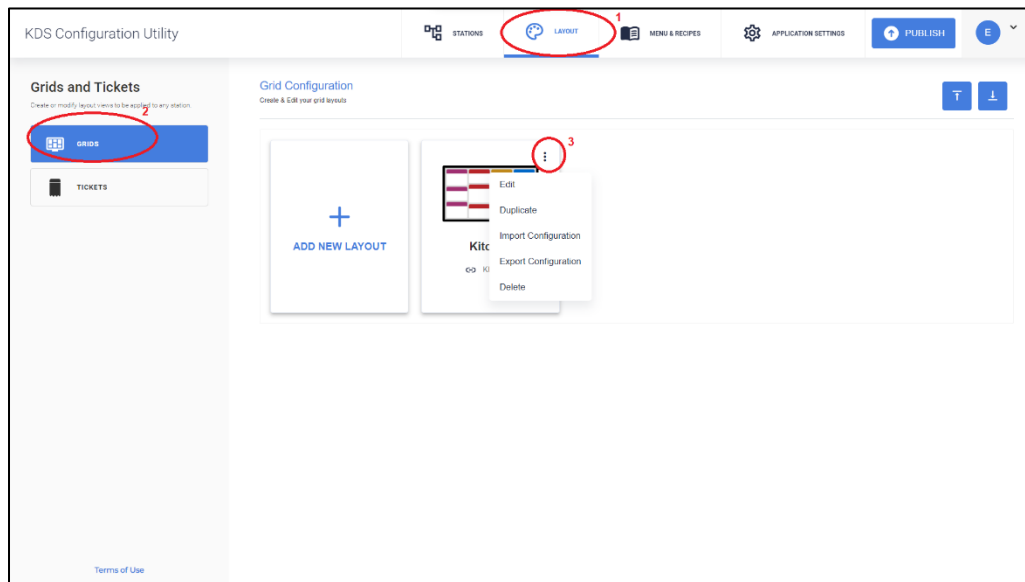

4. Scroll down to the **ACTIONS** configuration.
5. Choose **New Order Sound** from the list.
6. Choose **Sound Volume**.

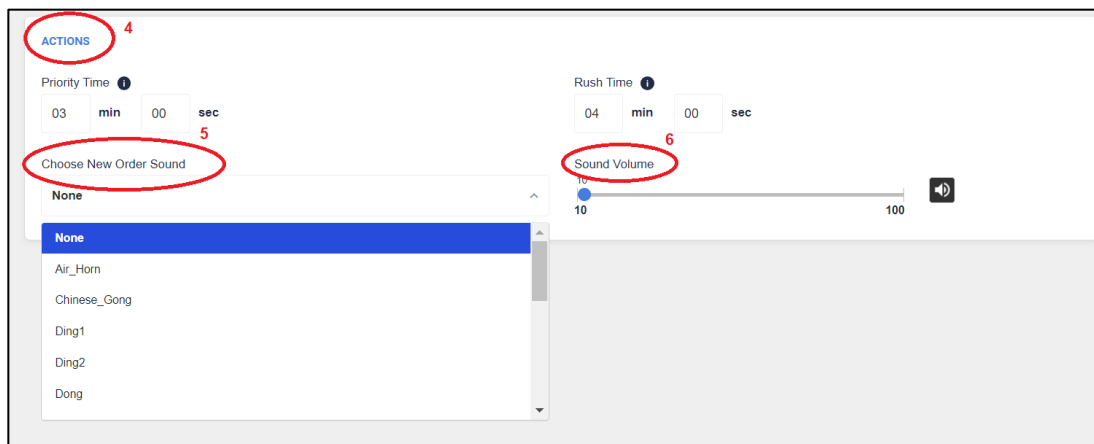

- KDS Configuration Utility

[STATIONS](#) [LAYOUT](#) [ITEMS & RECIPES](#) [APPLICATION SETTINGS](#) [PUBLISH](#)

### Grids and Tickets

Create or modify ticket items to be added to your station.

**GRID**

TICKETS

All Grids < Edit Layout

When you save edit your grid.

[RESTORE] [LIVE PREVIEW] [SAVE]

#### CONFIGURATION

Name  
Kitchen

Description  
(Optional)

Grid Type  
☒ Flexible grid   
 ☐ Fixed grid   
 ☐ 2 Column grid

View Mode  
☒ Landscape   
 ☐ Portrait

Ticket Arrangement  
 4 Columns

Summary Ticket  
None

#### TICKET DESIGN

##### TICKET PREVIEW

New

001 Tot 1 - 01119 06:21  
Seat 0000

Priority

3 Chicken Sandwich

  - Pickles
  - Tomatoes
  - Extra Mayo
  - No onions

Recall

1 Coffee

No sugar

Kitchen	No description
Ticket 2	No description

+ ADD NEW

Terms of Use