

Sound Devices

About this Guide

This guide consists of two sections:

- **Overview** – A brief description of what Sound Devices are in a TrueOrder™ Kitchen Display System (KDS).
- **How-to Configure Sound Devices** – A procedure that can be followed to configure this in a Single-Station KDS Setup.

Overview

USB to 3.5mm audio adapters or USB speakers can be plugged directly into a TrueOrder KDS device to allow for sound notifications when new orders arrive. Several different sounds are pre-installed and can be configured from the configuration application.




Note: An all-in-one device will typically have speakers built in that could also be used.


How to Configure Sound Devices

This guide assumes that you already have a Single-Station KDS system setup as described in the TrueOrder KDS Single-Station Quick Start Guide.


1. Click **Layout** tab.
2. Click **Grids**.
3. Click drop down menu icon  to edit Kitchen grid.

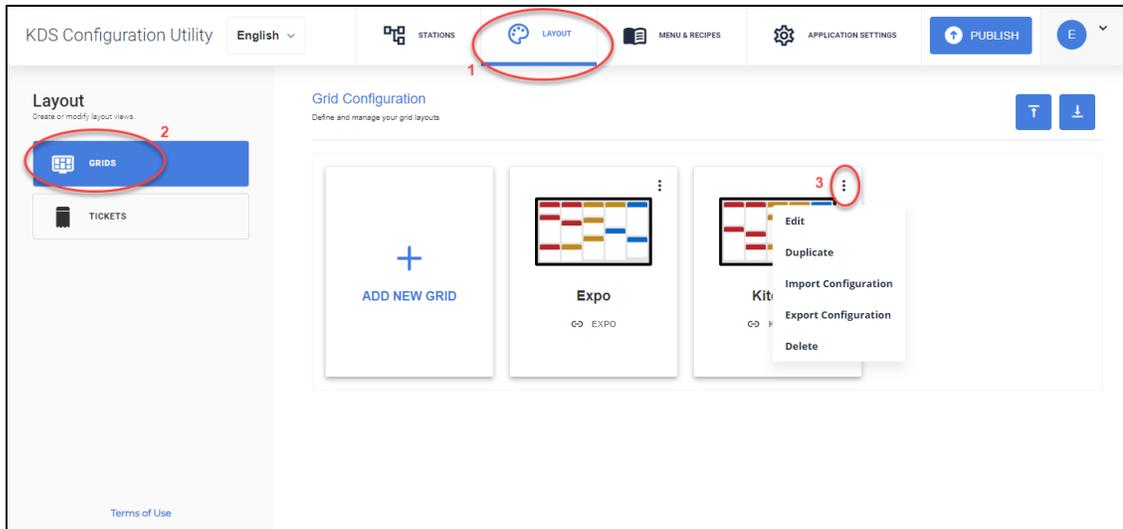

4. Scroll down to the bottom, click the pencil icon beside **ACTIONS**.

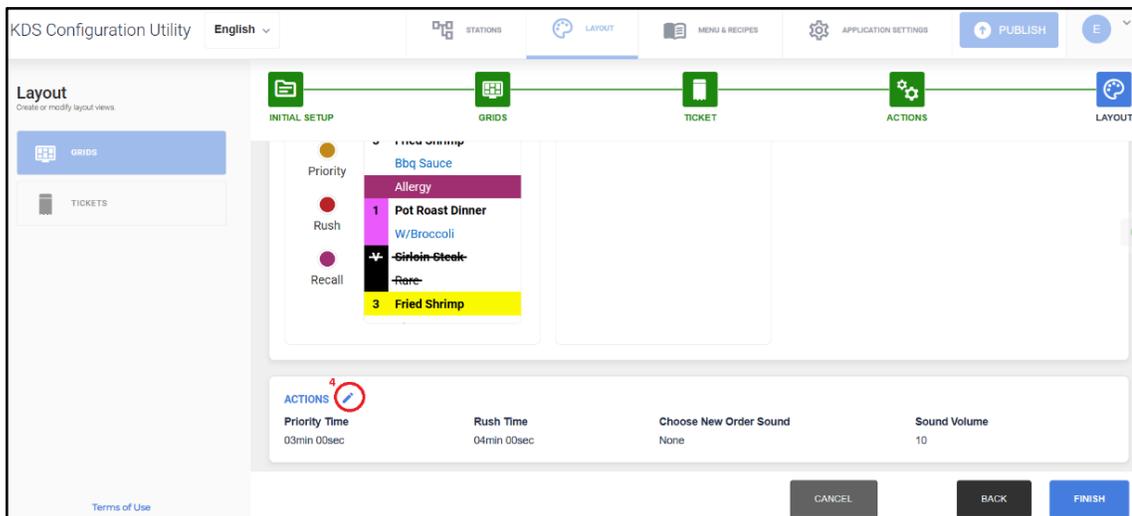

5. Choose **New Order Sound** from the list.
6. Adjust the **Sound Volume** to desired levels. Note that level 100 may mean different dB levels depending on the hardware being used e.g. built-in audio speakers vs. USB speakers.
7. Click **Finish**.

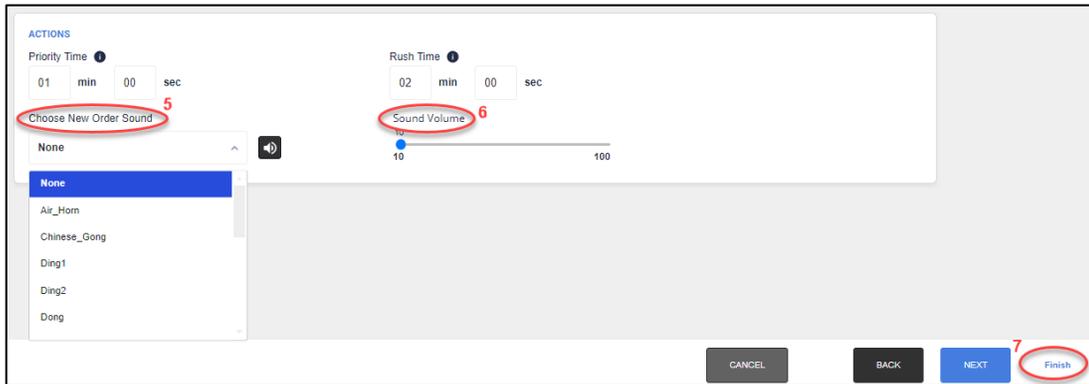

8. Click  to publish settings.