

Chit and Receipt Printing

About this Guide

This guide consists of three sections:

- **Overview** – A detailed description of what chit and receipt printing is in a TrueOrder™ Kitchen Display System (KDS).
- **How to configure Chit and Receipt Printing** – A procedure that can be followed to enable this functionality.
- **Appendix – POS/KDS Menu Routing Considerations**

Overview

When enabled, this function allows the Master or POS attached device to print an incoming chit or receipt on attached printer. This can only be done when the POS is sending print jobs to the KDS which is configured for a POS parser.




How to Configure Chit and Receipt Printing


This procedure assumes that you already have a Multi-Station KDS setup as described in the TrueOrder KDS Multi-Station Quick Start Guide. However, these instructions can be referenced to enable incoming chit and receipt printing in any TrueOrder KDS that uses a Parser.

1. Enable Print Chit Function

1. Select **Stations**
2. Click **Device Config.**
3. Click on the **POS Attached Device** to edit its printing functions.

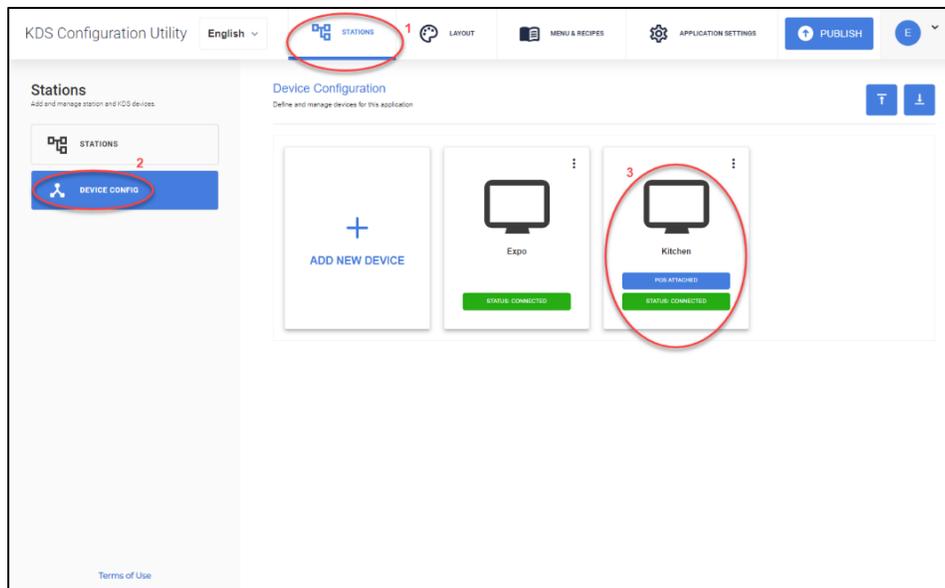

4. Enable **Print Chit**.
5. Click **Save**.
6. Click **Publish**.

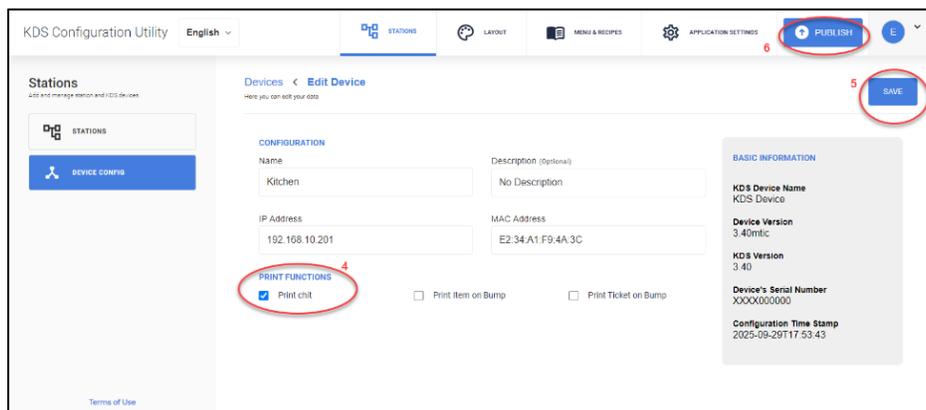

Appendix – POS/KDS Menu Routing Considerations

Some considerations depend on whether you are using POS Menu Routing **vs** KDS Menu Routing.

KDS Menu Routing – The print job is directed to the Master *aka* POS Connected Device so the “Print Chit” option will enable the incoming receipt/chit to print immediately when it is sent.

POS Menu Routing – The print jobs are not directed to the Master *aka* POS Connected Device, but to the prep stations instead. Enabling the “Print Chit” option on the POS Connected Device will print all print jobs directed to any prep stations.